



2025



Tracker Owner's Manual

Contents

Introduction	1
Keys, Doors, and Windows	3
Seats and Restraints	18
Storage	44
Instruments and Controls	48
Lighting	69
Infotainment System	74
Climate Controls	93
Driving and Operating	100
Vehicle Care	137
Service and Maintenance	183
Technical Data	187
Customer Information	192
Reporting Safety Defects	196
OnStar	198
Connected Services	203
Index	205

Introduction



The names, logos, emblems, slogans, vehicle model names, and vehicle body designs appearing in this manual including, but not limited to, GM, the GM logo, CHEVROLET, the CHEVROLET Emblem, and TRACKER are trademarks and/or service marks of General Motors LLC, its subsidiaries, affiliates, or licensors.

This manual describes features that may or may not be on the vehicle because of optional equipment that was not purchased on the vehicle, model variants, country specifications, features/applications that may not be available in your region, or changes subsequent to the printing of this owner's manual.

Refer to the purchase documentation relating to your specific vehicle to confirm the features.

Keep this manual in the vehicle for quick reference.


Using this Manual

- This manual describes all options and features available for this model. **Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant, country specifications, special equipment or accessories.**
- The table of contents at the beginning of this manual and within each chapter shows where the information is located.
- The index will enable you to search for specific information.
- The Owner's Manual uses the factory designations, which can be found in the chapter "Technical Data".
- Directional data, e.g. left or right, or front or back, always relate to the direction of travel.


- The vehicle display screens may not support your specific language.

Danger, Warning, and Caution

Danger

Text marked  **Danger** provides information on risk of fatal injury. Disregarding this information may endanger life.

Warning

Text marked  **Warning** provides information on risk of accident or injury. Disregarding this information may lead to injury.

Caution

Text marked **Caution** provides information on possible damage to the vehicle. Disregarding this information may lead to vehicle damage.



This symbol indicates a prohibited procedure which can cause personal injury or damages to vehicle.

We wish you many hours of pleasurable driving this vehicle.

Chevrolet

Keys, Doors, and Windows

Keys and Locks

Keys	3
Remote Keyless Entry (RKE) System	4
Remote Keyless Entry (RKE) System Operation (Keyless Access)	4
Door Locks	6
Power Door Locks	7
Automatic Door Locks	7
Safety Locks	8

Doors

Liftgate	8
----------------	---

Vehicle Security

Vehicle Security	9
Vehicle Alarm System	9
Immobilizer Operation (Key Access)	10
Immobilizer Operation (Keyless Access)	11

Exterior Mirrors

Convex Mirrors	12
Power Mirrors	12
Folding Mirrors	12

Interior Mirrors

Interior Rearview Mirrors	13
Manual Rearview Mirror	13
Automatic Dimming Rearview Mirror	13

Windows

Windows	14
Power Windows	14
Heated Rear Window	16
Sun Visors	16

Roof

Sunroof (If equipped)	16
-----------------------------	----

Keys and Locks

Keys

Replacement Keys

If you need a spare key and the respective activation codes, they can be requested through a Chevrolet dealership.

Keyless Access



Remove the key by pressing the button on the side of the RKE transmitter near the bottom and pull the key out. Never pull the key out without pressing the button.



If equipped, this key unlocks the driver door, starts the engine, and opens the trunk.

Remote Keyless Entry (RKE) System

If there is a decrease in the Remote Keyless Entry (RKE) operating range:

- Check the distance. The transmitter may be too far from the vehicle.
- Check the location. Other vehicles or objects may be blocking the signal.
- Check the transmitter's battery. See "Battery Replacement" later in this section.

- If the transmitter is still not working correctly, see a Chevrolet dealer.


Remote Keyless Entry (RKE) System Operation (Keyless Access)

The RKE transmitter may work up to 30 m away from the vehicle.


Other conditions can affect the performance of the transmitter. See *Remote Keyless Entry (RKE) System* ⇨ 4.






The following may be available:

: Press to lock all doors. The turn signal indicators may flash and/or the horn may sound on the second press to indicate locking. See *Vehicle Personalization* ⇨ 67.

Pressing  may also arm the theft-deterrent system. See *Vehicle Alarm System* ⇨ 9.

If equipped, press and hold  until the windows fully close. Windows will not operate unless remote window operation is enabled. See *Vehicle Personalization* ⇨ 67.

: Press to unlock the door. Pressing  may also disarm the theft-deterrent system. See *Vehicle Alarm System* ⇨ 9.

If equipped, press and hold  until the windows fully open. Windows will not operate unless remote window operation is enabled. See *Vehicle Personalization* ⇨ 67.


Keyless Access Operation

With the Keyless Access system, you can lock and unlock the doors and access the liftgate without removing the RKE transmitter from your pocket, purse, briefcase, etc. The RKE

transmitter should be within 1 m of the door or liftgate being opened. If equipped, there will be buttons on the outside driver door handles.

Keyless Unlocking/Locking from the Driver Door

When the doors are locked and the RKE transmitter is within 1 m of the driver door handle, pressing the lock/unlock button on the driver door handle will unlock the door.

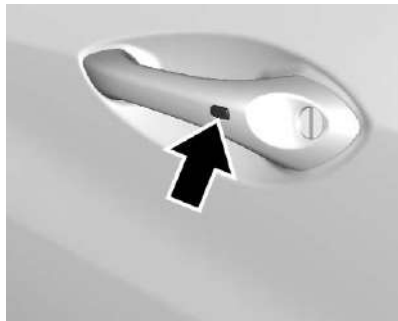

Driver Shown, Passenger Similar

Remote Left in Vehicle Alert

When the vehicle is turned off and an RKE transmitter is left in the vehicle, the horn will chirp three times after all doors are closed. To turn on or off, see *Vehicle Personalization* ⇨ 67.

Keyless liftgate Opening

When the doors are locked, press the touch pad on the liftgate handle to open the liftgate if the RKE transmitter is within 1 m.

Programming Transmitters to the Vehicle


Only RKE transmitters programmed to the vehicle will work. If a transmitter is lost or stolen, a replacement can be purchased and programmed through your dealer. The vehicle can be reprogrammed so that lost or stolen transmitters no longer work. Each vehicle can have up to eight transmitters matched to it.

Starting the Vehicle with a Low Transmitter Battery Or Spare (Rigid) Key

When the vehicle is started, if the transmitter battery is weak, the DIC may display NO REMOTE DETECTED or NO REMOTE KEY WAS DETECTED PLACE KEY IN TRANSMITTER POCKET

THEN START YOUR VEHICLE. The REPLACE BATTERY IN REMOTE KEY message may also be displayed at this time.

To start the vehicle:

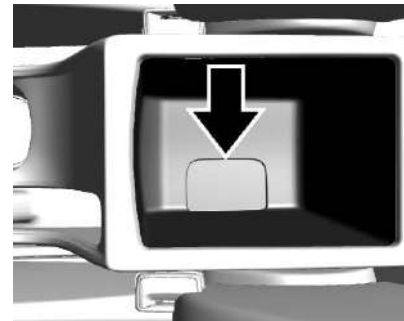

1. Place the transmitter in the center console storage.
2. With the vehicle in P (Park) or N (Neutral), press the brake pedal and ENGINE START/STOP.

Replace the transmitter battery as soon as possible.

Battery Replacement

Replace the battery if the REPLACE BATTERY IN REMOTE KEY message displays in the DIC.

Caution

When replacing the battery, do not touch any of the circuitry on the transmitter. Static from your body could damage the transmitter.

The battery is not rechargeable. To replace the battery:




1. Press the button on the side of the transmitter and pull the key out.



2. Separate the two halves of the transmitter using a flat tool inserted into the area near the key slot.



3. Remove the battery by pushing on the battery and sliding it toward the bottom of the transmitter.
4. Insert the new battery, positive side facing the back cover. Push the battery down until it is held in place. Replace with a CR2032 or equivalent battery.
5. Snap the battery cover back on to the transmitter.

Door Locks
 **Warning**

Unlocked doors can be dangerous.



- Passengers, especially children, can easily open the doors and fall out of a moving vehicle. The doors can be unlocked and opened while the vehicle is moving. The chance of being thrown out of the vehicle in a crash is increased if the doors are not locked. So, all passengers should wear seat belts properly and the doors should be locked whenever the vehicle is driven.

(Continued)


Warning (Continued)

- Young children who get into unlocked vehicles may be unable to get out. A child can be overcome by extreme heat and can suffer permanent injuries or even death from heat stroke. Always lock the vehicle whenever leaving it.
- Outsiders can easily enter through an unlocked door when you slow down or stop the vehicle. Locking the doors can help prevent this from happening.

To lock or unlock the doors from the outside:

- Press  or  on the Remote Keyless Entry (RKE) transmitter. See *Remote Keyless Entry (RKE) System Operation (Keyless Access)* ⇨ 4.
- Use the key in the driver door.

To lock or unlock the doors from the inside:


- Press  on the power door lock switch.
- Pull the door handle to unlock the door.

Keyless Access

If equipped, the RKE transmitter must be within 1 m of the liftgate or door being opened. Press the button on the door handle to open. See *Remote Keyless Entry (RKE) System Operation (Keyless Access)* ⇨ 4.

Power Door Locks




 : Press to lock the doors. The indicator light will come on when the door is locked. To unlock the door, press the switch again.

Automatic Door Locks

Automatic Doors Locking (Automatic Transmission)

The doors will lock automatically when all doors are closed and the vehicle speed becomes faster than 13 km/h (8 mph).

To unlock the doors:

- Press  on the power door lock switch.
- Shift into P (Park).

Automatic door locking and unlocking can be configured. See *Vehicle Personalization* ⇨ 67.

Automatic Doors Locking (Manual Transmission - If equipped)

This security feature automatically locks all doors as soon as the vehicle reaches the speed of 15 km/h.

Settings can be changed in the Infotainment menu. See *Vehicle Personalization* ⇨ 67

⚠ Danger

Do not unlock the door while driving. If a passenger opens the door by accident, it can result in serious injury or death in case of an unexpected accident.

The vehicle will unlock the doors automatically when the key is removed from the ignition switch.

Safety Locks**⚠ Danger**

Use the child locks whenever children are occupying the rear seats.

To activate the child lock, push the lever to the arrow direction. With the child lock activated, the doors cannot be opened from the inside.

To deactivate the child lock, push the lever to the opposite direction. With the child lock deactivated, the doors can be opened from the inside.

**Doors
Liftgate****⚠ Warning**

Exhaust gases can enter the vehicle if it is driven with the liftgate or trunk/hatch open, or with any objects that pass through the seal between the body and the trunk/hatch or liftgate. Engine

(Continued)

Warning (Continued)


exhaust contains carbon monoxide (CO) which cannot be seen or smelled. It can cause unconsciousness and even death.

If the vehicle must be driven with the liftgate or trunk/hatch open:



- Close all of the windows.
- Fully open the air outlets on or under the instrument panel.
- Adjust the climate control system to a setting that brings in only outside air and set the fan speed to the highest setting. See “Climate Control Systems” in the Index.
- If the vehicle is equipped with a power liftgate, disable the power liftgate function.

Opening**Caution**

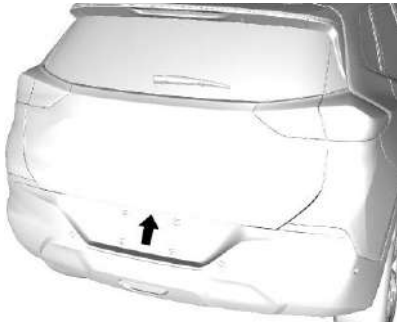To avoid damage to the liftgate or liftgate glass, make sure the area above and behind the liftgate is clear before opening it.



To open the liftgate, the vehicle must be off and stopped, with the shift lever in P (Park), if equipped.


Press  on the power door lock switch or press  on the RKE transmitter twice to unlock all doors. Press the touch pad on the underside of the liftgate handle and lift up.

Use the pull cup to lower and close the liftgate. Do not press the touch pad while closing the liftgate. This will cause the liftgate to be unlatched.

The liftgate can be opened when locked if the RKE transmitter is within 1 m of the touch pad. See *Remote Keyless Entry (RKE) System Operation (Keyless Access)* ⇨ 4.

The liftgate has an electric latch. If the battery is disconnected or has low voltage, the liftgate will not open. The liftgate will resume operation when the battery is reconnected and charged.

Opening the Trunk in an Emergency

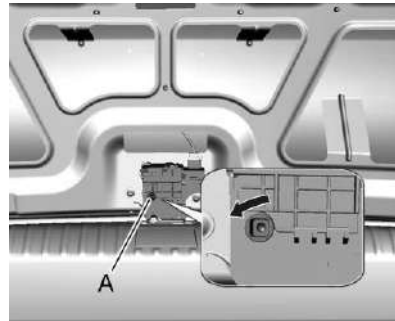

Perform the following operations:

1. Unlock the rear seatback and fully fold it, see *Rear Seats* ⇨ 22.
2. From the inside of the load compartment, with the aid of a proper tool, remove the small cover, turn the device (A), close to the lock, counterclockwise.

Closing

Danger

Make sure that your hands and any other body parts, as well as those of other persons are completely away from the decklid closure area.


To close the liftgate, push it down, so that it can latch securely.

Vehicle Security

This vehicle has theft-deterrent features; however, they do not make the vehicle impossible to steal.

Vehicle Alarm System

This vehicle has an anti-theft alarm system.

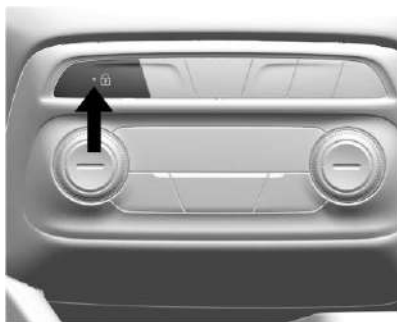


The indicator light, integrated in the power door locks switch, indicates the status of the system:


illuminates: test, arming delay.

flashes slowly: system is armed.

Arming the Alarm System

1. Turn off the vehicle.
2. Lock the vehicle in either ways:
 - Use the RKE transmitter.
 - Use the Keyless Access system, if equipped.

3. After 30 seconds the alarm system will arm, and the indicator light will begin to slowly flash indicating the alarm system is operating. Pressing  on the RKE transmitter a second time will bypass the 30-second delay and immediately arm the alarm system.

If the driver door is opened without first unlocking with the RKE transmitter, the horn will chirp and the lights will flash to indicate pre-alarm. If the vehicle is not started, or the door is not unlocked by pressing  on the RKE transmitter during the 10-second pre-alarm, the alarm will be activated.

If a door, the hood, or the trunk is opened without first disarming the system, the turn signals will flash and the horn will sound for about 30 seconds. The alarm system will then re-arm to monitor for the next unauthorized event.

The vehicle alarm system will not arm if the doors are locked with the key.

Disarming the Alarm System

To disarm the alarm system or turn off the alarm if it has been activated:

- Press  on the RKE transmitter.


- Unlock the vehicle using the Keyless Access system, if equipped.
- Start the vehicle.

To avoid setting off the alarm by accident:

- Lock the vehicle after all occupants have left the vehicle and all doors are closed.
- Always unlock a door with the RKE transmitter or use the Keyless Access system, if equipped.

Unlocking the driver door with the key will not disarm the system or turn off the alarm.

How to Detect a Tamper Condition

If  is pressed on the RKE transmitter and the horn chirps and the lights flash three times, an alarm occurred previously while the alarm system was armed.

Immobilizer Operation (Key Access)

This vehicle has a passive theft-deterrent system.

The system does not have to be manually armed or disarmed.

The vehicle is automatically immobilized when the key is removed from the ignition.

The system is automatically disarmed when the vehicle is started with the correct key. The key uses a transponder that matches an immobilizer control unit in the vehicle and automatically disarms the system. Only an authorized key starts the vehicle. The vehicle may not start if the key is damaged.



The immobilizer light in the instrument cluster comes on if there is a problem with arming or disarming the theft-deterrent system.

When trying to start the vehicle, the security light comes on briefly when the ignition is turned on.

If the engine does not start and the security light stays on, there is a problem with the system. Turn the ignition off and try again.

If the engine still does not start, and the key appears to be undamaged or the light continues to stay on, try another ignition key.

If the engine does not start with the other key, the vehicle needs service. If the vehicle does start, the first key may be damaged. See your dealer who can service the theft-deterrent system and have a new key made.

Do not leave the key or device that disarms or deactivates the theft-deterrent system in the vehicle.

Immobilizer Operation (Keyless Access)

This vehicle has a passive theft-deterrent system.

The system does not have to be manually armed or disarmed.


The vehicle is automatically immobilized when the vehicle is turned off.


The immobilization system is disarmed when the vehicle is started or the ignition is in ACC/ACCESSORY and a valid transmitter is present in the vehicle.



The Immobilizer light, in the instrument cluster, comes on if there is a problem with arming or disarming the theft-deterrent system.


The system has one or more RKE transmitters matched to an immobilizer control unit in your vehicle. Only a correctly matched RKE transmitter will start the vehicle.

If the control indicator  flashes or lights up when the ignition is on, there is a system fault and the engine cannot be started. Turn off the ignition, and then, try to start again.

If the control indicator  continues to flash or stay on, try to start the engine using the spare key and seek assistance of a Chevrolet Dealer or Authorized Repair Shop.

Exterior Mirrors

Convex Mirrors



Warning

A convex mirror can make things, like other vehicles, look farther away than they really are. If you cut too sharply into the adjacent lane, you could hit a vehicle that is driving next to you. Check the inside mirror or glance over your shoulder before changing lanes.

The side mirrors are convex shaped so more can be seen from the driver's seat.


Power Mirrors



The control for the power mirrors are located on the door trim beside the driver.

Select the left or the right exterior mirror with the selector switch and adjust with the four-way switch.

Folding Mirrors

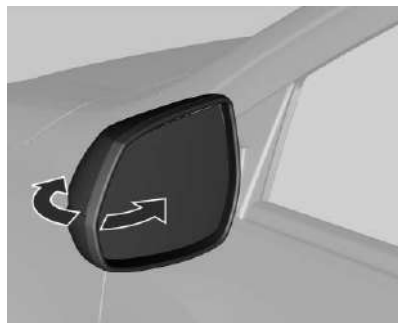

For pedestrian safety, the exterior mirrors will swing out of their normal mounting position if they are struck with sufficient force. Reposition the mirror by applying slight pressure to the mirror housing. This feature is also useful to reduce the total width of the vehicle to prevent damages when the vehicle is parked. Push the mirror back into the functional position before driving.

⚠ Danger


Always keep your mirrors properly adjusted, and use them while driving to increase your visibility of objects and other vehicles around you. Do not drive while either outside rearview mirror is folded back.

The surface of the mirror lenses is convex to increase the driver's field of view, and, due to that, the objects reflected in the mirror are closer than they appear. Do not underestimate the real distance of the vehicles reflected in the mirrors. Also, always check the rear guard on the inner rearview mirror or glance over your shoulders before changing lanes.

Interior Mirrors**Interior Rearview Mirrors**

Adjust the rearview mirror for a clear view of the area behind the vehicle.

Do not spray glass cleaner directly on the mirror. Use a soft towel dampened with water.

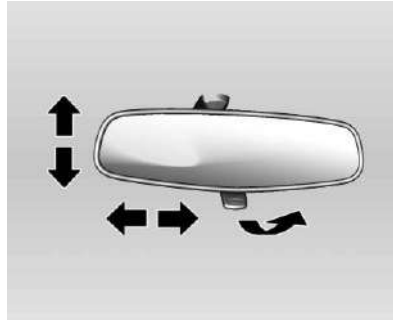Manual Rearview Mirror

The adjustment is performed by tilting the mirror to a suitable position.

If equipped, adjust the lever below the mirror to reduce dazzle.

⚠ Warning

Your view through the mirror may lose some clarity when it is adjusted for anti-dazzle mode.

(Continued)

Warning (Continued)

Take special care with using your inner rearview mirror when it is adjusted for anti-dazzle mode.

The inner rearview mirror should be adjusted before driving with the sun visor unfolded to avoid the contact between them. This occurs because the inner rearview mirror is bi-articulated.

Failure to ensure a clear rearview to drive may result in a collision, causing damage to your or the other's vehicle and/or personal injury.

Automatic Dimming Rearview Mirror

If equipped, automatic dimming reduces the glare of headlamps from behind. The dimming feature comes on when the vehicle is started.

Windows

Warning

Never leave a child, a helpless adult, or a pet alone in a vehicle, especially with the windows closed in warm or hot weather. They can be overcome by the extreme heat and suffer permanent injuries or even death from heat stroke.



The vehicle aerodynamics are designed to improve fuel economy performance. This may result in a pulsing sound when either rear

window is down and the front windows are up. To reduce the sound, open either a front window or the sunroof, if equipped.

Power Windows

Danger

Take care when operating the power windows. Risk of injury, particularly to children. If there are children on the rear seats, switch on the child safety system for the electric windows. Keep a close watch on the windows when closing them. Ensure that nothing becomes trapped in them as they move.

Power windows work when the ignition is on, in ACC/ACCESSORY, or in Retained Accessory Power (RAP). See *Retained Accessory Power (RAP)* ⇨ 112.

After switching off the ignition, window operation is disabled when any door is opened.



Operate the switch for the respective window by pushing to open or pulling to close.

Danger

Body parts outside the vehicle can be struck by passing objects. Keep all parts of the body inside vehicle.

Children can operate and become entrapped in power windows.

Do not leave your keys or unattended children in your car.

Serious injury or death can occur from misuse of power windows.

Operation

You may operate the power windows by using the power window switches on each door panel.

To open the window, press down on the switch.

To close the window, lift up on the switch.

Release the switch when the window reaches the desired position.

Express Window Operation

Windows with an express-down or express-up feature allow the window to be lowered or raised without holding the switch. All the windows have express-down and express-up. Pull a window switch up or push it down all the way, release it, and the window goes up or down automatically. Stop the window by pushing or pulling the switch in the same direction a second time or briefly operating the switch to the first position in either direction.

Window Electronic Programming

Programming the power windows may be necessary if the vehicle battery has been disconnected or discharged. To program the window:

1. Close all doors.

2. Turn the ignition switch on.
3. Partially open the window to be programmed, then close it and continue to pull the switch briefly after the window has fully closed.
4. Open the window and continue to press the switch briefly after the window has fully opened.
5. Repeat these steps for each window that need to be programmed.

Anti-pinch Function

If equipped, in case there is obstacle detection while the window is closed in express operation, the window will be opened automatically for safety.

Caution

Anti-pinch function may not operate after several uses. Do not operate the window switch with no purpose.

Express Window Anti-Pinch Override

In an emergency, the anti-pinch feature can be overridden in a supervised mode. Hold the window switch all the way up to the second


position. The window will rise for as long as the switch is held. In this mode, the window can still close on an object in its path. Use care when using the override mode.



Danger

If the appeal Anti-Pinch is annulled the window may close on an object in its course. Before to use the Anti-Pinch annulment, make sure that no person or object is obstructing the way of the window.

The misuse of power windows or annulment of Anti-Pinch could result in serious injury or death.

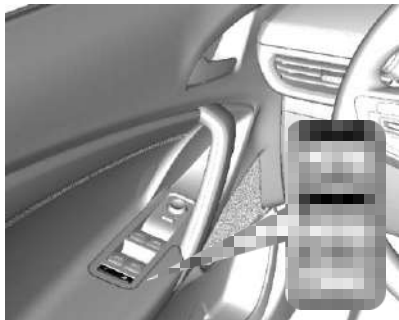Child Safety System For Rear Windows




Press the switch  to deactivate rear door power windows switch. To activate, press  again.

Overload

If the windows are repeatedly operated within short intervals, the windows operation is disabled for some time.

Heated Rear Window

Operated by pressing the  button.

Heating works with the engine running and is switched off automatically after some time or by pressing the button again.

Caution

Do not use sharp instruments or abrasive window cleaners on your vehicle's rear window.

Do not scratch or damage the demister wires when you clean or work around the rear window.

Sun Visors



The sun visors can be folded down or swivelled to the side to prevent dazzling.

Both sun visors have integral mirrors. The driver's mirror should be closed when driving.

Danger

Do not place the sun visor in such a manner that it blocks the visibility of the roadway, traffic or other objects.

Roof

Sunroof (If equipped)







1. Sunroof Switch


2. Sunshade Switch

If equipped, the sunroof only operates when the ignition is on or in ACC/ACCESSORY, or when Retained Accessory Power (RAP) is active. See *Retained Accessory Power (RAP)* ⇨ 112.



Sunroof Switch



Express-Open/Express-Close: To express-open the sunroof, fully press and release  (1). Press the switch again to stop it. To express-close the sunroof, fully press and release  (1). Press the switch again to stop it.

Open/Close (Manual Mode): To open the sunroof, press and hold  (1) until the sunroof reaches the desired position. Press and hold  (1) to close it.

Vent: From the closed position, press  (1) to vent the sunroof.

Sunshade Switch

Express-Open/Express-Close: To express-open the sunshade, fully press and release  (2). To express-close the sunshade, fully press and release  (2). Press the switch again to stop it.

Open/Close: To open the sunshade, press and hold  (2) until the sunshade reaches the desired position. Press  (2) to close the sunshade.

When the sunroof is opened, an air deflector will automatically raise. The air deflector will retract when the sunroof is closed.


Automatic Reversal System

The sunroof has an automatic reversal system that is only active when the sunroof is operated in express-close mode.

If an object is in the path while express closing, the reversal system will detect an object, stop, and open the sunroof again.

If frost or other conditions prevent closing, override the feature by closing the sunroof in manual mode. To stop movement, release the switch.

In the event of closing difficulties like frost or other conditions, it is possible to override the reversal system. To override the reversal system, close in manual mode. To stop the movement, release the switch.

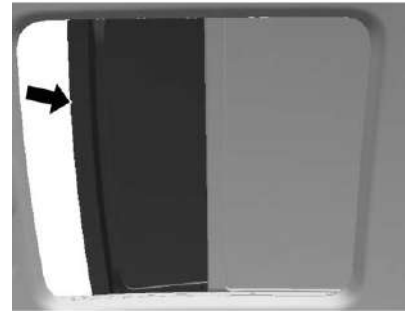

Dirt and debris may collect on the sunroof seal or in the track. This could cause an issue with sunroof operation or noise. It could also plug the water drainage system. Periodically open the sunroof and remove any obstacles or loose debris. Wipe the sunroof seal and roof sealing area using a clean cloth, mild soap, and water. Do not remove grease from the sunroof.

If water is seen dripping into the water drainage system, this is normal.

Seats and Restraints

Head Restraints

Head Restraints	18
-----------------------	----

Front Seats

Seat Position	19
Seat Adjustment	20
Reclining Seatbacks	21

Rear Seats

Rear Seats	22
------------------	----

Seat Belts

Seat Belts	23
How to Wear Seat Belts Properly	23
Lap-Shoulder Belt	25
Seat Belt Use During Pregnancy	27
Safety System Check	27
Seat Belt Care	28
Replacing Seat Belt System Parts after a Crash	28

Airbag System


Airbag System	28
Front Airbag System	30
Side Airbag System	31
Curtain Airbag System	32
Airbag On-Off Switch	33

Child Restraints

Child Restraint Systems	34
Child Restraint Installation Locations	36
ISOFIX Child Restraint Systems	39
Top Tether Child Restraint Systems	43

Head Restraints

Front Seats



Warning


With head restraints that are not installed and adjusted properly, there is a greater chance that occupants will suffer a neck/spinal injury in a crash. Do not drive until the head restraints for all occupants are installed and adjusted properly.

The vehicle's front seats have adjustable head restraints in the outboard seating positions.



Adjust the head restraint so that the top of the restraint is at the same height as the top of the occupant's head. This position reduces the chance of a neck injury in a crash.

The height of the head restraint can be adjusted.

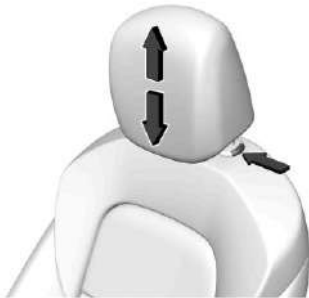


Pull the head restraint up to raise it. Try to move the head restraint to make sure that it is locked in place.

To lower the head restraint, press the button, located on the top of the seatback, and push the head restraint down. Try to move the head restraint after the button is released to make sure that it is locked in place.

Rear Seats

The vehicle's rear seats have adjustable head restraints.

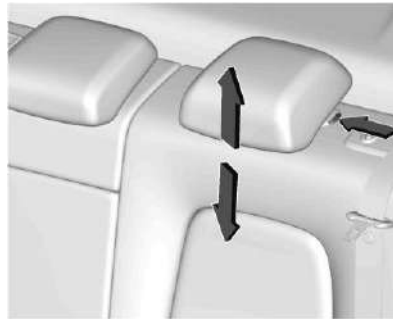

The height of the head restraint can be adjusted. Pull the head restraint up to raise it. Try to move the head restraint to make sure that it is locked in place.

To lower the head restraint, press the button, located on the top of the seatback, and push the head restraint down. Try to move the head restraint after the button is released to make sure that it is locked in place.

Front Seats Seat Position

⚠ Danger

Only drive with the seat correctly adjusted.



- Sit as far back against the backrest as possible. Adjust the distance between the seat and the pedals so that your legs are slightly angled when pressing the pedals.
- Sit with your shoulders as far back against the backrest as possible. Set the backrest angle so that you can easily reach the steering wheel with your arms slightly

bent. Maintain contact between your shoulders and the backrest when turning the steering wheel. Do not tilt the backrest too far back. We recommend a maximum angle of approximately 25°.

- Adjust the steering wheel. See *Steering Wheel Adjustment* ⇨ 49.
- Set the seat height high enough to have a clear field of vision on all sides and on all display instruments.
- Adjust the head restraint. See *Head Restraints* ⇨ 18.

Seat Adjustment

Danger

To allow the safe airbag deployment, do not sit nearer than 25 cm from the steering wheel.

Never locate objects of any size or shape under the front seats, as they may interfere with the moving mechanism, other parts of the seat frame or electrical components when available, reducing or canceling the

(Continued)

Danger (Continued)

correct performance of these components and security systems. Still, if there is a need to locate any object under the front seats, it is recommended firstly to place the seats in the position all behind to facilitate the access.

Do not adjust the seat by replacing your hands, fingers, feet or other body parts under the seat, as they have moving mechanism and metal parts that can cause injury.

Danger

Never adjust seats while driving as they could move uncontrollably.

Whenever you need to adjust the seat, be sure to sit comfortably and use the lever to unlock or electrical adjustment buttons, when available.

After adjusting the seat position, try to move it forward and backward to make sure it is locked in position.

(Continued)

Danger (Continued)

When adjusting the seat make sure not to hit a passenger or baggage.

Keep hands, fingers, feet or other body parts away from the functional areas of the adjustment mechanism, locking seats and other metal components.

If there is a need to pick some object below the front passenger seat, it is recommended firstly to place the seats in the position all behind.



To adjust the seat position:


1. Pull the handle at the front of the seat cushion, by the central region, to unlock it.
2. Move the seat forward or rearward and release the handle.
3. Try to move the seat back and forth to be sure it is locked in place.

Seat Height Adjuster



Move the lever up or down to raise or lower the seat.

Reclining Seatbacks



Warning

Sitting in a reclined position when the vehicle is in motion can be dangerous. Even when buckled up, the seat belts cannot do their job.

The shoulder belt will not be against your body. Instead, it will be in front of you. In a crash, you could go into it, receiving neck or other injuries.


The lap belt could go up over your abdomen. The belt forces would be there, not at your pelvic bones. This could cause serious internal injuries.

For proper protection when the vehicle is in motion, have the seatback upright. Then sit well back in the seat and wear the seat belt properly.




Do not have a seatback reclined if the vehicle is moving.

Manual Reclining Seatbacks



Warning

If either seatback is not locked, it could move forward in a sudden stop or crash. That could cause injury to the person sitting there. Always push and pull on the seatbacks to be sure they are locked.

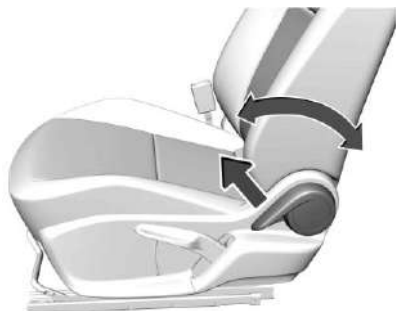

To recline a manual seatback:

1. Lift the lever.
2. Move the seatback to the desired position, and then release the lever to lock the seatback in place.
3. Push and pull on the seatback to make sure it is locked.

To return the seatback to the upright position:

1. Lift the lever fully without applying pressure to the seatback, and the seatback will return to the upright position.
2. Push and pull on the seatback to make sure it is locked. Allow the seat to engage audibly.

Rear Seats

Folding the Seatback

The rear seatbacks can be folded.

To fold the rear seatbacks:

1. Place the front seatbacks in the upright position. See *Reclining Seatbacks* ⇨ 21.

Warning

Folding a rear seat with the seat belts still fastened may cause damage to the seat or the seat belts. Always unbuckle the seat belts and return them to their normal stowed position before folding a rear seat.

2. Unbuckle the rear seat belt.



3. Pull the lever on top of the seatback to unlock the seatback.
4. Fold the seatback forward.
5. Repeat the steps for the other seatback, if desired.

To raise the seatback:

Warning

A seat belt that is improperly routed, not properly attached, or twisted will not provide the protection needed in a crash. The person wearing the belt could be

(Continued)


Warning (Continued)

seriously injured. After raising the rear seatback, always check to be sure that the seat belts are properly routed and attached, and are not twisted.

1. Lift the seatback up and push it rearward firmly until it locks into place.

Use two hands to press firmly against the seatback. Apply enough pressure to both sides of the seatback to lock it when returning it to its upright position.

Repeat the steps for the other seatback, if desired.


 **Warning**

If the seatback is not locked, it could move forward in a sudden stop or crash. That could cause injury to the person sitting there. Always pull forward on the top of the seatback at the area of the latch to be sure it is locked.

2. When the seatback is raised and locked into place. Push and pull on the seatback to make sure it is locked into position.

Check if the seat belt is not trapped between the rear seatback and the latch.

Keep the seat in the upright locked position when not in use.

Seat Belts **Warning**

Do not let anyone ride where a seat belt cannot be worn properly. In a crash, if you or your passenger(s) are not wearing seat belts, injuries can be much worse than if you are wearing seat belts. You can be seriously injured or killed by hitting things inside the vehicle harder or by being ejected from the vehicle. In addition, anyone who is not buckled up can strike other passengers in the vehicle.

It is extremely dangerous to ride in a cargo area, inside or outside of a vehicle. In a collision, passengers riding in these areas are more likely to be seriously injured or killed. Do not allow passengers to ride in any area of the vehicle that is not equipped with seats and seat belts.

(Continued)

Warning (Continued)

Always wear a seat belt, and check that all passenger(s) are restrained properly too.

Seat belts are only designed to be used by one person at a time. They are not suitable for persons smaller than 150 cm. The usage of an appropriate child seat restraint system is obligatory for persons smaller than 150 cm.

Periodically check all parts of the belt system for damage and proper functionality. Have damaged components replaced.

After an accident, have the belts replaced by a Chevrolet dealer.

Note

Make sure that the belts are neither damaged by shoes or sharp-edged objects or trapped. Prevent dirt from getting into the belt retractors.

This vehicle has indicators as a reminder to buckle the seat belts. See *Seat Belt Reminders* ⇨ 57.


How to Wear Seat Belts Properly

Follow these rules for everyone's protection.

There are additional things to know about seat belts and children, including smaller children and infants. If a child will be riding in the vehicle, see *Child Restraint Systems* ⇨ 34. Review and follow the rules for children in addition to the following rules.

It is very important for all occupants to buckle up. Statistics show that unbelted people are hurt more often in crashes than those who are wearing seat belts.

There are important things to know about wearing a seat belt properly.

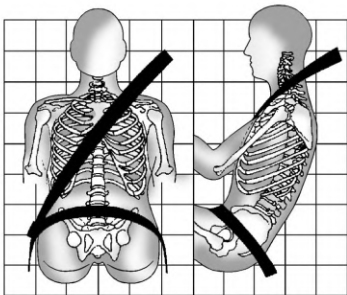



- Sit up straight and always keep your feet on the floor in front of you (if possible).

- Always use the correct buckle for your seating position.
- Wear the lap part of the belt low and snug on the hips, just touching the thighs. In a crash, this applies force to the strong pelvic bones and you would be less likely to slide under the lap belt. If you slid under it, the belt would apply force on your abdomen. This could cause serious or even fatal injuries.
- Wear the shoulder belt over the shoulder and across the chest. These parts of the body are best able to take belt restraining forces. The shoulder belt locks if there is a sudden stop or crash.





Warning


You can be seriously injured, or even killed, by not wearing your seat belt properly.

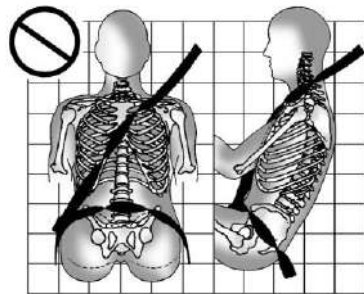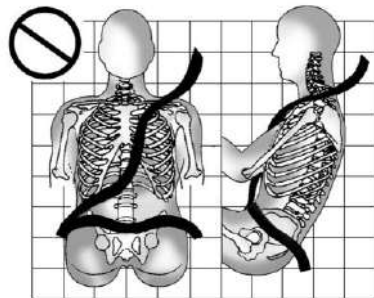


Never allow the lap or shoulder belt to become loose or twisted.

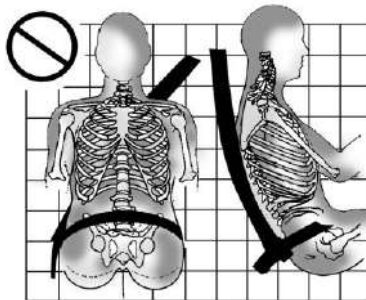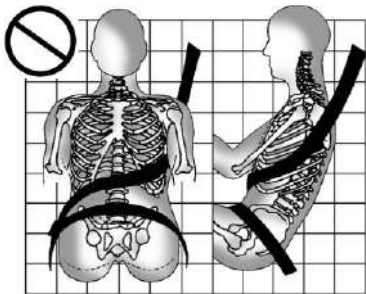

Never wear the shoulder belt under both arms or behind your back.

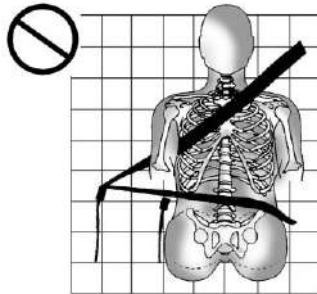

Always use the correct buckle for your seating position.

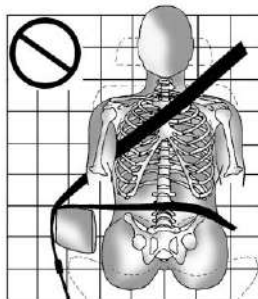


Never route the lap or shoulder belt over an armrest.

Lap-Shoulder Belt

All seating positions in the vehicle have a lap-shoulder belt.


The following instructions explain how to wear a lap-shoulder belt properly.

1. Adjust the seat, if the seat is adjustable, so you can sit up straight.

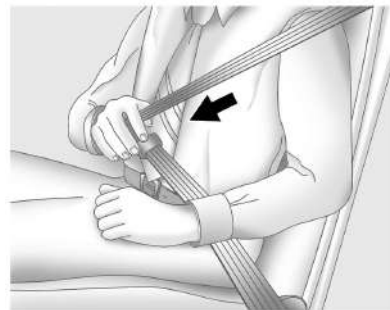

2. Pick up the latch plate and pull the belt across you. Do not let it get twisted.


The lap-shoulder belt may lock if you pull the belt across you very quickly. If this happens, let the belt go back slightly to unlock it. Then pull the belt across you more slowly.

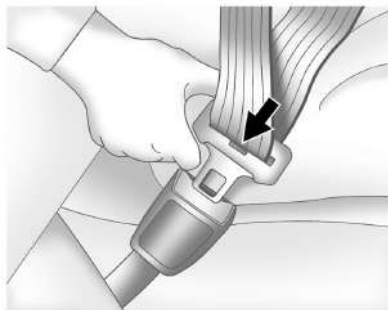


3. Push the latch plate into the buckle until it clicks.

Pull up on the latch plate to make sure it is secure.

Position the release button on the buckle so that the seat belt could be quickly unbuckled if necessary.

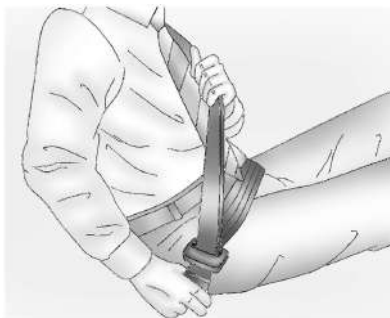

4. To make the lap part tight, pull up on the shoulder belt.

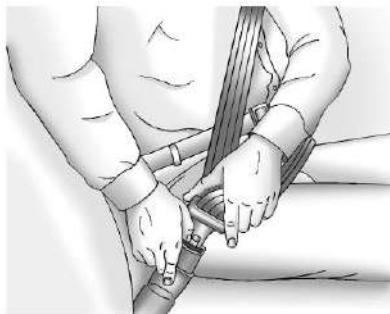

To unlatch the belt, push the button on the buckle. The belt should return to its stowed position.

Always stow the seat belt slowly. If the seat belt webbing returns quickly to the stowed position, the retractor may lock and cannot be pulled out. If this happens pull the seat belt straight out firmly to unlock the webbing and then release it. If the webbing is still locked in the retractor, see your dealer.

Before a door is closed, be sure the seat belt is out of the way. If a door is slammed against a seat belt, damage can occur to both the seat belt and the vehicle.

Shoulder Belt Height Adjuster

The vehicle has a shoulder belt height adjuster for the driver seating position.

Adjust the height so the shoulder portion of the belt is on the shoulder and not falling off of it. The belt should be close to, but not contacting, the neck. Improper shoulder belt height adjustment could reduce the effectiveness of the seat belt in a crash. See *How to Wear Seat Belts Properly* ⇨ 23.



Press the release button and move the height adjuster to the desired position. The adjuster can be moved up by pushing the slide/trim up. After the adjuster is set to the desired position, try to move it down without pushing the release button to make sure it has locked into position.

Seat Belt Pretensioners

This vehicle has seat belt pretensioners for front outboard occupants. Although the seat belt pretensioners cannot be seen, they are part of the seat belt assembly. They can help tighten the seat belts during the early stages of a moderate to severe frontal, near frontal, or rear crash if the threshold conditions for

pretensioner activation are met. And, if the vehicle has seat-mounted side impact airbags, seat belt pretensioners can help tighten the seat belts in a side crash.

Pretensioners work only once. If the pretensioners activate in a crash, the pretensioners and probably other parts of the vehicle's seat belt system will need to be replaced. See *Replacing Seat Belt System Parts after a Crash* ⇨ 28.

Do not sit on the outboard seat belt while entering or exiting the vehicle, or at any time while sitting in the seat. Sitting on the seat belt can damage the webbing and hardware.

Seat Belt Use During Pregnancy

Seat belts work for everyone, including pregnant women. Like all occupants, they are more likely to be seriously injured if they do not wear seat belts.



A pregnant woman should wear a lap-shoulder belt, and the lap portion should be worn as low as possible, below the rounding, throughout the pregnancy.

The best way to protect the fetus is to protect the mother. When a seat belt is worn properly, it is more likely that the fetus will not be hurt in a crash. For pregnant women, as for anyone, the key to making seat belts effective is wearing them properly.

Safety System Check

Periodically check the seat belt reminder, seat belts, buckles, latch plates, retractors, shoulder belt height adjusters (if equipped), and seat belt anchorages to make sure they are all in

working order. Look for any other loose or damaged seat belt system parts that might keep a seat belt system from performing properly. See your dealer to have it repaired. Torn, frayed, or twisted seat belts may not protect you in a crash. Torn or frayed seat belts can rip apart under impact forces. If a belt is torn or frayed, have it replaced immediately. If a belt is twisted, it may be possible to untwist by reversing the latch plate on the webbing. If the twist cannot be corrected, ask your dealer to fix it.

Make sure the seat belt reminder light is working. See *Seat Belt Reminders* ⇨ 57.

Keep seat belts clean and dry. See *Seat Belt Care* ⇨ 28.

Seat Belt Care

Keep belts clean and dry.

Seat belts should be properly cared for and maintained.

Seat Belt hardware should be kept dry and free of dust or debris. As necessary exterior hard surfaces and seat belt webbing may be lightly cleaned with mild soap and water. Ensure there is not excessive dust or debris in the mechanism. If dust or debris exists in the

system after proper cleaning please see the dealer. Parts may need to be replaced to ensure proper functionality of the system.

Warning

Do not bleach or dye seat belt webbing. It may severely weaken the webbing. In a crash, they might not be able to provide adequate protection. Clean and rinse seat belt webbing only with mild soap and lukewarm water. Allow the webbing to dry.

Replacing Seat Belt System Parts after a Crash

Warning

A crash can damage the seat belt system in the vehicle. A damaged seat belt system may not properly protect the person using it, resulting in serious injury or even death in a crash. To help make sure the seat belt systems are working properly after a crash, have them inspected and any necessary replacements made as soon as possible.

After a minor crash, replacement of seat belts may not be necessary. But the seat belt assemblies that were used during any crash may have been stressed or damaged. See your dealer to have the seat belt assemblies inspected or replaced.

New parts and repairs may be necessary even if the seat belt system was not being used at the time of the crash.

Have the seat belt pretensioners checked if the vehicle has been in a crash, or if the airbag readiness light stays on after you start the vehicle or while you are driving. See *Airbag Readiness Light* ⇨ 58.

Warning

Safety procedures must always be observed when disposing of the vehicle or vehicle parts. Disposal should only be performed by an authorized service center, to help protect the environment and your health.

Airbag System

The airbag system consists of a number of individual systems.

When triggered, the airbags inflate within milliseconds. They also deflate so quickly that it is often unnoticeable during the collision.

 **Danger**

If handled improperly, the airbag systems can be triggered and inflate.

The driver should sit back as far as possible while still maintaining control of the vehicle. If you are sitting too close to the airbag, it can cause fatal or serious injury when it inflates.

For maximum safety protection in all types of crashes, all occupants including the driver should always wear their seat belts to minimize the risk of severe or fatal injury in the event of a crash. Do not sit or lean unnecessarily close to the airbag while the vehicle is in motion.

The airbag may cause facial or body scratch, injury by broken glasses or burns due to the inflation when the airbag is deployed.

Note


The airbag systems and belt tensioner electronic control are located in the centre console area. Do not put any magnetic objects in this area.

Do not stick anything on the airbag covers and do not cover them with other materials.

Each airbag is triggered only once. Have deployed airbags replaced by a Chevrolet Dealer.

Do not make any modifications to the airbag system as this will invalidate the vehicle type approval. Have the steering wheel, the instrument panel, all panelling parts, the door seals, the handles and the seats removed by a Chevrolet Dealer.

When the airbags inflate, escaping hot gases may cause burns.

 **Danger**

Never allow children, infants, pregnant women, the old and the weak to sit in the front passenger seats fitted with airbags. Do not drive with a baby seat fitted thereon.

(Continued)

Danger (Continued)

In case of an accident, the impact from the inflated airbag can cause facial injury or fatal accident.

Caution

If the vehicle is impacted by bumps or objects on unpaved roads or sidewalks, the airbags may inflate. Drive slowly on surfaces not designed for vehicle traffic to prevent unintended airbag deployment.

See *Airbag Readiness Light* ⇨ 58.

Child restraint system on front passenger seat with airbag systems




NEVER use a rearward-facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it; FATAL OR SERIOUS INJURY to the CHILD can occur.

For safety reasons a forward-facing child restraint system must only be used subject to the instructions and restrictions in the table.


The airbag label is located on both sides of the front passenger sun visor. See Airbag deactivation.

Front Airbag System

The front airbag system consists of one airbag in the steering wheel and one in the instrument panel on the passenger side. These can be identified by the word **AIRBAG**.

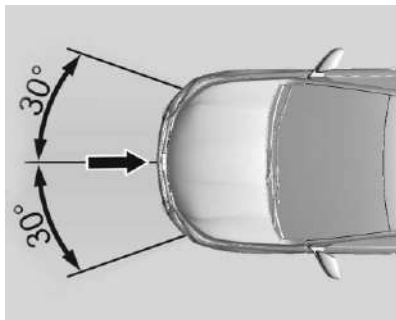

The front airbag system is triggered in the event of an accident of a certain severity in the depicted area. The ignition must be on.

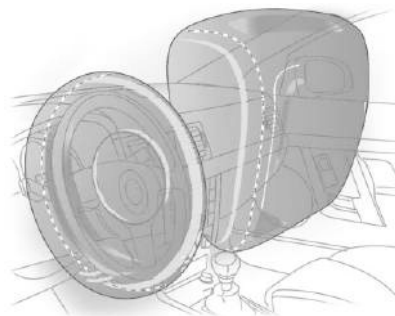

The front airbags are complementary security devices, which along with the front seat belts, increase the protection of the front passengers in a front collision in a very abrupt decelerating vehicle. Its function is to protect the head and the chest against violent impact on the steering wheel or the instrument panel in accidents where the seat belts would not be enough to prevent serious injuries and/or death.

The airbag system will not deploy in a front collision with lower severity, in which the seat belt will be enough to protect the passengers, on lateral side and on the rear part of the vehicle collisions, in rollovers and slippages and other situations where the occupant is not projected towards the front with severity.

It is important to stress that the velocity of the vehicle and the deceleration imposed to the occupants are determinant factors for the deployment of the airbag.

An electronic module manages the activation of the system.

The necessity for the ignition of the gas generators given will inflate the bags to cushion the contact of the front occupants with the steering wheel and/or the instrument panel.

The sound generated by the deployment of the airbags, through the gas generator, is not harmful to the human auditory system.

Danger

Optimum protection is only provided when the seat is in the proper position, see *Seat Position* under *Seat Position* ⇨ 19. Keep the area in which the airbag inflates clear of obstructions. Fit the seat belt correctly and engage securely. Only then the airbag is able to protect.

Important Recommendations


- Never keep any object between the airbag and the seat occupants, as in the case of airbag inflation those may be thrown against the occupants, causing injuries.
- Do not install any non-original accessories in the steering wheel or the instrument panel, as these may interfere in the airbag course at the time it inflates, thus preventing the system operation or with them being thrown towards the occupants, resulting in injury.
- Never modify any airbag components. The incorrect handling may cause it to inflate inadvertently, causing the driver or the seat passenger to be injured.
- The electronic system that controls the airbag is located in the front console. In order to avoid failures, do not place any magnetic object close to the console.
- In case vehicle is exposed to any floods, seek the assistance of a Chevrolet Dealer.
- The steering wheel and instrument panel disassembly should only be carried out in a Chevrolet Dealer.

- The airbag was designed to discharge only once. After discharged, it should be immediately replaced by a Chevrolet Dealer.
- Do not carry or keep any objects in your mouth when you are driving. If the airbag inflates, the risk of injury or fatal accident will increase considerably.
- If forwarding the vehicle to a new owner, please inform the new owner that the vehicle is featured with an airbag system and that the instructions within this manual should be read and followed.
- Disassembling a vehicle with a non-inflated airbag may be very dangerous. When discarding a vehicle seek the assistance of a Chevrolet Dealer.

Side Airbag System

The side airbag system consists of an airbag in each front seat backrest. This can be identified by the word AIRBAG.

The side airbag system is triggered in the event of a side impact of a certain severity. The ignition must be switched on.

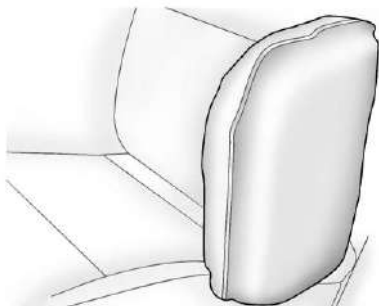

The risk of injury to the upper body and pelvis in the event of a side-on collision is considerably reduced.

Caution

- Do not install seat covers.
- Do not replace the original lining with another type of fabric, including leather, neither install protecting covers to the seats and also in case of replacement or damage, seek the assistance of a Chevrolet Dealer.

(Continued)

Caution (Continued)

- Do not put your body or any object (including pillows) between the front seats and doors. The front seat passengers must not lean or sleep supported on the door. Sit down always on center of the seat.
- Always use the seat belts.

⚠ Danger

Keep the area in which the airbag inflates clear of obstructions.

⚠ Danger


Children who are seated in close proximity to a side Airbag may be at risk of serious or fatal injury if the Airbag deploys, especially if the child's head, neck, or chest is close to the Airbag at the time of deployment.

Never let your child lean on the door or close to the side Airbag module.

Curtain Airbag System

The curtain airbag system consists of an airbag in the roof frame on each side. This can be identified by the word AIRBAG on the roof pillars.

The curtain airbag system is triggered in the event of a side-on impact of a certain severity. The ignition must be switched on.

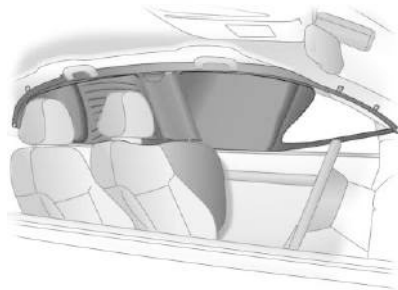

The risk of injury to the head in the event of a side impact is considerably reduced.

Danger

- Do not stay near the Airbag deployment zone (nor put objects, including cushions).
- Use the hooks located over the doors for hanging light clothes only.
- Do not put any objects inside the pockets of clothes which are hung.
- Do not hold the assist grips (over the doors) while the vehicle is being driven.
- Always fasten the safety seat belt.
- Do not lean on (nor fall asleep) the front or rear doors. Always sit on the seat center portion.

Airbag On-Off Switch



Front airbag system for the front passenger seat has to be deactivated if a child restraint system is to be fitted on this seat. The side and the curtain airbag systems, the belt tensioners and all driver airbag system will remain active.




Front passenger airbag system can be deactivated via a lock on the side of the instrument panel, visible when the front passenger door is open.

The passenger airbag status indicator is located on the roof console.


Use the vehicle key to choose the position:

 (Off) the front passenger airbag is deactivated and will not inflate in the event of a collision. Control indicator  illuminates continuously. A child restraint system can be installed in accordance with the chart Child restraint installation locations.

 (On) the front passenger airbag is active. No child restraint systems can be installed.

Change the switch position just when the vehicle is stopped and the ignition is off.



As long as the control indicator  is illuminated, the airbag systems for the front passenger seat will inflate in the event of a collision.

If both indicator illuminates at the same time or if no indicators are illuminated, there is a fault in the system. Repair the cause of the fault in a Chevrolet Dealer immediately.

⚠ Danger

Activate front passenger airbag system when an adult is on the front passenger seat.

Otherwise, there is a risk of injury or fatal accident to the person that took the seat with an airbag front passenger disabled.

Child Restraints**Child Restraint Systems****Child Restraints**

The rear seats are the most convenient location to fasten a child restraint system. Infants and children should be properly restrained by means of restraint systems, in terms of this manual.

The hips of an infant are too small and a regular seat belt will not remain in the correct place, as necessary. Instead, there is a possibility that the seat belt remains at the infant's abdomen forcing it directly and can cause serious injury in case of collision.

⚠ Danger

Do not place a Baby seat on a seat with activated front passenger airbag; otherwise, the airbag in case of collision may cause serious injury to the child, as the child's head would be very close to the inflating airbag.

**Note**

For a correct choice of the child restraint system, it is important to consider the child's height in addition to their age and mass.

General Motors recommends using genuine GM child restraint system.

**Note**

Before acquiring a child restraint device, check if it is suitable for the seat belt and seat.

⚠ Warning

- When carrying a child, follow the procedures for the transport of children established by the local laws.
- In some countries, the use of child restraint systems is forbidden on certain seats.

(Continued)

Warning (Continued)

- Make sure that the child restraint device is installed properly. If the child seat is not properly attached, the risk of serious injury in case of collision increases.
- Do not attach or place objects or other materials on the child restraint device.
- Do not leave any loose object in the vehicle. During an impact, this object may cause injuries on the occupants.
- After removing the child from the vehicle, keep the child restraint attached with the seat belt or ISOFIX, in order to avoid the child restraint from being thrown forward in case of sudden braking.
- If it is not necessary to keep the child restraint device on the rear seat, remove it from the vehicle and store it.
- After an accident, it is necessary to replace the child restraint device because it must have suffered non-visible damages.

Note

Make sure that the child restraint device:

- Is in accordance to the instructions given by the child restraint device manufacturer.
- Have the label of approval of safety regulations accomplishments, in terms of the local laws.
- Are suitable to your vehicle.

Child Restraint Installation Locations

Permissible options for fastening a child restraint system with a three-point seat belt.

Weight and age class	On front passenger seat		On Rear Seats	
	Activated airbag	Desactivated airbag	Rear outboard seats	Rear centre seat
Group 0: up to 10 kg or approx. 10 months	X	U (1,2)	U/L (3)	X
Group 0+: up to 13 kg or approx. 2 years	X	U (1,2)	U/L (3)	X
Group I: 9 to 18 kg or approx. 8 months to 4 years	X	U (1,2)	U/L (3,4)	X
Group II: 15 to 25 kg or approx. 3 to 7 years	X	X	U/L (3,4)	X

Weight and age class	On front passenger seat		On Rear Seats	
	Activated airbag	Desactivated airbag	Rear outboard seats	Rear centre seat
Group III: 22 to 36 kg or approx. 6 to 12 years	X	X	U/L (3,4)	X

U: Universal suitability in conjunction with three-point safety belt.

L: Suitable for particular child restraint systems of the 'specific-vehicle', 'restricted' or 'semi-universal' categories. The child restraint system must be approved for the specific vehicle type (refer to the vehicle type list of the child restraint system).

X: No child restraint system permitted in this location and in this weight class.

(1) Move seat forwards as far as necessary and adjust seat backrest inclination as far as necessary to a vertical position to ensure that the belt runs forwards from the upper anchorage point.

(2) Move seat height adjustment upwards as far as necessary and adjust seat backrest inclination as far as necessary to a vertical position to ensure that the belt is tight on the buckle side.

(3) Move the respective front seat ahead of the child restraint system forwards as far as necessary.

(4) Adjust the respective headrest as necessary or remove if required.

Danger

WARNING - EXTREME HAZARD

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, FATAL or SERIOUS INJURY to the CHILD can occur.

Note

The provisions established by the laws overlaps the provisions of this Manual.

Securing Child Restraints with the Seat Belt

When using the lap-shoulder belt to secure the child restraint, follow the instructions that came with the child restraint and the following instructions:

1. Put the child restraint on the seat.
2. Pick up the latch plate, and run the lap and shoulder portions of the vehicle's seat belt through or around the child restraint. The child restraint instructions will show you how.
3. Push the latch plate into the buckle until it clicks.

4. Position the release button on the buckle, away from the child restraint, so that the seat belt could be quickly unbuckled if necessary. The push button used to release the latch plate must be visible and not obscured by the child restraint. There should not be direct contact of the child restraint to the push button.

Follow the instructions in the child restraint owner's manual to tighten and lock the child restraint when using the vehicle seat belt.

Before placing a child in the child restraint, make sure it is securely held in place. Push and pull the child restraint in different directions to be sure it is secure.

To remove the child restraint, follow the instructions in the child restraint owner's manual to unlock it. Unbuckle the vehicle seat belt and let it return to the stowed position.

Danger

Never use a single seat belt which an adult and a child. During an impact, the seat belt probably exert strong pressure on the child, causing serious or fatal injury.

(Continued)

Danger (Continued)

Never allow two children sharing the same seat belt. Both could suffer serious injuries in a collision.



Danger

Infants and children must never be carried on the lap of another occupant.

Although an infant does not weight much, it will be so heavy during a collision that it will be impossible to hold it, even if the occupant is attached to the seat belt.

Older Children

Correct use of the seat belt.



To verify if a child is able to use a three-point belt, make sure the child knees fold comfortably on the edge seat, transversal belt passes between the neck and child arm, lap belt is as low as possible over the child hip.

Danger

- Accident statistics show that the children are safer if they are in the rear seat and using seat belt in a suitable way.


(Continued)

Danger (Continued)

- Children without seat belt can be thrown out in an accident.
- Always that a child is seated, the lap belt shall be in low position closely to hips, touching child thighs. In an accident, it applies a belt force in pelvic bones of the child.

**⚠ Danger**

This picture shows a child seated in a seat with a three-point belt used incorrectly. If a child use the belt this way, in a collision can suffer injuries and risk of fatal accident.

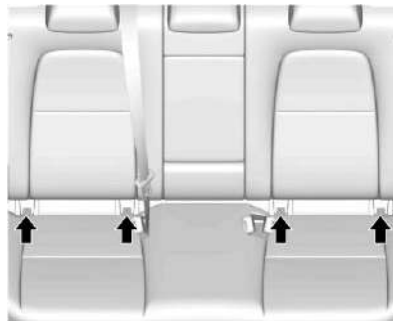ISOFIX Child Restraint Systems**ISOFIX Brackets**

This vehicle is equipped with ISOFIX mounting brackets to install child restraint system.

ISOFIX mounting brackets are located between rear backrest and rear seat cushion under a plastic cover and they are marked with i-Size symbol:



An i-Size child restraint system is an universal ISOFIX child restraint system according UN Regulation No.129. All i-Size child restraint systems can be used on any vehicle seat suitable for i-Size.

No more than two ISOFIX child restraint systems can be installed on the rear seats at the same time.

Instructions to fix retention device for children in the ISOFIX anchoring:

1. Select one of the rear outboard seating positions for installation of the child restraint.
2. Remove the plastic cover of ISOFIX brackets.

3. Place the child restraint on the seat over the two lower anchors and attach it to the anchors following the instructions supplied with the child restraint.
4. Check if retention device is completely closed to vehicle seat.
5. Either a Top-tether strap or a support leg must be used in addition to the ISOFIX mounting brackets.

Note

Since a seat belt or child restraint system can become very hot if it is left in a closed vehicle, be sure and check the seat cover and buckles before placing a child there.

**Warning**

Use all ISOFIX low anchorages for their designed purpose only. ISOFIX low anchorages are designed only to hold child restraints which come equipped with low anchorage attachments. Do not use ISOFIX low anchorages to hold adult seat belts, harnesses, or other items of equipment in your vehicle.

ISOFIX Child Restraint Installation Locations

Permissible options for fitting an ISOFIX child restraint system with ISOFIX brackets.

Weight and age class	Size Class	Fixture	Front Passenger	Rear Seat Lateral Positions	Rear Seat Centre Position
Group 0: up to 10 kg or approx. 10 months	G	ISO/L2	X	X	X
	F	ISO/L1	X	X	X
	E	ISO/R1	X	IL (1)	X
Group 0+: up to 13 kg or approx. 2 years	E	ISO/R1	X	IL (1)	X
	D	ISO/R2	X	IL (1)	X
	C	ISO/R3	X	IL (1)	X
Group I: 9 to 18 kg or approx. 8 months to 4 years	D	ISO/R2	X	IL (1,2)	X
	C	ISO/R3	X	IL (1,2)	X
	B	ISO/F2	X	IL, IUF (1,2)	X
	B1	ISO/F2X	X	IL, IUF (1,2)	X
	A	ISO/F3	X	IL, IUF (1,2)	X
Group II: 15 to 25 kg or approx. 3 to 7 years			X	IL (1,2)	X

Weight and age class	Size Class	Fixture	Front Passenger	Rear Seat Lateral Positions	Rear Seat Centre Position
Group III: 22 to 36 kg or approx. 6 to 12 years			X	IL (1,2)	X

IL: Suitable for particular ISOFIX restraint systems of the 'specific-vehicle', 'restricted' or 'semi-universal' categories. The ISOFIX restraint system must be approved for the specific vehicle type (refer to the vehicle type list of the child restraint system).

IUF: Suitable for ISOFIX forward-facing child restraint systems of universal category approved for use in this weight class.

X: No ISOFIX child restraint system approved in this mass group.

(1): Move the respective front seat ahead of the child restraint system forwards as far as necessary.

(2): Adjust the respective headrest as necessary or remove if required.

ISOFIX size class and seat device

A-ISO/F3: Forward-facing child restraint system for children of maximum size in the weight class 9 to 18 kg.

B-ISO/F2: Forward-facing child restraint system for smaller children in the weight class 9 to 18 kg.

B1-ISO/F2X: Forward-facing child restraint system for smaller children in the weight class 9 to 18 kg.

C-ISO/R3: Rear-facing child restraint system for children of maximum size in the weight class up to 18 kg.

D-ISO/R2: Rear-facing child restraint system for smaller children in the weight class up to 18 kg.

E-ISO/R1: Rear-facing child restraint system for young children in the weight class up to 13 kg.

F-ISO/L1: Left lateral facing position child restraint system (carry-cot).


G-ISO/L2: Right lateral facing position child restraint system (carry-cot).

Permissible options for fitting an i-Size child restraint system with ISOFIX brackets

	Front Passenger	Rear Seat Lateral Positions	Rear Seat Centre Position
i-Size child restraint systems	X	i-U	X
i-U: Suitable for i-Size 'universal' forward and rearward facing child restraint systems. X: Seating position not suitable for i-Size 'universal' child restraint systems.			


Top Tether Child Restraint Systems

TOP TETHER Anchor

TOP TETHER anchoring points for child retention device are located at the rear portion of the rear seat backrests and are always identified with symbol .

Note

Use only TOP TETHER anchoring points for securing retention device for children.

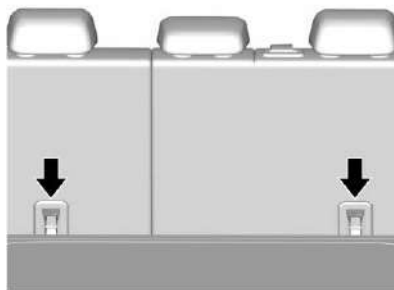

Instructions to fix retention device for children in the TOP TETHER anchoring:

1. Attach the clip on the child restraint's tether strap to the Top-tether anchor, making sure to remove any twists in the tether strap. Adjust the respective headrest as necessary or remove if required.
2. Tighten the child restraint's tether strap according to the instructions supplied with the child restraint.
3. Push and pull on the child restraint after installation to be sure the child restraint is secure.
4. If the child restraint is installed next to a center seat, make sure the top tether does not interfere with the center seating position shoulder belt/retractor. If it does, find another suitable seating position to install the child restraint.

Warning

Make sure the clip on the child restraint's tether strap is properly attached to the Top-tether anchorage. Incorrect attachment could render the tether strap and top tether anchorage ineffective.

Storage

Storage Compartments

Storage Compartments	44
Glove Box	44
Cupholders	44
Center Console Storage	45

Additional Storage Features

Cargo Cover (If equipped)	45
Warning Triangle (If equipped)	46

Roof Rack System

Roof Rack System	46
------------------------	----

Storage Compartments

Warning

Do not store heavy or sharp objects in storage compartments. In a crash, these objects may cause the cover to open and could result in injury.

Glove Box



To open, pull the handle.

The Owner's Manual is stored inside.

Danger


To reduce the risk of injury in an accident or a sudden stop, always keep the glove box door closed while driving.

Cupholders

Danger

Do not place uncovered cups of hot liquid in the cupholder while the vehicle is in motion. If the hot liquid spills, you may burn yourself, and this could lead to loss of control of the vehicle.

To reduce the risk of personal injury in the event of a sudden stop or collision, do not place uncovered or unsecured bottles, glasses, cans, etc., in the cupholder while the vehicle is in motion.

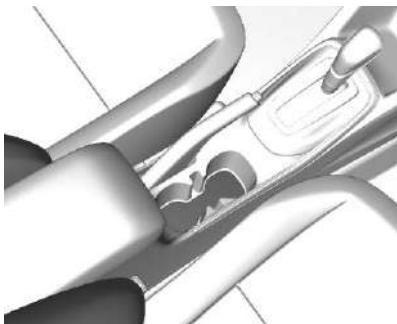

Cupholders are located in the centre console.


Rear Cupholders (if equipped)



Cupholders are located in the rear armrest.

Center Console Storage

Centre Console Storage

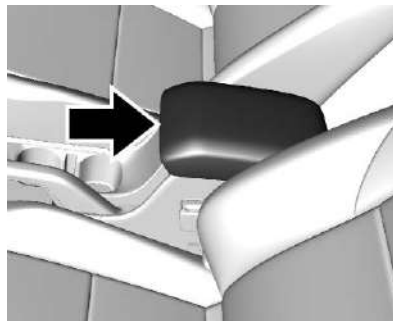

The centre console between the front seats has a storage compartment. Press the button and open it.

Additional Storage Features


Cargo Cover (If equipped)

Warning


An improperly installed cargo cover could strike people in a sudden stop or turn, or in a crash. Place the cargo cover correctly or remove it from the vehicle.

Do not place objects above the cargo cover. Sudden stops or turns can cause objects to be thrown inside the vehicle. You or others could be injured.

If equipped, use the cargo cover to cover items in the rear of the vehicle.

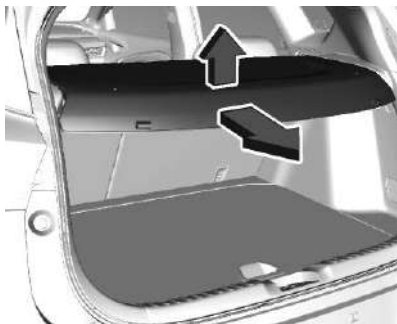

To remove the cover from vehicle, untie the string and remove the cover from the slot. To reinstall, place each end of the cover in the slots and slide it until the end of the slot on both sides. Make sure both sides were installed correctly according to the picture below. Tie the string on the liftgate.

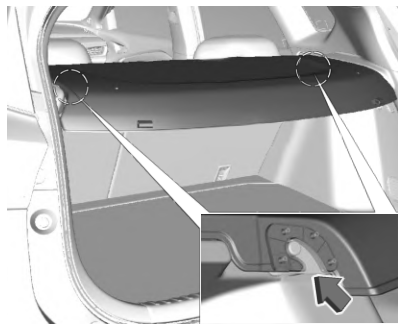

Warning Triangle (If equipped)

The warning triangle is stored in the trunk.

Roof Rack System

Warning

If something is carried on top of the vehicle that is longer or wider than the roof rack — like paneling, plywood, or a mattress — the wind can catch it while the vehicle is being driven. The item being carried could be violently torn off, and this could cause

(Continued)


Warning (Continued)

a collision and damage the vehicle. Never carry something longer or wider than the roof rack on top of the vehicle unless using a GM certified accessory carrier.

If equipped, the roof rack can be used to load items. For roof racks that do not have crossrails included, GM certified crossrails can be purchased as an accessory. See your dealer.

Caution

Loading cargo on the roof rack that weighs more than 100 kg (220 lb) or hangs over the rear or sides of the vehicle may damage the vehicle. Do not load cargo exceeding 100 kg (220 lbs) and always load cargo so that it rests evenly between the crossrails and does not block the vehicle lamps or windows. Fasten the cargo securely.

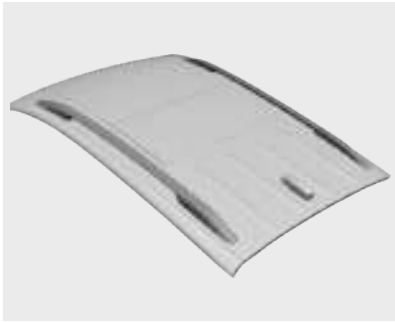

To prevent damage or loss of cargo when driving, check to make sure crossrails and cargo are securely fastened. Loading cargo on the roof rack will make the vehicle's center of gravity higher. Avoid high speeds, sudden starts, sharp turns, sudden braking, or abrupt maneuvers; otherwise it may result in loss of control. If driving for a long distance, on rough roads, or at high speeds, occasionally stop the vehicle to make sure the cargo remains in its place. Do not exceed the maximum vehicle capacity when loading the vehicle.

Instruments and Controls

Controls

Steering Wheel Adjustment	49
Steering Wheel Controls	49
Horn	49
Windshield Wiper/Washer	49
Rear Window Wiper/Washer	51
Clock	51
Power Outlets	51
Wireless Charging (If equipped)	52

Warning Lights, Gauges, and Indicators

Warning Lights, Gauges, and Indicators	53
Instrument Cluster	54
Speedometer	56
Odometer	56
Trip Odometer	56
Tachometer	56
Fuel Gauge	56
Turn Signal	57
Seat Belt Reminders	57
Airbag Readiness Light	58
Passenger Airbag Status Indicator	58
Charging System Light	58
Malfunction Indicator Lamp	59
Service Vehicle Soon Light	59
Brake System Warning Light	59

Antilock Brake System (ABS) Warning Light	59
Operate Pedal Light	60
Power Steering Warning Light	60
Vehicle Ahead Indicator	60
Follow Distance Indicator Light	60
Traction Off Light	60
Traction Control System (TCS)/ Electronic Stability Control Light	61
Electronic Stability Control (ESC) Off Light	61
Engine Coolant Temperature Warning Light	61
Pre-Heat Light (If equipped)	62
Tire Pressure Light (If equipped)	62
Engine Oil Pressure Light	62
Low Fuel Warning Light	63
Security Light	63
High-Beam On Light	63
Lamps On Reminder	63
Cruise Control Light (If equipped)	63
Hood Ajar Light	63
Door Ajar Light	64
Trunk Ajar Light	64

Information Displays

Driver Information Center (DIC)	64
---------------------------------------	----

Vehicle Messages

Vehicle Messages	66
Battery Voltage and Charging Messages	66

Vehicle Personalization

Vehicle Personalization	67
-------------------------------	----

Controls

Steering Wheel Adjustment



To adjust the steering wheel:


1. Pull the lever down.
2. Move the steering wheel up or down.
3. Pull or push the steering wheel closer or away from you.
4. Pull the lever up to lock the steering wheel in place.

Do not adjust the steering wheel while driving.

Steering Wheel Controls

The infotainment system can be operated by using the steering wheel controls. See Infotainment System.

Horn

Press  on the steering wheel pad to sound the horn.

Windshield Wiper/Washer

Windshield Wiper with Rainsense (If equipped)



With the ignition on or in ACC/ACCESSORY, move the windshield wiper lever to select the wiper speed.

HI: Use for fast wipes.

LO: Use for slow wipes.

AUTO: Use for Auto wipes.


OFF: Use to turn the wipers off.

1X: For a single wipe, briefly move the wiper lever down. For several wipes, hold the wiper lever down.

Rainsense

If equipped with Rainsense, a sensor located near the top center of the windshield detects the amount of water on the windshield and automatically controls the frequency of the windshield wiper.

When Rainsense is enabled, the normal intermittent control operates as a sensitivity control. Keep this area of the windshield clear of debris to allow for best system performance.

AUTO: Move the windshield wiper lever to AUTO. Turn the selector  on the wiper lever to adjust the sensitivity.

- Turn the selector up for more sensitivity to moisture.

- Turn the selector down for less sensitivity to moisture.
- Move the windshield wiper lever out of the AUTO position to deactivate Rainsense.

Wiper Arm Assembly Protection

When using an automatic car wash, move the windshield wiper lever to OFF. This disables the automatic Rainsense windshield wipers and/or manual windshield wipers.

Windshield Wiper with Intermittent Wipes (If equipped)



With the ignition on or in ACC/ACCESSORY, move the windshield wiper lever to select the wiper speed.

HI: Use for fast wipes.

LO: Use for slow wipes.



: Use for intermittent wipes.

OFF: Use to turn the wipers off.


1X: For a single wipe, briefly move the wiper lever down. For several wipes, hold the wiper lever down.

When switching intermittent mode on, there is a pre-programmed interval. If you want to change this interval, turn off the intermittent mode and turn it on again. The interval taken for intermittence will be the time that the lever remained in OFF position.

Clear snow and ice from the wiper blades and windshield before using them. If frozen to the windshield, carefully loosen or thaw them. Damaged blades should be replaced. See *Wiper Blade Replacement* ⇨ 153.

Heavy snow or ice can overload the wiper motor.

Wiper Parking

If the ignition is turned off while the wipers are on LO, HI or , they will immediately stop.

If the windshield wiper lever is then moved to OFF before the driver door is opened within 10 minutes after the ignition is turned off, the wipers will restart and move to the base of the windshield.

If the ignition is turned off while the wipers are performing wipes due to windshield washing, the wipers continue to run until they reach the base of the windshield.

Windshield Washer

Pull the windshield wiper lever toward you to spray windshield washer fluid and activate the windshield wipers. The wipers will continue until the lever is released or the maximum wash time is reached. When the windshield wiper lever is released, additional wipes may occur depending on how long the windshield washer had been activated. See *Washer Fluid* for information on filling the windshield washer fluid reservoir.

Rear Window Wiper/Washer



Push the lever forward to the first detent. The rear window wiper will start to wipe. To stop the movement, pull the lever back to its original position.

Rear Window Washer

Push the lever forward fully to the end to spray washer fluid on the rear window.

Reverse Gear Wipes

If the rear wiper control is off, the rear wiper will automatically operate continuously when the shift lever is in R (Reverse), and the front windshield wiper is performing low or high


speed wipes. If the rear wiper control is off, the shift lever is in R (Reverse), and the front windshield wiper is performing interval wipes, then the rear wiper automatically performs interval wipes.

Reverse Gear Wipes can be disabled through vehicle personalization. See *Vehicle Personalization* ⇨ 67.

Clock

The clock can be set using the infotainment system. See *Infotainment System*.

Power Outlets

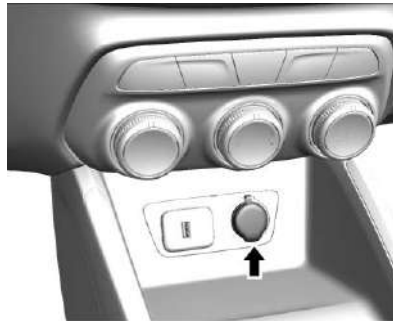

The accessory power outlets can be used to plug in electrical equipment, such as a cell phone, GPS chargers or any other 12V device that not exceed 120W.

The vehicle may have an accessory power outlets:

- Below the climate control system.

Lift the cover to access the accessory power outlet.

Certain electrical accessories may not be compatible to be used with the accessory power outlet, the use of accessories not validate and certified by the device manufacturer and/or exceeding 120W and 10A could overload the vehicle circuit and fuse, causing critical overheating.

It is possible to replace the factory power outlet by a cigar lighter receptacle, if desired. This requires the fully replacement of retainer plug, connection and circuit fuse. Only authorized dealers are able to perform this replacement.

Caution

When adding electrical equipment, be sure to follow the proper installation instructions.

Utilization of equipment within the power outlet without verifying the characteristics, not validated or certified by the device manufacturer can cause damage not covered by the vehicle warranty.

It is mandatory to assure maximum load does not exceed 120W and 10A.

The extended use of devices with the vehicle engine off can discharge the battery.

When getting out the vehicle always remove the accessory plugged in the power outlet.

When not using the power outlet always keep it close to avoid and object to fall inside the it. Depending on the object, it can cause short circuit and contact isolation. Extremely important to keep the area clean.

Wireless Charging (If equipped)

The vehicle may have a wireless charging compartment in the centre console. The system wirelessly charges one Qi compatible mobile device.

To check for phone or other device compatibility, see your Chevrolet Dealership or Authorized Repair Shop for details.



The ignition must be on in On/Run, ACC/ACCESSORY, or Retained Accessory Power (RAP) must be active. The wireless charging feature may not correctly indicate charging when the vehicle is in RAP. See *Retained Accessory Power (RAP)* ⇨ 112.

The system may not operate in extreme weather conditions.

To charge a mobile device:

1. Find the charging pad below the climate control system panel.
2. Remove all objects from the charging pad. The system may not charge if there are any objects between the phone and charging pad.
3. Place the mobile device face up on the charging pad.

Warning

Wireless charging can affect the operation of an implanted pacemaker or other medical devices. If you have one, it is recommended to consult with your doctor before using the wireless charging system.

Warning

Remove all objects from the charging pad before charging your compatible smartphone. Objects, such as coins, keys,

(Continued)

Warning (Continued)

rings, paper clips, or cards, between the smartphone and charging pad will become very hot. On the rare occasion that the charging system does not detect an object, and the object gets wedged between the smartphone and charger, remove the smartphone and allow the object to cool before removing it from the charging pad, to prevent burns.

Note

Do not leave the vehicle key on the charging pad.

Warning Lights, Gauges, and Indicators

Warning lights and gauges can signal that something is wrong before it becomes serious enough to cause an expensive repair or replacement. Paying attention to the warning lights and gauges could prevent injury.

Some warning lights come on briefly when the engine is started to indicate they are working. When one of the warning lights comes on and stays on while driving, or when one of the

gauges shows there may be a problem, seek assistance of a Chevrolet Dealer or Authorized Repair Shop. Waiting to do repairs can be costly and even dangerous.

Instrument Cluster



Model A



Model B

Speedometer



The speedometer shows the vehicle's speed in kilometers per hour (km/h).

Odometer

The odometer shows how far the vehicle has been driven, in kilometers.

Trip Odometer

The trip odometer shows how far the vehicle has been driven since the trip odometer was last reset.

The trip odometer is accessed and reset through the Driver Information Center (DIC). See Driver Information Center (DIC).

Tachometer



The tachometer displays the engine speed in revolutions per minute (rpm).

When the engine is on, the tachometer will indicate the engine's revolutions per minute (rpm). The tachometer may vary by several hundred rpm's, when the engine is shutting off and restarting.

Fuel Gauge

When the ignition is on, the fuel gauge indicates about how much fuel is left in the tank.

An arrow on the fuel gauge indicates the side of the vehicle the fuel door is on.



Model B, Model A similar

E: Fuel tank is empty.


F: Fuel tank is full.

Reduce fuel consumption when the indicator nears empty, see *Driving for Better Fuel Economy* ⇨ 101. When the low fuel light comes on there is still a little fuel left, but the fuel tank should be filled soon. When the low fuel light comes blink, reduce fuel consumption and refuel tank immediately.

Here are four things that some owners ask about. None of these show a problem with the fuel gauge:

- At the service station, the fuel pump shuts off before the gauge reads full.
- It takes a little more or less fuel to fill up than the gauge indicated. For example, the gauge indicated the tank was half full, but it actually took a little more or less than half the tank's capacity to fill the tank.
- The gauge moves a little while turning a corner or speeding up.
- The gauge takes a few seconds to stabilize after the ignition is turned on, and goes back to empty when the ignition is turned off.

Turn Signal

The indicator  illuminates or flashes green.

Seat Belt Reminders

Driver Seat Belt Reminder Light

There is a driver seat belt reminder light in the instrument cluster.



When the vehicle is started, this light flashes and a chime may come on to remind the driver to fasten their seat belt. Then the light stays on solid until the belt is buckled. This cycle may continue several times if the driver remains or becomes unbuckled while the vehicle is moving.

If the driver seat belt is buckled, neither the light nor the chime comes on.

Passenger Seat Belt Reminder Light

There is a passenger seat belt reminder light in the instrument cluster.



When the vehicle is started, if the passenger seat is occupied, this light flashes and a chime may come on to remind passengers to fasten

their seat belt. Then the light stays on solid until the belt is buckled. This cycle continues several times if the passenger remains or becomes unbuckled while the vehicle is moving.

If the passenger seat belt is buckled, neither the chime nor the light comes on.

The front passenger seat belt reminder light and chime may turn on if an object is put on the seat such as a briefcase, handbag, grocery bag, laptop, or other electronic device. To turn off the reminder light and/or chime, remove the object from the seat or buckle the seat belt.

Rear Passenger Seat Belt Reminder Lights

If equipped,  the vehicle may have rear passenger seat belt reminder lights.

When the vehicle is started, these lights come on solid to remind rear passengers to fasten their seat belts. Then each light may stay solid or flash, and a chime may come on if the rear passenger remains unbuckled, or becomes unbuckled, when the vehicle is moving.

If all rear seat positions are buckled, neither the chime nor the lights will come on.

Airbag Readiness Light

This light shows if there is an electrical problem with the airbag system. The system check includes the airbag sensor(s), the passenger sensing system, the pretensioners, the airbag modules, the wiring, and the crash sensing and diagnostic module. For more information on the airbag system, see *Airbag System* ⇨ 28.



The airbag readiness light comes on for several seconds when the vehicle is started. If the light does not come on then, seek the assistance of a Chevrolet dealer or authorized repair shop.

Warning

If the airbag readiness light stays on after the vehicle is started or comes on while driving, it means the airbag system might not be working properly. The airbags in the vehicle might not inflate in a crash, or

(Continued)

Warning (Continued)


they could even inflate without a crash. To help avoid injury, have the vehicle serviced right away.


Passenger Airbag Status Indicator

The overhead console has a passenger airbag status indicator.



When the vehicle is started, the passenger airbag status indicator will come on for several seconds as a system check.

ON : This light means that the front passenger airbag can be operated by the airbag system.


OFF : This light means that the front passenger airbag was deactivated via a lock on the side of the instrument panel. See *Airbag On-Off Switch* ⇨ 33

If, after several seconds, both status indicator lights remain on, or if there are no lights at all, there may be a problem with the lights or the airbag On-Off Switch. See a dealer for service.

Warning

If the airbag readiness light ever comes on and stays on, it means that something may be wrong with the airbag system. To help avoid injury to yourself or others, have the vehicle serviced right away. See *Airbag Readiness Light* ⇨ 58 for more information, including important safety information.

Charging System Light



The charging system light comes on briefly when the ignition is turned on, but the engine is not running, as a check to show the light is working. The light turns off when the engine is started. If it does not, have the vehicle serviced by your dealer.

If the light stays on, or comes on while driving, there could be a problem with the electrical charging system. Have it checked by your dealer. Driving while this light is on could drain the battery.

If a short distance must be driven with the light on, be sure to turn off all accessories, such as the radio and air conditioner.

Malfunction Indicator Lamp



This light illuminates yellow.

The malfunction indicator light turns on when the vehicle detects a failure of the emission control system or important electronic sensors.

If the malfunction indicator light is blinking, damage to the catalytic converter may occur. Reducing the engine speed may prevent damage to the catalytic converter and stop the malfunction indicator light from blinking.

If the Malfunction indicator light is on when the vehicle is being driven, the vehicle needs to be serviced by a Chevrolet Dealer.

Service Vehicle Soon Light



This light should come on when the vehicle has malfunction.

If the light is on, the vehicle needs to be serviced by a Chevrolet Dealer.

Brake System Warning Light

This light is activated with Ignition on and parking brake applied.



This light come, with the parking brake not applied, if the brake/clutch fluid is low or if there is a system fault.

If the light stays on, seek the assistance of a Chevrolet dealer or authorized repair shop.

Antilock Brake System (ABS) Warning Light



This light illuminates yellow.

Illuminates for a few seconds after the ignition is switched on. The system is ready for operation when the control indicator goes out.

If the control indicator does not go out after a few seconds or illuminates while driving, there is a failure in the ABS. The brake system remains operational but without ABS assist.

See *Antilock Brake System (ABS)* ⇨ 118.

Operate Pedal Light



For vehicles equipped with manual transmission, this light comes on when the clutch pedal or the brake and clutch pedals need to be applied to start the vehicle. For vehicles equipped with automatic transmission, this light comes on when the brake pedal needs to be applied to start the vehicle.

Power Steering Warning Light



This light comes on briefly when the engine is started.

If the light doesn't turn off or come on while driving, there may be a problem with the power steering system. See your dealer.

Vehicle Ahead Indicator



If equipped, this indicator will display green when a vehicle is detected ahead and amber when you are following a vehicle ahead much too closely. See *Forward Collision Alert (FCA) System* ⇨ 130.

Follow Distance Indicator Light



This indicator shows the Forward Collision Alert distance setting. See *Forward Collision Alert (FCA) System* ⇨ 130.

Traction Off Light



This light comes on briefly while starting the engine. If it does not, have the vehicle serviced by your dealer. If the system is working normally, the indicator light then turns off.

The traction off light comes on when the Traction Control System (TCS) has been turned off by pressing and releasing the TCS/StabiliTrak/Electronic Stability Control (ESC) button.

This light and the StabiliTrak OFF light come on when StabiliTrak/ESC is turned off.

If the TCS is off, wheel speed will be limited when necessary to protect the driveline from damage. Adjust driving accordingly.

See *Traction Control/Electronic Stability Control* ⇨ 121.

Traction Control System (TCS)/ Electronic Stability Control Light



This light comes on briefly when the engine is started.

If the light does not come on, have the vehicle serviced by your dealer. If the system is working normally, the indicator light turns off.

If the light is on and not flashing, the TCS and potentially the StabiliTrak/ESC system have been disabled. A Driver Information Center (DIC) message may display. Check the DIC

messages to determine which feature(s) is no longer functioning and whether the vehicle requires service.

If the light is on and flashing, the TCS and/or the StabiliTrak/ESC system is actively working.

See *Traction Control/Electronic Stability Control* ⇨ 121.

Electronic Stability Control (ESC) Off Light



This light comes on briefly while starting the engine. If it does not, have the vehicle serviced by your dealer.

This light comes on when the StabiliTrak/Electronic Stability Control (ESC) system is turned off. If StabiliTrak/ESC is off, the Traction Control System (TCS) is also off.

If StabiliTrak/ESC and TCS are off, the system does not assist in controlling the vehicle. Turn on the TCS and the StabiliTrak/ESC systems, and the warning light turns off.

See *Traction Control/Electronic Stability Control* ⇨ 121.

Engine Coolant Temperature Warning Light




This light illuminates red.

This light tells you that the engine coolant has overheated.

Pay always attention to this indicator, because the excessive heat is one of the more dangerous factors to the health of your engine.

Caution

If engine coolant temperature is too high, stop vehicle, switch off engine. Danger to engine. Check coolant level.

Pre-Heat Light (If equipped)

This light comes on when the cold start system is active. See *Starting the Engine* ⇨ 110 for more information.

Tire Pressure Light (If equipped)

For vehicles with the Tire Pressure Monitor System (TPMS), this light comes on briefly when the engine is started. It provides information about tire pressures and the TPMS.

When the Light Is On Steady

This indicates that one or more of the tires are significantly underinflated.


A Driver Information Center (DIC) tire pressure message may also display. Stop as soon as possible, and inflate the tires to the pressure value shown on the Tire and Loading Information label. See *Tire Pressure* ⇨ 169.

When the Light Flashes First and Then Is On Steady

If the light flashes for about a minute and then stays on, there may be a problem with the TPMS. If the problem is not corrected, the light will come on at every ignition cycle. See *Tire Pressure Monitor Operation (If equipped)* ⇨ 170.

Engine Oil Pressure Light**Caution**

Lack of proper engine oil maintenance can damage the engine. Driving with the engine oil low can also damage the engine. The repairs would not be covered by the vehicle warranty. Check the oil level as soon as possible. Add oil if required, but if the oil level is within the operating range and the oil pressure is still low, have the vehicle serviced. Always follow the maintenance schedule for changing engine oil.



This light should come on briefly as the engine is started. If it does not come on, have the vehicle serviced by your dealer.

If the light comes on and stays on, it means that oil is not flowing through the engine properly. The vehicle could be low on oil and might have some other system problem. See your dealer.

Low Fuel Warning Light



This light comes on briefly when the ignition is turned on as a check to show it is working. It comes on when the fuel tank is low on fuel. The light will flash indicating that immediate replenishment is required. The light turns off when fuel is added. If it does not, have the vehicle serviced.

Security Light



The security light should come on briefly as the engine is started. If it does not come on, have the vehicle serviced by your dealer. If the system is working normally, the indicator light turns off.

If the light stays on and the engine does not start, there could be a problem with the theft-deterrent system. See *Immobilizer Operation (Key Access)* ⇨ 10 *Immobilizer Operation (Keyless Access)* ⇨ 11.

High-Beam On Light



This light illuminates blue. Illuminated when high beam is on and during headlight flash.

Lamps On Reminder



This light comes on when the exterior lamps are in use.

Cruise Control Light (If equipped)



The cruise control light is white when the cruise control is on and ready, and turns green when the cruise control is set and active.

See *Cruise Control (If equipped)*
⇨ 122 *Cruise Control*.

Hood Ajar Light



The light comes on and the hood part displays red if the hood is open or not securely latched.

Door Ajar Light



The light comes on when a door is open or not securely latched. Before driving, check that all doors are properly closed.

Trunk Ajar Light



For vehicles equipped with this light, it comes on when trunk is open or not securely latched. Before driving, check that trunk is properly closed.

Information Displays

Driver Information Center (DIC)

The Driver Information Center (DIC) is located in the instrument cluster and available as Model A or Model B.

Selecting functions

The menus and functions can be selected via the knob and buttons on the windshield wiper lever.



Press MENU to switch between the main menus or to return from a submenu to the next higher menu level.

Turn the knob to select a submenu of the main menu or to set a numeric value.

Press SET/CLR to select and confirm a function. Vehicle and service messages are popped up in the Driver Information Centre if required. Confirm messages by pressing SET/CLR.

Driver Information Center

Trip/Fuel Information Menu

The following list contains all possible Trip/Fuel Information pages. Some may not be available for your particular vehicle.

Turn the knob on the windshield wiper lever to select a page and follow the instructions given in the submenus:

- Speed
- Trip 1 / Average Fuel Economy
- Trip 2 / Average Fuel Economy
- Fuel range
- Instantaneous fuel economy
- Average vehicle speed

Speed

Digital display of the instantaneous speed.

Trip 1 and 2 / Average Fuel Economy

Trip odometer displays the current distance since a certain reset. The display also shows average fuel economy. To reset, press SET/CLR button for a few seconds while viewing this page.

Fuel range

Range is calculated from current fuel tank content and current consumption. The display shows average values. After refuelling, the range is updated automatically after a brief delay.

Instantaneous fuel economy

Display of the instantaneous consumption.

Average vehicle speed

Display of average speed. The measurement can be reset at any time. To reset, press SET/CLR button for a few seconds while viewing this page.

Vehicle Information Menu

The following list contains all possible Vehicle Information pages. Some may not be available for your particular vehicle.

Turn the knob on the windshield wiper lever to select a page and follow the instructions given in the submenus:

- Oil life (remaining percentage) – if equipped
- Tire pressure (if equipped)
- Coolant Temperature
- Speed warning
- Dimming Level

Oil life (remaining percentage) – if equipped

Indicates an estimate of the oil's useful life. The number in percentage means the remainder of current oil life. To reset, see "How to Reset the Engine Oil Life System" under *Engine Oil Life System* ⇨ 145.

Tire pressure (if equipped)

Checks tire pressure of all wheels during driving.

Coolant Temperature

Display of coolant temperature.

Speed warning

The speed warning function alarms when a set speed is exceeded.

To set the speed warning, press SET/CLR while the page is displayed. Turn the knob to adjust the value. Press SET/CLR to set the speed. If the selected speed limit is exceeded, a warning is displayed with a chime.

Dimming Level

To adjust the dimming level, turn on the position lamp or headlamp, press SET/CLR, turn the knob \triangle ∇ up or down to increase or decrease the dimming level.

ECO Menu

The following list contains all possible ECO Information pages. Some may not be available for your particular vehicle.

Turn the knob on the windshield wiper lever to select a page and follow the instructions given in the submenus:

- Consumption
- Top Consumers
- Consumption Trend
- Eco Index

Consumption

Displays average fuel economy, the best fuel economy over the selected distance, and a bar graph showing instantaneous fuel economy. Press SET/CLR to set the distance.

Top Consumers

List of top comfort consumers currently switched on is displayed in descending order. Fuel saving potential is indicated.

Consumption Trend

Displays the average consumption development over a distance of 50 km. Filled segments display the consumption in 5 km steps and shows the effect of driving behavior on fuel consumption.

Eco Index

The current fuel consumption is indicated on an economic scale. For economical driving, adapt driving style to keep the filled segments within the Eco area. The more segments are filled, the higher the fuel consumption. Simultaneously, the average consumption value is indicated.

Up-Shift Light (if equipped)



For vehicles with manual transmission, upshift indicator illuminates when a higher gear is recommended for fuel economy, avoiding to keep a high engine rotation. The lower engine rotation allow greater fuel economy.

Danger

The recommendation for upshift is only an aid to the driver and not substitute the driver attention. Choosing the right gear is the driver's responsibility and depends on the driving situation, such as overtaking, towing or hilly stretches.

Note

If Up-Shift light is not working, please see Chevrolet Dealer.

Vehicle Messages

Messages displayed on the DIC indicate the status of the vehicle or some action that may be needed to correct a condition. Multiple messages may appear one after another.

The messages that do not require immediate action can be acknowledged and cleared by pressing SEL/CLR. The messages that require immediate action cannot be cleared until that action is performed.

All messages should be taken seriously; clearing the message does not correct the problem. If a SERVICE message appears, see your dealer.

If there is a doubt about the message content, see a Chevrolet dealer.

Battery Voltage and Charging Messages

BATTERY SAVER ACTIVE

This message displays when the vehicle has detected that the battery voltage is dropping beyond a reasonable point. The vehicle begins reducing features to save the battery. At the point when feature reduction may be noticed, this message displays. Turn off unnecessary accessories to allow the battery to recharge.

Vehicle Personalization

The following are all possible vehicle personalization features. Depending on the vehicle, some may not be available.

To access the vehicle personalization menu:

1. Touch the Settings icon on the Home Page of the infotainment display.
2. Touch Vehicle to display a list of available options.
3. Touch to select the desired feature setting.

The menu may contain the following:

Climate and Air Quality

Touch and the following may display:

- Auto Fan Speed

Auto Fan Speed

This setting specifies the amount of airflow in the cabin when the climate control fan setting is Auto Fan.

Touch Low, Medium, or High.

Collision/Detection Systems

Touch and the following may display:

- Forward Collision System

- Side Blind Zone Alert
- Rear Camera Park Assist Symbols

Forward Collision System

Activates or deactivates Forward Collision Alert (FCA) and Forward Automatic Braking (FAB). The Off setting disables all FCA and FAB functions. With the Alert and Brake setting, both FCA and FAB are available. The Alert setting disables FAB. Touch Off, Alert, or Alert and Brake.

Side Blind Zone Alert

This setting will turn on or off the side mirror alerts to help driver avoid crashing during a lane-change maneuver.

Rear Camera Park Assist Symbols

This setting specifies if warning icons display on the camera view when the Parking Assist detects an object.

Comfort and Convenience

Touch and the following may display:

- Chime Volume
- Rain sense Wipers
- Auto Wipe in Reverse Gear

Chime Volume

This setting determines the chime volume level.

Touch the controls on the infotainment display to adjust the volume.

Rain sense Wipers

Activates or deactivates automatic wiping with rain sensor.

Auto Wipe in Reverse Gear


Auto wipe in reverse gear automatically turns on the rear window wiper when the vehicle is in Reverse and the front windshield wiper is performing.

Lighting

Touch and the following may display:

- Vehicle Locator Lights
- Exit Lighting

Vehicle Locator Lights

This setting flashes the headlamps of your vehicle when you press the  on the Remote Keyless Transmitter.

Touch Off or On.

Lighting After Exit

This setting specifies how long the headlamps stay on when you exit the vehicle and it is dark outside.

Touch Off, 30 Seconds, 60 Seconds, or 120 Seconds.

Power Door Locks

Touch and the following may display:

- Auto Door Lock
- Auto Door Unlock

Auto Door Lock

This setting specifies if doors will automatically lock when the vehicle speed becomes faster than 13 km/h (8 mph).

Touch Off or On.

Auto Door Unlock

This setting allows enable or disable the unlocking of all doors when the vehicle is shifted into P (Park).

Touch Off or All Doors.

Remote Lock and Unlock

Touch and the following may display:

- Remote Unlock Light
- Remote Lock Alerts
- Relock Doors Remotely
- Remote Window Operation
- Door Lock
- Key Left in Vehicle Alert

Remote Unlock Light Feedback

This setting flashes the exterior lamps when the vehicle is unlocked with the RKE transmitter.

Touch Off or Flash Lights.

Remote Lock Feedback

This setting specifies how the vehicle responds when the vehicle is locked with the RKE transmitter.

Touch Off, Lights and Horn, Lights Only, or Horn Only.

Relock Remotely Unlocked Doors

This setting will secure the vehicle if doors are not opened within certain time after the vehicle is unlocked by the RKE transmitter.

Touch Off or On.

Remote Window Operation

If equipped, this feature enables remote operation of the windows with the RKE transmitter. See *Remote Keyless Entry (RKE) System Operation (Keyless Access)* ↗ 4.

Touch Off or On.

Passive Door Lock

Passive Door Lock specifies if the vehicle will automatically lock, or lock and alert you after all the doors are closed, and you walk away from the vehicle with the Remote Keyless Entry transmitter.

Remote Left in Vehicle Alert

This feature sounds an alert when the RKE transmitter is left in the vehicle and the vehicle is not running.

Touch Off or On.

Lighting

Exterior Lighting

Exterior Lamp Controls	69
Exterior Lamps Off Reminder	69
Headlamp High/Low-Beam Changer	69
Flash-to-Pass	70
Daytime Running Lamps (DRL)	70
Automatic Headlamp System (If equipped)	70
Headlamp Leveling Control	70
Hazard Warning Flashers	71
Turn and Lane-Change Signals	72

Interior Lighting

Interior Lamp Controls	72
------------------------------	----

Lighting Features

Entry Lighting	73
Exit Lighting	73


Exterior Lighting


Exterior Lamp Controls




The exterior lamp control is on the turn signal lever.


Turn the control to the following positions:

 : Turns off the exterior lamps.

If equipped with AUTO function, the knob returns to the AUTO position after it is released. Turn to  again to reactivate the AUTO mode.

AUTO : Automatically turns the exterior lamps on and off, depending on outside lighting (if equipped).

 : Turns on the front and rear position lamps.

 : Turns on the headlamps.

Exterior Lamps Off Reminder

A warning chime sounds if the driver door is opened while the ignition is off and the exterior lamps are on.

Headlamp High/Low-Beam Changer



☰●: With the headlamps on, push the turn signal lever away from you and release, to turn the high beams on. To return to low beams, push the lever again or pull it toward you and release.

This indicator light ☰● turns on in the instrument cluster when the high-beam headlamps are on.

Flash-to-Pass

To flash the high beams, pull the turn signal lever toward you, and release.

Daytime Running Lamps (DRL)

DRL can make it easier for others to see the front of your vehicle during the day.

The dedicated DRL will come on when all of the following conditions are met.

For vehicles equipped with automatic headlamp system:

- The engine is on.
- The light sensor determines it is daytime.

For vehicles not equipped with automatic headlamp system:

- The engine is on.

- The exterior lamp control is in OFF.

The DRL turn off when the headlamps are turned on or the engine is off.

Automatic Headlamp System (If equipped)

When the exterior lamp control is set to AUTO and it is dark enough outside, the headlamps come on automatically.



There is a light sensor on top of the instrument panel. Do not cover the sensor.

The system may also turn on the headlamps when driving through a parking garage or tunnel.

If the vehicle is started in a dark garage, the automatic headlamp system comes on immediately. If it is light outside when the vehicle leaves the garage, there is a slight delay before the automatic headlamp system changes to the Daytime Running Lamps (DRL).

When it is bright enough outside, the headlamps will turn off or may change to DRL.

The automatic headlamp system turns off when the exterior lamp control is turned to ☰ or the ignition is off.

Headlamp Leveling Control

This lets the headlamp level be adjusted to suit the vehicle load. Correct adjustment of the headlamp level can reduce the glare for other drivers.

Turn the control to the position below according to the vehicle loading condition:


- 0 = Front seat occupied.
- 1 = All seats occupied.
- 2 = All seats occupied and load in the luggage compartment.
- 3 = Driver seat occupied and load in the luggage compartment.

Headlamp Leveling Manual Activation (Mechanical - If equipped)

1. Unlock the hood.
2. Open the hood.



3. Adjust the leveling directly on the both headlights, according to the previously specified load condition.

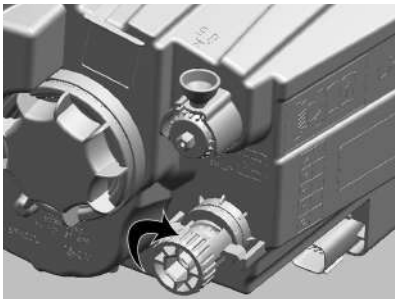

Note

It is important that the adjustments of the both headlights are made identically.



Headlamp Leveling Switch Activation (If equipped)

The adjustment of headlamp leveling is made on the lever.



Hazard Warning Flashers



 : Press  to make the front, rear and side turn signal lamps flash on and off. Press again to turn the flashers off.

Turn and Lane-Change Signals



Move the lever all the way up or down to signal a turn.

An arrow on the instrument cluster flashes in the direction of the turn or lane change.

Raise or lower the lever until the arrow starts to flash to signal a lane change. Hold it there until the lane change is completed. If the lever is briefly pressed and released, the turn signal flashes three times.

The turn and lane-change signal can be turned off manually by moving the lever back to its original position.

If after signaling a turn or lane change, the arrow flashes rapidly or does not come on, a signal bulb may be burned out.

Replace any burned out bulbs. If a bulb is not burned out, check the fuse. See *Fuses* ⇨ 160.

Interior Lighting


Interior Lamp Controls


Front Dome lamp




Type I

Operate switch:


: press to turn on the dome lamps.

: press to turn on the left reading lamp.

: press to turn on the right reading lamp.



Type II

Press the button  to turn on the dome lamps, and press again to turn off the lamps.

Rear Dome Lamp



If equipped, the rear dome lamp is in the headliner.

Operate switch:


⊙: press to turn off the rear dome lamp.

☒: the dome lamp will come on when doors are opened.

☑: press to turn on the rear dome lamp.

Lighting Features

Entry Lighting

When  is pressed on the Remote Keyless Entry (RKE) transmitter, some interior lights turn on. If equipped automatic headlamp system, some exterior lamps turn on at night or in areas of limited lighting, since the automatic headlamp function is on. See “Lighting” under *Vehicle Personalization* ⇨ 67.

Exit Lighting

Some interior lights comes on when the driver door is open after the ignition is turned off.

If equipped with automatic headlamp system, some exterior lamps comes on at the same conditions, since the automatic headlamp function is on. See “Lighting” under *Vehicle Personalization* ⇨ 67.

The exterior lamps turn off immediately by turning the exterior lamp control off.

Infotainment System

Introduction

Introduction	74
Overview	75
Steering Wheel Controls	75
Using the System	76

Radio

AM-FM Radio	77
Radio Reception	79
Fixed Mast Antenna	79
Multi-Band Antenna	79

Audio Players

Avoiding Untrusted Media Devices	79
USB Port	79
Bluetooth Audio (If equipped)	82

Phone

Bluetooth (Overview - If equipped)	83
Bluetooth (Pairing and Using the Phone) ..	84
Apple CarPlay and Android Auto (If equipped)	88

Settings

Settings	89
----------------	----

Introduction

Read the following pages to become familiar with the infotainment system features.



Warning

Taking your eyes off the road for too long or too often while using any infotainment feature can cause a crash. You or others could be injured or killed. Do not give extended attention to infotainment tasks while driving. Limit your glances at the vehicle displays and focus your attention on driving. Use voice commands whenever possible.

The infotainment system has built-in features intended to help avoid distraction by disabling some features when driving. These features may gray out when they are unavailable. Many infotainment features are also available through the instrument cluster and steering wheel controls.

Before driving:

- Become familiar with the system operation, controls on the center stack, and infotainment display.

- Set up the audio by presetting favorite stations, setting the tone, and adjusting the speakers.
- Set up cell phone and mobile device numbers in advance so they can be called easily by pressing a single control or by using a single voice command.

Note

- The purpose of the radio volume control knob is to provide ear protection for the user, as well as the preservation of vehicle loudspeakers.
- Health: Although the emission levels of the product are ruled, in case you see hearing aid or pacemaker, before using this device, refer to the manufactures and your physician. The exposure to high sound levels for a long time periods may cause damages to hearing.

Note

Navigation maps are available only through Android Auto and/or Apple CarPlay navigation apps.

Overview

Infotainment System


The infotainment system is controlled by using the infotainment display, the controls on the center stack, steering wheel controls.



1. :
 - Press to go to the Home Page.
2. :
 - Radio: Press and release to fast seek the previous strongest station.
 - USB/Music/Pictures: Press to go to the previous content. Press and hold to fast rewind.

3. :
 - When off, press to turn the system on. Press and hold to turn off.
 - When on, press to mute the system and display a status pane. Press again to unmute the system.
 - Turn to decrease or increase the volume.
4. :
 - Radio: Press and release to fast seek the next strongest station. Press and hold to go to the next strongest station or channel.
 - USB/Music/Pictures: Press to go to the next content. Press and hold to fast forward.
5. :
 - Press and release to access the phone screen, answer an incoming call, or access the device home screen.

Steering Wheel Controls

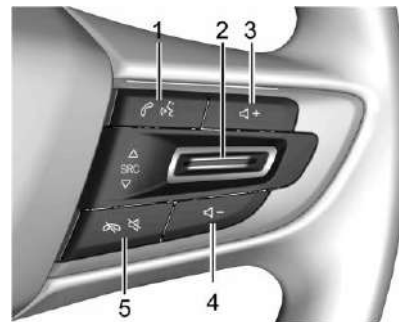

- 1 = / : For vehicles with Bluetooth or OnStar, press to interact with those systems and to accept an incoming call.
- 2 = : Press to select a source or toggle to change favorite stations.
- 3 and 4 = / : Press + to increase the volume. Press - to decrease the volume.
- 5 = / : Press to silence the vehicle speakers only. Press again to turn the sound on. For vehicles with Bluetooth or OnStar systems, press to reject an incoming call, or to end a current call.

Using the System

Infotainment Display Icons

Infotainment display icons show when available. When a function is unavailable, the icon may gray out. When a function is selected, the icon may highlight.

Audio

Touch the Audio icon to display the active audio source page. Examples of available sources are AM, FM, MyMedia, USB, and Bluetooth.

Phone

Phone icon to display the Phone main page. See *Bluetooth (Overview - If equipped)* ⇨ 83 *Bluetooth (Pairing and Using the Phone)* ⇨ 84.

Settings

Touch the Settings icon to display the Settings menu. See *Settings* ⇨ 89.

Apple CarPlay

Touch the Apple CarPlay icon to activate Apple CarPlay after a supported device is connected. See *Apple CarPlay and Android Auto (If equipped)* ⇨ 88.

Android Auto

Touch the Android Auto icon to activate Android Auto after a supported device is connected. See *Apple CarPlay and Android Auto (If equipped)* ⇨ 88.

OnStar Services

If equipped, touch the OnStar icon to display the OnStar Services and Account pages.

Climate

If equipped, touch the Climate icon to display the Climate main page.


Shortcut Tray

The shortcut tray is near the bottom of the display. It shows up to four applications.

Infotainment Gestures


Use the following finger gestures to control the infotainment system.

Touch/Tap

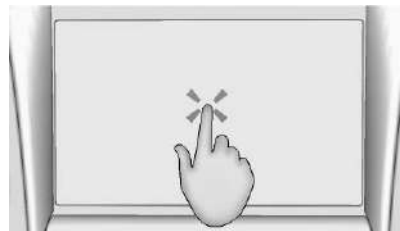


Touch/Tap is used to select an icon or option, activate an application.


Touch and Hold

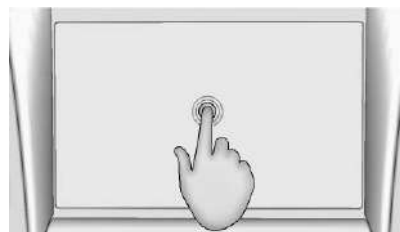

Touch and hold can be used to move or delete an application.

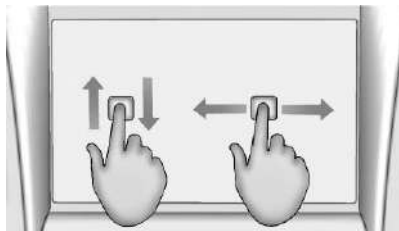Drag

Drag is used to move applications on the Home Page, or to pan the map. To drag the item, it must be held and moved along the display to the new location. This can be done up, down, right, or left. This feature is only available when vehicle is parked and not in motion.

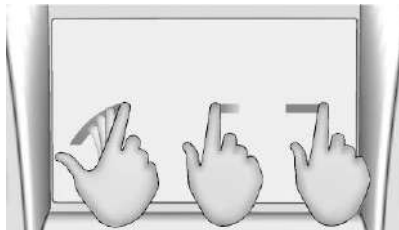Fling or Swipe

Fling or swipe is used to scroll through a list, pan the map, or change page views. Do this by placing a finger on the display then moving it rapidly up and down or right and left.

Cleaning High Gloss Surfaces and Vehicle Information and Radio Displays


For vehicles with high gloss surfaces or vehicle displays, use a microfiber cloth to wipe surfaces. Before wiping the surface with the microfiber cloth, use a soft bristle brush to remove dirt that could scratch the surface. Then use the microfiber cloth by gently rubbing to clean. Never use window cleaners or solvents. Periodically hand wash the microfiber cloth separately, using mild soap. Do not use bleach or fabric softener. Rinse thoroughly and air dry before next use.

Radio**AM-FM Radio****Playing the Radio**

From the Home Page, touch the Audio icon to display the active audio source page. Choose from the three most recently used sources listed at the left side of the display or touch

the More icon to display a list of available sources. Examples of available sources are AM, FM and Bluetooth.

Infotainment System Sound Menu

From any of the audio source main pages, touch  to display the following:

Equalizer : Touch to adjust Bass, Midrange, and Treble using the options on the infotainment display.

Fade/Balance : Touch to adjust by using the controls on the infotainment display or by tapping/dragging the crosshair.

Finding a Station

Seeking a Station




From the AM, FM option, touch or on the infotainment display to search for the previous or next strong station or channel.

Browsing Stations

From the AM, FM display, touch to list all available stations or channels. Navigate up and down through all stations by scrolling the list. Touch the station or channel you want to listen to. Touch to save the station or channel as a favorite.

Touch Update Station List to update the active stations in your area.

Direct Tune

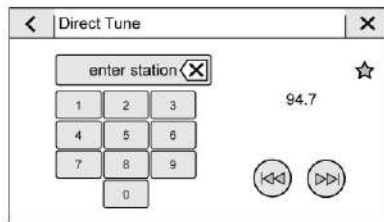

Access Direct Tune by touching the on the infotainment display to bring up the keypad.

Navigate up and down through all frequencies using or . Directly enter a station or channel using the keypad. When a new station or channel is entered, the information about that station or channel displays on the right side. This information will update with each new valid frequency. Touch to save the station as a favorite.

The keypad will gray out entries that do not contribute to a valid frequency and will automatically place a decimal point within the frequency number.

Touch (X) to delete one number at a time. Touch and hold (X) to delete all numbers.

A valid AM or FM station will automatically tune to the new frequency but not close the Direct Tune display. Touch the Back icon or on the infotainment display to exit out of Direct Tune.

The tune arrows on the right side of the Direct Tune display tunes through the complete station list one station step at a time per touch. A touch and hold advances through stations quickly.

Storing Radio Station Favorites

Favorites show in the area at the top of the display.

AM, FM Radio Stations : Touch and hold a preset slot to save the current station as a favorite. Touch a saved favorite to recall a favorite station.

Favorites can also be stored by touching in a station list. This will highlight indicating that it is now saved as a favorite.

The number of favorites displayed is automatically adjusted by default, but can be manually adjusted in Settings in the System tab under Favorites and then Set Number of Audio Favorites. It can also be adjusted in Settings in the Apps tab under Audio and then Set Number of Audio Favorites.

Radio Reception

Unplug electronic devices from the accessory power outlets if there is interference or static in the radio.

FM

FM signals only reach about 16 to 65 km (10 to 40 mi). Although the radio has a built-in electronic circuit that automatically works to reduce interference, some static can occur, especially around tall buildings or hills, causing the sound to fade in and out.

AM

The range for most AM stations is greater than for FM, especially at night. The longer range can cause station frequencies to interfere with each other. Static can also occur when things

like storms and power lines interfere with radio reception. When this happens, try reducing the treble on the radio.

Mobile Device Usage

Mobile device usage, such as making or receiving calls, charging, or just having the mobile device on may cause static interference in the radio. Unplug the mobile device or turn it off if this happens.

Fixed Mast Antenna

The AM-FM antenna is located on the roof of the vehicle.

To avoid damages to the antenna or roof panel, be sure to remove it before entering into a car wash or a place with a low ceiling.

Driving through an automatic car wash without removing the antenna could damage it.

To remove the antenna, turn it counterclockwise. To replace the antenna, turn it clockwise until hand tightened.

Multi-Band Antenna

If equipped, the roof antenna is for AM, FM, Onstar, and GPS (Global Positioning System). Keep clear of obstructions for clear reception. If the vehicle has a sunroof, and it is open, reception can also be affected.

Audio Players

Avoiding Untrusted Media Devices

When using media devices such as USB devices, and mobile devices, consider the source. Untrusted media devices could contain files that affect system operation or performance. Avoid use if the content or origin cannot be trusted.

USB Port

Audio stored on a USB device may be listened, since your vehicle is equipped with Chevrolet MyLink.

This vehicle has a USB port in the front console. This port is for data.

Do not use the USB port to charge USB accessory equipment. The heat generated may cause performance issues or damage.

Playing from a USB

A USB mass storage device can be connected to the USB port.

Audio extensions supported by the USB are:

- MP3
- MP4
- M4A
- M4B
- AAC
- 3GP
- WAV


USB MP3 Player and USB Devices


The USB MP3 players and USB devices connected must comply with the USB Mass Storage Class specification (USB MSC).

To play a USB device:

1. Connect the USB.
2. Touch Audio from the Home Page.
3. Touch More and then touch the USB device.

Use the following when playing an active USB source:

 : Touch to play the current media source.

 : Touch to pause playback of the current media source.

 :


- Touch to seek to the beginning of the current track. Touch twice to go to the previous track.
- Touch and hold to reverse quickly through playback. Release to return to playing speed. Elapsed time displays.

 :

- Touch to seek to the next track.
- Touch and hold to advance quickly through playback. Release to return to playing speed. Elapsed time displays.

Shuffle : Touch the shuffle icon to play music in random order.


USB Sound Menu

See "Infotainment System Sound Menu" under *AM-FM Radio*  77.

USB Browse Menu

When a list of songs, albums, artists, or other types of media displays, the up and down arrows and A-Z appear on the left side. Select A-Z to view a display that will show all letters of the alphabet and select the letter to go to.

Touch the up and down arrows to move the list up and down.

Touch  and the following may display:

Playlists:

1. Touch to view the playlists stored on the USB.
2. Touch a playlist to view the list of all Songs in that playlist.
3. Touch a song from the list to begin playback.

Supported Playlist extensions are m3u, pls.

Artists:

1. Touch to view the list of artists stored on the USB.
2. Touch an artist name to view a list of all albums by the artist.
3. To select a song, touch All Songs or touch an album and then touch a song from the list.

Songs:

1. Touch to display a list of All Songs on the USB.
2. To begin playback, touch a song from the list.

Albums:

1. Touch to view the albums on the USB.
2. Touch the album to view a list of All Songs on the album.
3. Touch a song from the list to begin playback.

Genres:

1. Touch to view the genres on the USB.
2. Touch a genre to view a list of artists.
3. Touch an artist to view albums by that artist.
4. Touch an album to view songs on the album.
5. Touch a song to start playback.

iTunes Radio : Touch to view iTunes Radio on the iPhone to get a list of stations.

Compilations : Touch to view the Compilations on the USB.

Composers:

1. Touch to view the composers on the USB.
2. Touch a Composer to view a list of albums by that composer.
3. Touch an album or All Songs to view a list of songs.
4. Touch a song from the list to begin playback.

Folders:

1. Touch to view the directories on the USB.
2. Touch a folder to view a list of all files.
3. Touch a file from the list to begin playback.

Podcasts : Touch to view the podcasts on the USB and get a list of podcast episodes.

Audiobooks:

1. Touch to view the audiobooks stored on the USB.
2. Touch an audiobook to get a list of chapters.
3. Touch the chapter from the list to begin playback.

File System and Naming

File systems supported by the USB are:

- FAT32
- HFS+

The songs, artists, albums, and genres are taken from the file's song information and are only displayed if present. The radio displays the file name as the track name if the song information is not available.

Storing and Recalling Media Favorites

To store media favorites, touch Browse to display a list of media types.

Select from one of the following Browse options to save a favorite:

Playlists : Touch ☆ next to any playlist to store the playlist as a favorite. Touch a saved favorite to recall a favorite playlist. The first song in the playlist begins to play.

Artists : Touch ☆ next to any artist to store the artist as a favorite. Touch a saved favorite to recall a favorite artist. The first song in the artist list begins to play.

Songs : Touch ☆ next to any song to store the song as a favorite. Touch a saved favorite to recall a favorite song.

Albums : Touch ☆ next to any album to store the album as a favorite. Touch a saved favorite to recall a favorite album. The first song in the album list begins to play.

Genres : Touch ☆ next to any genre to store the genre as a favorite. Touch a saved favorite to recall a favorite genre. The first song of the genre begins to play.

Podcasts : Touch ☆ next to any podcast to store the podcast as a favorite. Touch a saved favorite to recall a favorite podcast. The podcast begins to play.

Audiobooks : Touch ☆ next to any audiobook to store the audiobook as a favorite. Touch a saved favorite to recall a favorite audiobook. The first chapter in the audiobook begins to play.

Media Playback and Mute

USB playback will be paused if the system is muted. If the steering wheel mute control is pressed again, playback will resume.

If the track is changed while in mute, playback resumes and audio will unmute.

Bluetooth Audio (If equipped)

Music may be played from a paired Bluetooth device. See *Bluetooth (Overview - If equipped)* ⇨ 83 *Bluetooth (Pairing and Using the Phone)* ⇨ 84 for help pairing a device.

Volume and song selection may be controlled by using the infotainment controls, steering wheel controls or the mobile device. If Bluetooth is selected and no sound is present, check the volume setting on both your mobile device and the infotainment system.

Music can be launched by touching Bluetooth from the recent sources list on the left of the display or by touching More and then touching the Bluetooth device.

To play music via Bluetooth:

1. Power on the device, and pair to connect the device.
2. Once paired, touch Audio from the Home Page, then touch Bluetooth from the recent sources list on the left of the display.

Bluetooth Sound Menu

See "Infotainment System Sound Menu" under *AM-FM Radio* ⇨ 77.

Manage Bluetooth Devices

From the Home Page:

1. Touch Audio.
2. Touch More.
3. Touch Bluetooth.
4. Touch Devices to add or delete devices.

When touching Bluetooth, the system may not be able to launch the audio player on the connected device to start playing. When the vehicle is not moving, use the mobile device to begin playback.

All devices launch audio differently. When selecting Bluetooth as a source, the system may show as paused on the display. Press play on the device or touch ▷ on the display to begin playback.

Browse functionality will be provided where supported by the Bluetooth device.

Some smartphones support sending Bluetooth music information to display on the system. When the system receives this information, it will check to see if any is available and display it.

OnStar System

4G LTE

If equipped with 4G LTE, some devices, such as smartphones, tablets, and laptops, can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

See “Web address” on *OnStar Additional Information* ⇨ 199 for vehicle availability, details, and system limitations. Service and connectivity may vary by make, model, year, carrier, availability, and conditions. 4G LTE service is available in select markets. 4G LTE performance is based on industry averages and vehicle systems design. Some services require a data plan.


The OnStar App

If equipped, the infotainment system has OnStar controls in the embedded OnStar app on the Home Page. To open the app, select the OnStar icon on the Home Page. Features vary by region and model. Features are subject to change.


Services


The Services tab demonstrates the default view for the app. Use this page to launch the available OnStar services. Select a service to open its display. Touch Wi-Fi to launch the connections manager.

Account

The Account tab displays a snapshot of the account linked with the vehicle. If there is no such account, this tab will show all values as ——. The  “Advisor Call” will be active even if there is no active account.

Advisor Call

Selecting Advisor Call is the same as pressing .

The  option in the upper right corner of the screen does not end the call, but returns to the previous display.

Wi-Fi Hotspot

Touch to display the Settings page, which shows the configurations for the vehicle hotspot and allows them to be changed. For more information, see “Web address” on *OnStar Additional Information* ⇨ 199.

Phone

Bluetooth (Overview - If equipped)

The Bluetooth-capable system can interact with mobile devices, allowing:

- Placement and receipt of calls in a hands-free mode.
- Sharing of the device's address book or contact list with the vehicle.

To minimize driver distraction, before driving, and with the vehicle parked:

- Become familiar with the features of the mobile device. Organize the phone book and contact lists clearly and delete duplicate or rarely used entries. If possible, program speed dial or other shortcuts.
- Review the controls and operation of the infotainment system.
- Pair mobile device(s) to the vehicle. The system may not work with all mobile devices. See “Pairing” later in this section.



Vehicles with a Bluetooth system can use a Bluetooth-capable mobile device with a Hands-Free Profile to make and receive phone



calls. The system can be used while the ignition is on or in ACC/ACCESSORY. The range of the Bluetooth system can be up to 9 m. Not all mobile devices support all functions and not all mobile devices work with the Bluetooth system. See my.chevrolet.com for more information about compatible mobile devices.

Controls

Use the controls on the center console and the steering wheel to operate the Bluetooth system.

Steering Wheel Controls

 /  : Press to answer incoming calls on your connected Bluetooth mobile device.

 /  : Press to end a call, decline a call, or cancel an operation. Press to mute or unmute the infotainment system when not on a call.

Infotainment System Controls

For information about how to navigate the menu system using the infotainment controls, see *Overview* ⇨ 75.

PHONE : Touch the Phone icon on the Home Page to enter the phone main menu.

Audio System

When using the Bluetooth mobile device system, sound comes through the vehicle's front audio system speakers and overrides the audio system. The volume level while on a mobile device call can be adjusted by pressing the steering wheel controls or the volume control on the center console. The adjusted volume level remains in memory for later calls. The volume cannot be lowered beyond a certain level.

Bluetooth (Pairing and Using the Phone)

Pairing

A Bluetooth-enabled mobile device must be paired to the Bluetooth system and then connected to the vehicle before it can be used. See the mobile device manufacturer's user guide for Bluetooth functions before pairing the cell phone.

Pairing Information

- If no mobile device has been connected, the Phone main page on the infotainment display will show the Connect Phone option. Touch this option to connect.

Another way to connect is to touch the Phone icon on the shortcut tray near the bottom of the display and then touch Add Phone.

- A Bluetooth smartphone with music capability can be paired to the vehicle as a smartphone and a music player at the same time.
- Up to 10 devices can be paired to the Bluetooth system.
- The pairing process is disabled when the vehicle is moving.
- Pairing only needs to be completed once, unless the pairing information on the cell phone changes or the cell phone is deleted from the system.
- If multiple paired cell phones are within range of the system, the system connects to the paired cell phone that is set to First to Connect. If there is no cell phone set to First to Connect, it will link to the cell phone which was used last. To link to a different paired cell phone, see "Linking to a Different Phone" later in this section.

Pairing a Phone

1. Make sure Bluetooth has been enabled on the cell phone before the pairing process is started.
2. Touch the Phone icon on the Home Page or the phone icon on the shortcut tray near the bottom of the display.
3. Touch Phones at the top of the infotainment display. There is also a Connect Phones option in the middle of the Phone display which will shortcut to the Phone List menu.
4. Touch Connect Phone.
5. Select the vehicle name shown on your cell phone's Bluetooth Settings list.
6. Follow the instructions on the cell phone to confirm the six-digit code showing on the infotainment display and touch Pair. The code on the cell phone and infotainment display will need to be acknowledged for a successful pair.
7. Start the pairing process on the cell phone to be paired to the vehicle. See the cell phone manufacturer's user guide for information on this process. Once the cell phone is paired, it will show under Connected.

8. If the vehicle does not appear on your cell phone, there are a few ways to start the pairing process over.
 - Turn the cell phone off and then back on.
 - Go back to the beginning of the Phone menus on the infotainment display and restart the pairing process.
 - Reset the cell phone, but this step should be done as a last-effort.
9. If the cell phone prompts to accept connection or allow phone book download, touch Always Accept and Allow. The phone book may not be available if not accepted.
10. Repeat Steps 1–8 to pair additional cell phones.

First Paired Phone Connected

If multiple paired cell phones are within the range of the system, the system connects to the paired cell phone that is set as First to Connect. To enable a paired cell phone as the First to Connect phone:

1. Make sure the cell phone is turned on.
2. Touch Settings, then touch System.

3. Touch Phones to access all paired and all connected cell phones and mobile devices.
4. Touch the edition icon to the right of the cell phone to open the cell phone's settings menu.
5. Touch the First to Connect option, to enable the setting for that device.

Cell phones and mobile devices can be added, removed, connected, and disconnected. A sub-menu will display whenever a request is made to add or manage cell phones and mobile devices.

Secondary Phone

A phone can be enabled as a Secondary Phone by touching the edition icon to the right of the paired phone name to open the phone settings menu. If a phone is enabled as a Secondary Phone, it can connect simultaneously alongside another Bluetooth mobile device. In doing so, the Secondary Phone will be labeled as Incoming Calls. This means the mobile device can only receive calls. The Address Book of a Secondary Phone will not be available and hands-free outgoing calls cannot be placed using this phone.

If needed, touch the Secondary Phone while in the Phones list to swap it into the Outgoing and Incoming role. This role makes it possible to place outgoing calls from the Contacts and Recents list. This action of swapping roles will disconnect what was labeled as only receiving calls until another Secondary Phone is enabled.

Listing All Paired and Connected Phones

1. Touch the Phone icon on the Home Page or the phone icon on the shortcut tray near the bottom of the display.
2. Select Phones.

Disconnecting a Connected Phone

1. Touch the Phone icon on the Home Page.
2. Select Phones.
3. Touch the edition icon next to the connected cell phone or mobile device to show the cell phone's or mobile device's information display.
4. Touch Disconnect.

Deleting a Paired Phone

1. Touch the Phone icon on the Home Page or the phone icon on the shortcut tray near the bottom of the display.

2. Select Phones.
3. Touch the edition icon next to the connected cell phone to display the cell phone's or mobile device's information display.
4. Touch Forget Phone.

Linking to a Different Phone

To link to a different cell phone, the new cell phone must be in the vehicle and paired to the Bluetooth system.

1. Touch the Phone icon on the Home Page or the phone icon on the shortcut tray near the bottom of the display.
2. Select Phones.
3. Touch the new cell phone to link to from the not connected phone list. See *Settings* ⇨ 89 for more information about setting the device as the First to Connect or as a Secondary Phone.

Switching to Handset or Handsfree Mode

To switch between handset or handsfree mode:

- While the active call is hands-free, touch the Phone option to switch to the handset mode.

The mute icon will not be available nor functional while Phone mode is active.

- While the active call is on the handset, touch the Phone option to switch to the hands-free mode.

Making a Call Using Contacts and Recent Calls

Calls can be made through the Bluetooth system using personal cell phone contact information for all cell phones that support the Phone Book feature. Become familiar with the cell phone settings and operation. Verify the cell phone supports this feature.

The Contacts menu accesses the phone book stored in the cell phone.



The Recents menu accesses the recents call list from your cell phone.

To make a call using the Contacts menu:

1. Touch the Phone icon on the Home Page.
2. Touch Contacts.
3. The Contacts list can be searched by using the first character. Touch A-Z on the infotainment display to scroll through the list of names.
Touch the name to call.


4. Select the desired contact number to call.

To make a call using the Recents menu:

1. Touch Phone on the Home Page.
2. Touch Recents.
3. Press  or  to view recent incoming, dialed or missed calls.

Making a Call Using the Keypad

To make a call by dialing the numbers:

1. Touch the Phone icon on the Home Page.
2. Touch Keypad and enter a cell phone number.
3. Touch  on the infotainment display to start dialing the number.

Searching Contacts Using the Keypad

To search for contacts using the keypad:



1. Touch the Phone icon on the Home Page.
2. Touch Keypad and enter partial cell phone numbers or contact names using the digits on the keypad to search.
Results will show on the right side of the display. Touch one to place a call.

Accepting or Declining a Call

When an incoming call is received, the infotainment system mutes and a ring tone is heard in the vehicle.



Accepting a Call

There are two ways to accept a call:

- Press  /  on the steering wheel controls.
- Touch Answer on the infotainment display.

Declining a Call



There are two ways to decline a call:

- Press  /  on the steering wheel controls.
- Touch Ignore on the infotainment display.



Call Waiting

Call waiting must be supported on the Bluetooth cell phone and enabled by the phone's service provider to work.

Accepting a Call

- Press  /  on the steering wheel controls.
- Touch Switch on the infotainment display.

Declining a Call

- Press  /  on the steering wheel controls.
- Touch Ignore on the infotainment display.

Switching Between Calls (Call Waiting Calls Only)

To switch between calls, touch Phone on the Home Page to display Call View. While in Call View, touch the call information of the call on hold to change calls.




Three-Way Calling

Three-way calling must be supported on the Bluetooth cell phone and enabled by the phone's service provider to work.

To start a three-way call while in a current call:

1. In the Call View, touch Add Call to add another call.
2. Initiate the second call by selecting from Recents, Contacts, or Keypad.
3. When the second call is active, touch the merge icon to conference the three-way call together.

Ending a Call

- Press  /  on the steering wheel controls.
- Touch  on the infotainment display, next to a call to end only that call.

Dual Tone Multi-Frequency (DTMF) Tones

The in-vehicle Bluetooth system can send numbers during a call. This is used when calling a menu-driven phone system. Use the Keypad to enter the number.

Apple CarPlay and Android Auto (If equipped)

Android Auto and/or Apple CarPlay capability may be available through a compatible smartphone.


To use Android Auto and/or Apple CarPlay:

1. Download the Android Auto app to your smartphone from Google Play store may be required. There is no app required for Apple CarPlay.
2. Connect your Android phone or Apple iPhone by using the following options:

- Compatible smartphone USB cable and plugging into a USB data port. For best performance, use the device's factory-provided USB cable. Aftermarket or third-party cables may not work.
 - Wireless phone projection via Bluetooth (if equipped). After first connection via Bluetooth, mobile wireless phone projection for Android Auto and/or Apple Car Play should be available.
3. The first connection must be done with the vehicle parked via cable. When the phone is first connected to activate Apple CarPlay or Android Auto, the message "Device Projection Privacy Consent" will appear.
 - Touch Continue to launch Apple CarPlay or Android Auto.
 - Touch Disable to remove Apple CarPlay and Android Auto capability from the vehicle Settings menu. Other functions may still work.



The Android Auto and Apple CarPlay icons on the Home Page will illuminate depending on the smartphone. Android Auto and/or Apple CarPlay may automatically launch upon USB

and/or Bluetooth connection. If not, touch the Android Auto or Apple Carplay icon on the Home Page to launch.

Press  on the center console to return to the Home Page.

For further information on how to set up Android Auto and Apple CarPlay in the vehicle, see your dealer for details.

Android Auto is provided by Google and is subject to Google's terms and privacy policy. Apple CarPlay is provided by Apple and is subject to Apple's terms and privacy policy. Data plan rates apply. For Android Auto support see <https://support.google.com/androidauto>. For Apple CarPlay support see www.apple.com/ios/carplay/. Apple or Google may change or suspend availability at any time. Android Auto, Android, Google, Google Play, and other marks are trademarks of Google Inc.; Apple CarPlay is a trademark of Apple Inc.

Press  on the center console to exit Android Auto or Apple CarPlay. To enter back into Android Auto or Apple CarPlay, press and hold  on the center console.

Apple CarPlay and Android Auto can be disabled from the infotainment system. To do this, touch Home, Settings, and then touch the Apps tab along the top of the display. Use the On/Off toggled to turn off Apple CarPlay or Android Auto.




Settings

Some of the settings may not be available, depending on the vehicle content.

The settings menu may be organized into three categories.

Select the desired category by touching System, Apps, or Vehicle.

To access the menus:

1. Touch the Settings icon on the Home Page on the infotainment display.
2. Touch the desired category to display a list of available options.
3. Touch to select the desired feature setting.
4. Touch  or  to turn off or on a feature.
5. Touch  to go to the top level of the Settings menu.

System

The menu may contain the following:

Time / Date

Use the following features to set the clock:

- **Automatic Time and Date:** Touch On to have the time and date automatically set. When this feature is off, the time and date can be manually set.
- **Set Time:** Touch to manually set the time using the controls on the infotainment display.
- **Set Date:** Touch to manually set the date using the controls on the infotainment display.
- **Use 24-hour Format:** Touch to specify the clock format shown.
Touch Off or On.

Language

This will set the display language used on the infotainment display.

Touch Language and select the appropriate language.

Phones

Touch to connect, disconnect, add, or delete a phone or mobile device

Wi-Fi Networks (If equipped)

This will show connected and available Wi-Fi networks.

If a 4G LTE data package is not active on the vehicle, the infotainment system can be connected to an external protected Wi-Fi network, such as a mobile device or home hotspot, to utilize connected services.

Wi-Fi Router (If equipped)

Touch and the following may display:

- **Wi-Fi Services:** This allows devices to use the vehicle hotspot.
Touch the controls on the infotainment display to disable or enable.
- **Wi-Fi Name:** Touch to change the vehicle Wi-Fi name.
- **Wi-Fi Password:** Touch to change the vehicle Wi-Fi password.
- **Connected Devices:** Touch to show connected devices.

- **Share Hotspot Data:** Touch Enable to allow devices to use the vehicle hotspot and its data, or touch Disable to allow devices to only use the vehicle hotspot.

Privacy

Touch and the following may display:

- **Location Services:** This setting enables or disables sharing of vehicle location outside the vehicle. Emergency services will not be affected when Off is selected.

Display

Touch and the following may display:

- **Mode** controls the screen appearance of the navigation map view and any change color schemes depending on the time of day. Touch to Auto to allow the screen to adjust based on ambient light levels.
- **Turn Display Off.** Touch to turn the display off. Touch anywhere on the infotainment display area or any control on the center stack again to turn the display on.

Sound Alerts

Touch and the following may display:

- **Maximum Startup Volume:** This feature adjusts the maximum volume of the infotainment system when you start your vehicle. To set the maximum startup volume, touch the controls on the infotainment display to increase or decrease.
- **Touch Sound Alert:** This setting determines if a sound plays when touching the infotainment display or radio controls. This feature can be turned off or on.

Favorites

Touch and the following may display:

- **Manage Favorites:** Touch to display a list of Audio, Mobile Devices. Favorites can be moved, renamed, or deleted. To move, touch and hold on the favorite, and then drag up or down to rearrange the position.
- **Set Number of Audio Favorites:** Touch to select how many favorites pages can be viewed from the audio application. The Auto setting will automatically adjust this

number based on the number of favorites you have saved. Touch Auto, 5, 10, 15, 20, 25, 30, 35, or 40.

Updates

If equipped, the infotainment system can download and install select software updates over a wireless connection. The system will prompt for certain updates to be downloaded and installed. There is also an option to check for updates manually.

To manually check for updates, touch Settings on the Home Page, followed by Software Information, and then Updates. Follow the on-screen prompts. The steps to check for, download and install updates may vary by vehicle.

Downloading Over-the-Air vehicle software updates requires internet connectivity, which can be accessed through the vehicle's built-in 4G LTE connection, if equipped and active. If required, data plans are provided by a third party. Optionally, a secure Wi-Fi hotspot such as a compatible mobile device hotspot, home hotspot or public hotspot can be used. Applicable data rates may apply.

To connect the infotainment system to a secured mobile device hotspot, home hotspot, or a public hotspot, touch Settings on the Home Page, select the System tab, followed by Wi-Fi Networks. Select the appropriate Wi-Fi network, and follow the on-screen prompts.

Download speeds may vary. On most compatible mobile devices, activation of the Wi-Fi hotspot is in the Settings menu under Mobile Network Sharing, Personal Hotspot, Mobile Hotspot or similar. Availability of Over-the-Air software updates varies by vehicle and country.

Preferences

Touch the controls on the infotainment display to disable or enable the download of new updates in the background.

About

Touch to view the infotainment system software information.

Return to Factory Settings

Touch and the following may display:

- **Reset Vehicle Settings:** Resets all vehicle settings for the current user.
Touch Reset or Cancel.

- **Erase Settings and Personal Data:** Erases app data settings, user profiles, and personal data including mobile device data.
Touch Erase or Cancel.

Apps

The menu may contain the following:

Android Auto

This feature allows you to interact directly with your mobile device on the infotainment display. See *Apple CarPlay and Android Auto (If equipped)* ⇨ 88.

Touch Off or On.

Apple CarPlay

This feature allows you to interact directly with your mobile device on the infotainment display. See *Apple CarPlay and Android Auto (If equipped)* ⇨ 88.

Touch Off or On.

Audio

Depending on the current audio source, different options will be available.

Touch and the following may display:

- **Sound Settings:** Touch to adjust Equalizer, Fade/Balance, or Sound Mode. See “Infotainment System Sound Menu” in *AM-FM Radio* ⇨ 77.
- **Auto Volume:** This feature adjusts the volume based on the vehicle speed.
Touch Off, Low, Medium-Low, Medium, Medium-High, or High.
- **Manage Favorites:** See Favorites.
- **Set Number of Audio Favorites:** See Favorites.
- **RDS:** This allows the Radio Data System (RDS) to be turned on or off.
Touch the controls on the infotainment display to disable or enable.
- **Manage Devices:** Select to connect to a different phone, disconnect a phone, or delete a phone.
- **Album Art:** Enable or Disable the Album Art feature.
- **Reset Music Index:** This allows the music index to be reset if you are having difficulty accessing all of the media content on your device.
Touch Yes or No.

Phone

Touch and the following may display:

- **My Number:** Displays the cell phone number of the Bluetooth connected device.
- **Active Call View:** Shows active call display when answering a call.

Touch the controls on the infotainment display to disable or enable.

- **Sort Contacts:** Touch to sort by first or last name.
- **Re-sync phone Contacts:**
This allows the device contacts to re-sync if you are having difficulty accessing all of the contacts on your cell phone.

Vehicle

This menu allows adjustment of different vehicle features. See “Vehicle Personalization” in the owner’s manual.

Climate Controls

Climate Control Systems

Climate Control Systems	93
Automatic Climate Control System (If equipped)	96

Air Vents


Air Vents	98
-----------------	----

Maintenance

Air Intake	99
Air Conditioning Regular Operation	99
Service	99

Climate Control Systems

The heating, cooling, and ventilation in the vehicle can be controlled with this system.

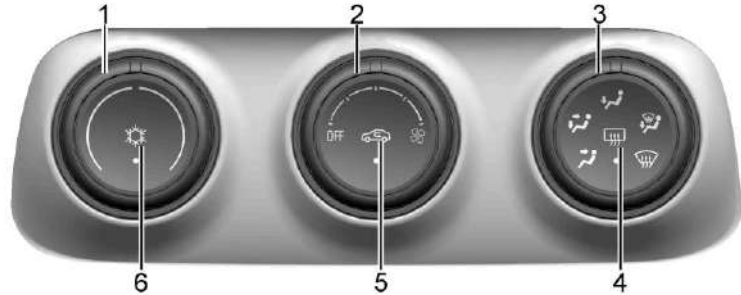

1. Driver and Passenger Temperature Controls
2. Fan Speed Control
3. Air Delivery Mode Control
4. Rear Window Defogger
5. Air Recirculation Mode
6. Cooling Mode

Manual Operation


Fan Speed Control: Turn the selector clockwise or counterclockwise to increase or decrease the fan speed. Rotate counterclockwise to the end to turn off the fan.


Driver and Passenger Temperature Controls: Turn the selector clockwise or counterclockwise to increase or decrease the temperature.


Blue scale to cold air.


Red scale to hot air.


Air Delivery Mode Control: Turn the selector to change the direction of the airflow:

: Air is directed to the instrument panel outlets.


: Air is directed to the instrument panel outlets and the floor outlets.

: Air is directed to the floor outlets.


: Clears the windows of fog or moisture. Air is directed to the windshield and the floor outlets.

: Clears the windshield of fog or frost more quickly. Air is directed to the windshield.

For best results, clear all snow and ice from the windshield before defrosting.


: Press the button to switch on cooling. Activation is indicated by the LED in the button. The cooling system is only functional when the engine is running and the fan is switched on.

Press the button again to switching off cooling. If no cooling or drying is required, switch off the cooling system to save fuel.

: Press to turn on recirculation. An indicator light comes on. Air is recirculated to quickly cool the inside of the vehicle or to reduce the entry of outside air and odors.

If selected during cool or cold weather, the windshield and windows may fog. Turn off recirculation to help clear the windshield and windows.

When defrost and defog mode is selected, outside air is selected automatically.


: Press to turn the rear window defogger on or off. An indicator light on the button comes on to show that the rear window defogger is on. The rear window defogger only works when the ignition is on. The defogger turns off when the ignition is turned off or to ACC/ACCESSORY.

Caution

Do not try to clear frost or other material from the inside of the front windshield and rear window with a razor blade or anything else that is sharp. This may damage the rear window defogger grid and affect the radio's ability to pick up stations clearly. The repairs would not be covered by the vehicle warranty.




Maximum Cooling

Briefly open the windows so that the hot air can disperse quickly.

- Switch on the cooling (6).
- Switch on the air recirculation system (5).
- Turn the air distribution knob (3) to .
- Set the temperature control (1) to the coldest level.
- Open all the vents.
- Set fan speed (2) to highest level.

Auto Air Recirculation System

To speed up the cool down and reach the desirable temperature faster, the air recirculation system will be automatically activated by selecting all the following functions:

- Air distribution knob (3) to position  or  or .
- Fan speed (2) to one of the two higher speed positions.
- Cooling (6) on.

The LED of the  knob will illuminate.


After reaching the desirable temperature, the recirculation mode can be deactivated anytime by either pressing the recirculation button (5) or by moving the fan speed (2) back to the two lower speed positions.

In case the recirculation is not deactivated by the customer, it will be automatically deactivated after 30 minutes, to allow fresh air into the passenger compartment once again.

--	--	--

Automatic Climate Control System (If equipped)

The heating, cooling, and ventilation in the vehicle can be controlled with this system.

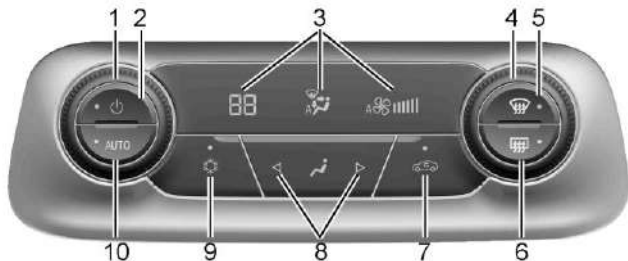

1. Cabin Temperature Controls
2. Power (On/Off)
3. Climate Control Status Display
4. Fan Controls
5. Windshield Defrosting
6. Rear Window Defogger
7. Recirculation
8. Air Delivery Mode Controls
9. Cooling Mode
10. AUTO (Automatic Operation)

Automatic Operation


The system automatically controls: the fan speed, air delivery, air conditioning and recirculation, in order to heat or cool the cabin to the desired temperature.

When AUTO is lit, all four functions operate automatically. Each function can also be manually set and the selected setting is displayed. Functions not manually set will continue to be automatically controlled, even if the AUTO indicator is not lit.


For automatic operation:

1. Press AUTO.
2. Set the temperature. Allow the system time to stabilize. Adjust the temperature as needed for best comfort.

To improve fuel efficiency and to cool the vehicle faster with A/C on, the system will automatically turn on recirculation in warm weather. The recirculation light will not be lit.

Press  to manually select recirculation and the indicator light will turn on. Press it again to select outside air and the indicator light will turn off.




Manual Operation

 : Press to turn the fan off or on. If on is selected, or any other button is pressed or knob turned, the climate control system will turn on and return to delivering airflow as set. The temperature control and air delivery mode can still be adjusted.


Fan Controls: Turn the selector clockwise or counterclockwise to increase or decrease the fan speed. Rotate counterclockwise to the end to turn off the fan.


Driver and Passenger Temperature


Controls: Turn the selector clockwise or counterclockwise to increase or decrease the temperature.


Air Delivery Mode Controls: Press    to change the direction of the airflow. The current mode appears in the display screen.


To change the current mode, select one or more of the following modes:

 : Air is directed to the instrument panel outlets.


 : Air is directed to the instrument panel outlets and the floor outlets.

 : Air is directed to the floor outlets.


 : Clears the windows of fog or moisture. Air is directed to the windshield and the floor outlets.

 : Air is directed to the windshield, the fan runs at a higher speed, and the temperature of the air is increased if not already at maximum. This mode overrides the previous mode selected and clears fog or frost from the windshield more quickly. When the button is pressed again, the system returns to the previous mode setting and fan speed.

For best results, clear all snow and ice from the windshield before defrosting.


 : Press to turn the air conditioning system on or off. If the fan control is turned off or the outside temperature falls below freezing, the air conditioner will not run.

Pressing this button cancels automatic air conditioning and turns off the air conditioner. Press AUTO to return to automatic operation and the air conditioner runs automatically as needed. When the indicator light is on, the air conditioner runs automatically to cool the air inside the vehicle or to dry the air needed to defog the windshield faster.

 : Press to turn on recirculation. An indicator light comes on. Air is recirculated to quickly cool the inside of the vehicle or to reduce the entry of outside air and odors.

If selected during cool or cold weather, the windshield and windows may fog. Turn off recirculation to help clear the windshield and windows.

Rear Window Defogger

 : Press this button to turn the rear window defogger on or off. The indicator in the button will illuminate, which indicates that the rear window defogger is turned on.

The defogger can be turned off by turning the ignition to "OFF" or "ACC/ACCESSORY".

Caution

Do not try to clear frost or other material from the inside of the front windshield and rear window with a razor blade or anything else that is sharp. This may damage the rear window defogger grid and affect the radio's ability to pick up stations clearly. The repairs would not be covered by the vehicle warranty.

Sensors


The solar sensor near the windshield detects the solar heat.

The climate control system uses the sensor information to adjust the temperature, fan speed, recirculation and air delivery mode for best comfort.

Do not cover the sensor; otherwise the automatic climate control system may not work properly.




Maximum Cooling

Briefly open the windows so that the hot air can disperse quickly.

- Switch on the cooling (9).
- Switch on the air recirculation system (7).
- Change air distribution (8) to .
- Set the temperature control (1) to the coldest level.
- Open all the vents.
- Set fan speed (4) to highest level.

Auto Air Recirculation System

To speed up the cool down and reach the desirable temperature faster, the air recirculation system will be automatically activated by selecting all the following functions:

- Air distribution knob (8) to position  or  or .
- Fan speed (4) to the higher speed positions.
- Cooling (9) on.

The LED of the  knob will illuminate.

After reaching the desirable temperature, the recirculation mode can be deactivated anytime by either pressing the recirculation button (7) or by moving the fan speed (4) back to the lower speed positions.

In case the recirculation is not deactivated by the customer, it will be automatically deactivated after 30 minutes, to allow fresh air into the passenger compartment once again.

Air Vents



Use the fins on the air vents to change the direction of the airflow.

On the center air vents, move the sliding knob to the center to close off airflow.

On the side air vents, move the sliding knob to the outboard side of the vehicle to close off the airflow.

Operation Tips

- Keep all outlets open whenever possible for best system performance.
- Keep the path under all seats clear of objects to help circulate the air inside the vehicle more effectively.
- Clear snow off the hood to improve visibility and help decrease moisture drawn into the vehicle, which may improve long term system performance.
- Use of non-GM approved hood deflectors can adversely affect the performance of the system.
- Do not attach any devices to the air vent slats; this restricts airflow and may cause damage to the air vents.

Maintenance

Air Intake




The air intake in front of the windscreen in the engine compartment must be kept clear to allow air intake. Remove any leaves, dirt or snow.

Air Conditioning Regular Operation

In order to ensure continuously efficient performance, cooling must be operated for a few minutes once a month, irrespective

of the weather and time of year. Operation with cooling is not possible when outside temperature is low.

Note

This vehicle is not equipped with air conditioning particulate filter, which does not interfere on the operation of the air conditioning system. In accordance with CONTRAN Resolution Number 14/1998, law Number 11.910/2009, this item is not mandatory, this item can be acquired apart and installed at Chevrolet Dealers. In case of exposure of the vehicle to excessive dust conditions, as on dirt roads, the most effective way to prevent dust from entering is using the air recirculation system function , preventing temporarily the entry of outside air. This vehicle is equipped with a mesh filter, which can be replaced with a particulate air filter. We recommend that the vehicle always have one of the filters installed.

Service

For optimal cooling performance, it is recommended check the climate control system. Check:

- Functionality and pressure test

- Heating functionality
- Leakage check
- Cleaning of condenser and evaporator drainage
- Performance check

Caution

Use only correct refrigerant.

Warning

Climate control systems have to be serviced exclusively by qualified people. Improper service methods may cause personal injury.

Driving and Operating

Driving Information

Driving Environment	101
Driving for Better Fuel Economy	101
Defensive Driving	101
Control of a Vehicle	102
Braking	103
Steering	103
Off-Road Recovery	105
Off-Road Driving	105
Driving on Wet Roads	106
Hill and Mountain Roads	108
If the Vehicle Is Stuck	109

Starting and Operating

New Vehicle Break-In	109
Starting the Engine	110
Retained Accessory Power (RAP)	112
Shifting Into Park (If equipped)	112
Shifting out of Park (If equipped)	113
Parking over Things That Burn	114

Engine Exhaust

Engine Exhaust	114
Catalytic Converter	114
Running the Vehicle While Parked	114

Automatic Transmission

Automatic Transmission	115
------------------------------	-----

Manual Mode	116
Interruption of Power Supply	116

Manual Transmission

Manual Transmission (5 Speed)	117
-------------------------------------	-----

Brakes

Brakes	118
Antilock Brake System (ABS)	118
Parking Brake	119
Brake Assist	120
Hill Start Assist (HSA) (If equipped)	120

Ride Control Systems

Traction Control/Electronic Stability Control	121
---	-----

Cruise Control

Cruise Control (If equipped)	122
Speed Limiter	124

Driver Assistance Systems

Driver Assistance Systems	125
Assistance Systems for Parking or Backing	127
Forward Collision Alert (FCA) System	130
Automatic Emergency Braking (AEB) (If equipped)	132
Side Blind Spot Alert (SBSA) (If equipped)	133

Fuel

Recommended Fuel	134
------------------------	-----


Fuel Additives	134
Filling the Tank	135

Conversions and Add-Ons

Add-On Electrical Equipment	136
-----------------------------------	-----

Driving Information

Driving Environment

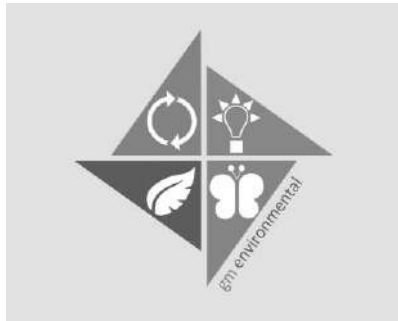

General Motors is continuously concerned with environmental protection and has used environment-friendly materials and recycled materials as much as possible in the design and assembly of products.

The production methods also meet the requirements of environmental protection. The use of harmful materials such as asbestos and cadmium has been discontinued. The air conditioning system uses a hydrocarbonate fluorochloride-free refrigerant.

Environmental Policy of General Motors

“General Motors is committed to preserving the environment and natural resources through the establishment of goals and targets that enable continuous improvement of its environmental performance, for waste reduction, compliance to laws and rules, the prevention of pollution, and good communication with the community.”

Note

- The use of lubricating oil results in its partial damage, which is reflected in the formation of carcinogenic compounds, resins, among others.
- The disposal of used lubricating oil in soil or waterways is prohibited by law and create serious environmental damage.
- The uncontrolled combustion of lubricating oil generates harmful residual gases to the environment.
- Recycling is the proper disposal method for this residue.

Recycling Requirements

When the lubricant needs to be changed, look preferably for a Chevrolet dealer.

Driving for Better Fuel Economy

Important information about fuel consumption:

- Avoid accelerating the vehicle too much. Abrupt changes of speed will increase the consumption.
- Low air pressure in tyres will decrease the performance, increase the fuel consumption and result in premature tyre wear.
- A low quality fuel will damage the engine and increase the consumption.

Defensive Driving

Driving with a defensive attitude is the best recommendation.

Start by fastening the seat belt.

A defensive attitude when driving results in being ready for unforeseen situations of any kind. Assume that other drivers or pedestrians will lack attention or make a mistake.

Try to foresee what the behavior of the other drivers will be and consider every possible mistake.

The most common accidents involve the rear end of the vehicle. Maintaining safe distance is one more measure to avoid crashes.

For the urban and rural areas, the best method is to drive defensively. The unsuspected reaction of the front vehicle can result in an abrupt turn or stop.

Control of a Vehicle

Never Turn the Engine Off While the Vehicle is Running

Many systems will not function in this situation (e.g. brake servo unit, power steering). Driving in this manner is a danger to yourself and others.

Pedals

To ensure that the pedal travel don't have restrictions, it's recommended to use only original mats designed by Chevrolet for this vehicle. Other mats shouldn't be on the place.

Floor Mat (if available)

Warning


- Make sure that the floor mat does not interfere with the pedals.
- Always use an appropriate size floor mat and have it installed properly; otherwise, it could obstruct the accelerator, brake or clutch pedals. Obstructing the pedals may cause involuntary acceleration, increased stopping distance or difficulty on gear shifting, which can result in a crash and injury.
- The original floor mats have been designed for your vehicle. If they need to be replaced, choose original equipment Chevrolet mats. Floor mats which were not designed for your vehicle may not fit properly and interfere with the pedal finish.

Follow the instructions in order to use your floor mats properly.

- Always check if the floor mats are not interfering with the pedals.

- Use the floor mat facing up. Do not use it facing down.
- Do not place anything on the floor mat on the driver's side.
- Use only one floor mat on the driver's side. Never put one floor mat on top of the other.

Removing and Reinstalling the Floor Mats with Fixing Retainer (if equipped)

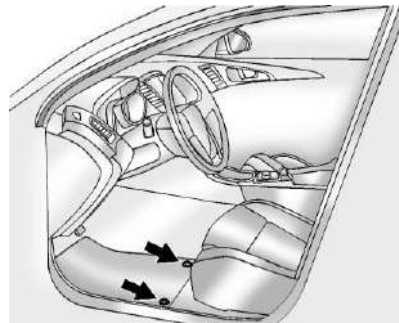

Two Fixing Retainer shown, One Fixing Retainer similar

Pull up on the rear of the floor mat to unlock each retainer and remove.

Reinstall by lining up the floor mat retainer openings over the carpet retainers and snapping into position.

Make sure the floor mat is properly secured in place.

Verify the floor mat does not interfere with the pedals.

Braking

Applying the Brakes

Braking action involves perception time and reaction time. First, you have to decide to push on the brake pedal. That is perception time. Then you have to bring up your foot to do it. That is reaction time. Average reaction time is about 3/4 of a second, but that is only an average. It might be less with one driver and as long as two seconds or more with another. Age, physical condition, alertness, coordination and eyesight play a part, so do alcohol and drugs. But even in 3/4 of a second, a vehicle moving at 100 km/h travels 20 m. That could be a lot of distance in an emergency, so keeping enough space between your vehicle and others is important. And of course, actual stopping distances vary greatly with the surface of the road (whether it is pavement or gravel); the

condition of the road (wet, dry); tire tread and your brakes. Nevertheless, some people overload the brake system when they use the brakes incorrectly.

Observe the Following

- Do not obstruct the brake pedal travel.
- Avoid needless heavy braking - some people drive in spurts - heavy acceleration followed by heavy braking - rather than keeping pace with traffic. This is a mistake. Your brakes will wear much faster if you do a lot of heavy braking. There is also the risk of dangerous skids.
- To increase your brake life, try to follow the traffic pace, avoid needless braking and allow for safe following distances. If you ever have to use the brakes to slow down, apply them gently and continuously.
- Do not drive with the engine off. The brake booster will not function, requiring more effort to make the brakes work.
- If your engine stops while you are driving, brake normally but do not pump your brakes, otherwise the vacuum of

power assist will be used up, resulting in brake pedal harder to push and longer braking distances.

- Some driving or climatic conditions may generate occasional brake squeak either when the brakes are applied lightly or the first time the brakes are applied. This is not a failure.

Brake Pedal Travel

Take your vehicle to a Chevrolet Dealership or Authorized Repair Shop anytime you notice the brake pedal does not return or the brake pedal travel becomes longer. This may be an indicator of brake system failure.

Steering

Caution

To avoid damage to the steering system, do not drive over curbs, parking barriers, or similar objects at speeds greater than 3 km/h (1 mph). Use care when driving over other objects such as lane dividers and speed bumps. Damage caused by misuse of the vehicle is not covered by the vehicle warranty.



Variable Effort Steering

The vehicle has a steering system that varies the amount of effort required to steer the vehicle in relation to the speed of the vehicle.

The amount of steering effort required is less at slower speeds to make the vehicle more maneuverable and easier to park. At faster speeds, the steering effort increases to provide a sport-like feel to the steering. This provides maximum control and stability.

Electric Power Steering

The vehicle has electric power steering, it does not have power steering fluid. Regular maintenance is not required.

If power steering assist is lost due to a system malfunction, the vehicle can be steered, but may require increased effort. Consult a Chevrolet Dealership or Authorized Repair Shop if there is a fault.

If the steering wheel is turned until it reaches the end of its travel, and is held in that position for an extended period of time, power steering assist may be reduced.

If the steering assist is used for an extended period of time, power assist may be reduced.

Normal use of the power steering assist should return when the system cools down.

If the Driver Information Centre indicates that the steering system has a fault, please see a dealer.

See *Power Steering Warning Light* ⇨ 60.

Emergency Steering

Under some situations, steering may be more efficient than braking.

For example, if you get closer to a hill and find a truck parked in your lane or if suddenly a vehicle comes into sight from somewhere or if a child runs from behind parked vehicles and stops right in front of you.


You could avoid these problems by applying the brakes – if it is possible to stop in time. But sometimes this is not possible because there is no room. It is the time for a defensive action – by steering around the problem.

First apply the brakes. With the risk of collision, it is always advisable to slow down first. Then, steer around the problem, to the right or to the left, depending on the space available. An emergency situation, as described above, will require the driver's full attention and a quick decision.

If you are holding the steering wheel as recommended in the nine and three o'clock position, you could make a 180° quick turn without taking the hands off the steering wheel. But you have to move fast, steer quickly and then straighten the wheel as soon as you have overcome the object.

The fact that emergency situations are always possible is reason enough to practise defensive driving and use the safety belts correctly.

Off-Road Recovery

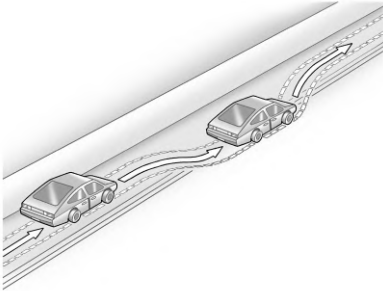

The vehicle's right wheels can drop off the edge of a road onto the shoulder while driving. Follow these tips:

1. Ease off the accelerator and then, if there is nothing in the way, steer the vehicle so that it straddles the edge of the pavement.
2. Turn the steering wheel about one-eighth of a turn, until the right front tire contacts the pavement edge.
3. Turn the steering wheel to go straight down the roadway.

Off-Road Driving

Before Driving Off-road

Some items should be observed before driving off-road. For example:

- Be sure that all repair and maintenance services have been performed.
- Check the fuel level.
- Check spare tyre pressure as specified in technical data chapter.
- Check fluid levels as specified in vehicle care chapter.

After Driving Off-road

Remove all material packed in the vehicle lower end, chassis or under the engine bonnet. This may be a fire hazard. After driving over mud or sand, clean and check the brake linings.

These substances may cause abnormal braking and glazed linings. Check the body frame, steering, suspension, wheels, tyres, exhaust system, fuel lines and cooling system.

During use off-road, your vehicle will demand more frequency maintenance.

Be Familiar with the Off-road Driving

Before starting any trip, it is advisable to practise in an area which is safe and near by. The off-road driving requires some new and different abilities such as be aware of the types of different signs. Your vision, for example, should constantly observe the ground for unexpected restrictions. Try to hear uncommon noises from tyres and engine.

Your arms, feet and body should answer to the vibrations and motion coming from the vehicle. The vehicle control is the main factor of good off-road drive. A better way to control the vehicle is to control the speed. There are some points that must be observed. At high speeds:

- You get closer to objects more quickly and have less time to observe the ground restrictions.
- You have less time to react.
- The vehicle swings more when being driven over obstacles.
- You need more braking distance, especially if you are driving on unpaved roads.

Caution

When driving off-road, sudden motion and manoeuvres can make you lose control of the steering. This could cause a collision. Therefore, when driving on-road and off-road, you and your passengers should wear seat belts.

Driving through Fog

High-level humidity in the air and heavy frost increase the possibility of fog, which may impair the visibility.

When driving through fog, the driver should slow down and maintain a safe distance from the vehicle in front. Do not underestimate the change of the fog density, thus avoiding the risk of an accident. Fog density is better estimated by observing the hazy view of the vehicles front lights.

Tips to Drive through Fog

- If equipped, turn on the front fog lights or low beam headlights, even during daylight.
- Do not turn on the high beam headlights.

- Use the rear window heater. Activate the windscreen wiper and washer for a few moments. The humidity on the outside of the windows might seem like fog.
- If it is almost impossible to see the outside and you need to stop, but you are not sure if you are on the road, turn on the headlights, activate the hazard warning flashers and sound the horn periodically or when you notice an approaching vehicle.
- While driving through fog, do not pass vehicles unless you have good front visibility and it is safe to do so. If attempting to pass, be prepared to drop back in case of an approaching vehicle.

Driving Over Mud or Sand

When driving over mud or sand, maintain vehicle motion by using a low gear.

Due to the loss of traction, it becomes more difficult to steer, accelerate and brake. For better traction while driving through very loose sand, slightly relieve the tyre air pressure.

Note

After driving in mud or sand, clean and check brake linings. If this is not performed, it may cause irregular braking or glassy lining. Check body structure, steering, suspension, wheels, tyres and the exhaust system.

Driving on Wet Roads**Driving through Flooded Areas**

Flooded areas should be avoided in any situation. A water covered road prevents the driver from evaluating its conditions properly. The damage caused due to water entry in the engine and other vehicle parts is not covered by warranty.

Drive at low speed through any flooded area and make sure the water limit does not exceed the wheel centre of height.

In case driving through any flooded area is required, do it at low speeds, around 10 km/h in first gear.

Observe any large vehicles driving nearby, stay away from large water waves which increase the chances of damage. When passing through flooded areas, the most severe problem that can occur is the feasibility of water entering inside the engine, through the intake air system.

This is known as “hydraulic ram”. The water does not allow for the pistons displacement and consequently the engine components are damaged. In this case, the engine is severely damaged and the vehicle will stop immediately or some time later, depending on the damage level.

Do not try to operate the engine again. This could increase the damage on the vehicle.

Caution

Driving through water streams could be dangerous. The water could drag the vehicle causing drowning. Even a few centimeter stream may impair the tyre to ground contact, causing loss of traction and vehicle roll over. Do not drive in water streams.

Driving in the Rain

Rain and wet roads can mean driving trouble. On a wet road you cannot stop, accelerate or turn as well because the tyre to road grip is not as good as it would be on dry roads, and, if the tyres do not have much tread left, you will get even less traction. If it starts to rain while you are driving, it is always wise to go slower and be cautious.

The surface may suddenly get wet while your reflexes are still used to driving on dry roads. The heavier the rain, the harder it is to be seen. Even if your windscreen wiper blades are in good shape, a heavy rain can make it harder to see road signs and traffic signals, pavement markings, the edge of the road, and even people walking. The road spray can make vision harder than the rain itself, especially on a dirty road.

It is wise to keep your wiping equipment in good shape and have the windscreen washer tank filled. Replace the windscreen wiper blades when they show signs of wear or miss areas on the windscreen, or when strips of rubber start to separate from the blades.

The water may affect your brakes. Try to avoid flooded areas, but if you cannot, try to slow down before you hit them. Wet brakes can cause accidents. They will not work well in a sudden stop and may cause pulling to one side. You could lose control of the vehicle.

After driving through flooded areas or a car wash, apply the brake pedal lightly until the brakes work normally.

Some Tips to Observe for Rainy Weather

- Turn on the low beam headlights, even during daylight.
- Turn on the wiper blades.
- Slow down and be cautious.
- Increase the distance from the vehicle in front.
- Use the rear window heater if required.

Note

When it is raining, the tyres and the wiper blades have a higher workload. Therefore, always keep the tyres and the wiper blades in good condition.

Hydroplaning

A lot of water can build up under your tyres, so that they can actually ride on the water. This is a very dangerous situation. This can occur when the road is wet enough and you are driving fast enough. When your vehicle is hydroplaning, it has little or no contact with the road.

You may not notice hydroplaning and even drive for some time without noticing that your tyres are not contacting the lane constantly. Maybe you notice hydroplaning when you try to slow down, take a curve, change lanes to pass one vehicle or when you are hit by a gust of wind.

It can happen when your tyres do not have much tread or if the pressure in one or more of the tyres is low. It can happen when a lot of water is standing on the road. If you can see reflections from trees, telephone poles or other vehicles, and raindrops dimple the water's surface, there could be hydroplaning.

Hydroplaning usually happens at higher speeds.

A hard and fast rule about hydroplaning does not exist. The best advice is to slow down when it is raining - and to be alert.

Driving at Night


While driving at night, the driver must:

- Drive defensively.
- Slow down and allow higher distance between your vehicle and other drivers.
- In remote areas, watch for animals.
- If you are tired, pull over in a safe place and rest.
- Keep the windshield and all glass clean – inside and outside. Glare at night is made much worse by dirt on the glass. Even the inside of the glass can build up a film caused by dust. Cigarette smoke blurs the windows inside thus making vision difficult.
- Keep in mind that headlights light up far less of a roadway when you are in a curve.

Hill and Mountain Roads

If the vehicle is driven on mountains and hills, it must be in good condition. The fluids, tires and brake pads must be checked in specific intervals.

On a downhill slope, avoid the unnecessary use of brakes. The vehicle speed can be slowed through a shift to a reduced gear.

 **Danger**

If you do not shift down, the brakes could be so hot that they do not work well. Shift down to let the engine assist the brakes on a steep downhill slope. Driving in neutral or with the ignition off is very dangerous. The brakes will have to do extra work. They will be excessively hot and will not be effective. When driving downhill keep the ignition on and use a proper gear.

You may find special signals in mountain roads. Examples may be long grades, no passing zones, falling rock area or winding roads. Be alert and drive appropriately.

If the Vehicle Is Stuck

The vehicle has a traction control system, it can often help to free a stuck vehicle. If stuck too severely for the traction system to free the vehicle, turn the traction system off and use the rocking method.

Never spin the wheels at high speed if the vehicle is stuck. The method known as balance may help to unstuck the vehicle, yet be careful.

Danger

If they spin at high speed, the tires may blow out, resulting in personal injuries to you and other people. The transmission or other components may overheat. In cases where the vehicle is stuck, turn the wheels as little as possible. Do not spin them at speeds over 55 km/h as indicated in the speedometer.

Note

Spinning the wheels may result in ruining components of your vehicle as well as the tires. If the wheels spin at high speeds when shifting to forward or backward speeds, the transmission could be damaged.

Bouncing the Vehicle to Set it Free

The bouncing method may help while the vehicle is stuck. To do that, the driver must follow the steps below.

1. Turn the steering wheel left and right to clear the area around the front wheels.
2. Turn off any traction and stability system. See *Traction Control/Electronic Stability Control* ⇨ 121.
3. Shift back and forth between R (Reverse) and a forward gear, spinning the wheels as little as possible. To prevent transmission wear, wait until the wheels stop spinning before shifting gears.
4. Release the accelerator pedal while shifting, and press lightly on the accelerator pedal when the transmission is in gear. Slowly spinning the wheels in the forward and reverse directions causes a rocking motion that could free the vehicle.
5. If the vehicle is still stuck after a few tries, it has to be towed.

Starting and Operating

New Vehicle Break-In

Use the following precautions for the first few hundred kilometres to improve the performance and economy of your vehicle and add to its long life:

- Avoid full-acceleration starts.
- Do not race the engine.
- Avoid hard stops except in emergencies. This will allow your brakes to run in properly.
- Avoid quick starts, sudden accelerations, and prolonged high-speed driving in order to avoid damage to the engine and to conserve fuel.
- Avoid full acceleration in low gear.
- Do not tow any other vehicle.

Starting the Engine

Starting engine with the Start/Stop button

Danger

Do not press the Start/Stop button while driving.

Driver could lose control of vehicle, the brake and steering assistance systems would not operate and disable the airbags, may cause vehicle damage, personal injury or possibly death.

Warning

Also never leave infants, children and juveniles unattended in the vehicle.

Caution

Pressing the Start/Stop button can start the engine when the electronic key is in the vehicle. Never leave infants, children and

(Continued)

Caution (Continued)

juveniles or any person who is unfamiliar with the vehicle alone. They could become involved in unexpected accidents.

Switch the ignition off when you leave the vehicle and always carry the electronic key.



- The electronic key must be inside the vehicle
- **Manual transmission:** keep the clutch pedal pressed.
- **Automatic transmission:** keep the brake pedal pressed and move selector lever to **P** or **N**

- Do not accelerate
- Press the **Start/Stop** button. The green LED will illuminate as soon as the engine is running

To switch off the engine, press and hold the button again.

Note

- In vehicles equipped with electronic key and manual transmission (if available), in case the clutch pedal is not fully pressed, the engine start-up will not be activated.
- In vehicles equipped with electronic key and automatic transmission, in case the shift selector lever is not placed in **P** or **N** and the brake pedal is not pressed, the engine start-up will not be activated.

Switching off the engine

- Push **Start/Stop** button while engine is running and vehicle stationary to switch off the engine.
- In case of emergency the engine can be switched off while the vehicle is in motion: push **Start/Stop** button twice. When the engine is not running, considerably more force is needed to brake and steer.

Accessory power mode

Push **Start/Stop** button once without pressing brake pedal: **Accessory power mode** is active, the yellow LED in the button illuminates. In this mode steering wheel lock (if available) is released and some electrical functions are operable.

To start the engine when in **Accessory power mode**, press brake pedal (or clutch pedal, depending on model) and push **Start/Stop** button once more.

Ignition on power mode

Push and hold **Start/Stop** button for 5 seconds without pressing no pedal: **Ignition on power mode** is active, the green LED in the button illuminates. In this mode all electrical functions are operable.

To start the engine from **Ignition on power mode**, press brake pedal (or clutch pedal, depending on model) and push **Start/Stop** button once more.

Note


Do not put the remote control in the luggage compartment or very close of the information centre screen.

Emergency operation

If the radio remote control also fails, the driver's door can be locked or unlocked with the mechanical key.

The mechanical key can only lock or unlock the driver's door. The other doors can be opened by using the interior handle twice.

On vehicles with anti-theft alarm system, the alarm may be triggered when the vehicle is unlocked. Deactivate the alarm by switching on the ignition.

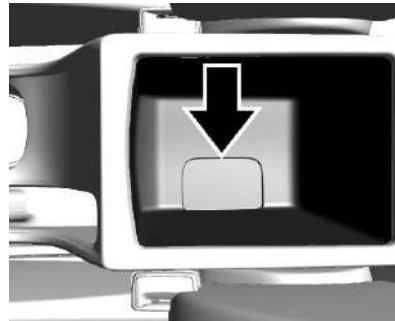

Place the electronic key in the center console storage.

Press the **Start/Stop** button.

To switch off the engine, press the **Start/Stop** button for at least 2 seconds.

This option is intended for emergencies only. Consult a Chevrolet Dealership or Authorized Repair Shop.

The function of the electronic key may not work or the operating distance may change because the frequency is mixed with close others. If this occurs, open and close the door using the key manually. If the electronic key does not work, you can start the engine by using emergency operating. If the engine not work when you use the key manually, consult a Chevrolet Dealership or Authorized Repair Shop.

Situations where this may occur

- When the electronic key is close to a radio transmitter such as a radio station, an airport, a police station, a government office, a base, a transmitting tower, or a port.
- When you keep the electronic key near a mobile two-way radio system or a cellular phone.
- When another vehicle's electronic key is being operated close to your vehicle
- When the electronic key is discharged.

The interior mobile two-way radio system can disturb the electrical system of the vehicle. Use the exterior mobile two-way radio system.

You must always comply with the specific laws and regulations of the country that you are in.

Disabled electronic key

If you lock the door using a electronic key outside the vehicle when another electronic key is inside the vehicle, the inside key will be disabled. It cannot make the engine to start. The disabled electronic key can be reactivated when you press the buttons again.

Electronic key warning chime

The horn will sound three times continuously to indicate that the electronic key is inside the vehicle when you leave the vehicle and close the door. The setting of this function can be changed in the information centre screen. When the electronic key is very close to doors or window, the vehicle might recognize that the electronic key is inside the vehicle and the horn might sound.

Restart without electronic key

When the electronic key is not inside the vehicle and the engine is running, if you press the **Start/Stop** button to stop the engine, the ignition mode will change to ACC (LED: yellow). (After 5 minutes without any input, the ignition will be switched off automatically.) You can restart the engine applying brake and pressing the **Start/Stop** button. If you press the **Start/Stop** button without applying brake, the ignition will be OFF (LED: off). And restarting is not possible.

The electronic key will not work in the following situations

- When the vehicle is in the electromagnetic field of high frequency.
- When an electric equipment using same frequency with the electronic key is being worked.
- When the battery of the electronic key is discharged or has a problem.

Retained Accessory Power (RAP)

Some vehicle accessories may be use after the ignition is turned off up to 10 minutes or until any door is opened.

The power windows and sunroof, if equipped, will continue to work for up to 10 minutes or until any door is opened.

The infotainment system will continue to work for up to 10 minutes or until the driver door is opened.

Shifting Into Park (If equipped)

1. Hold the brake pedal down and set the parking brake.
2. Move the shift lever into P (Park) by holding in the button on the shift lever and pushing the shift lever all the way toward the front of the vehicle.

Leaving the Vehicle with the Engine Running



Warning

It can be dangerous to leave the vehicle with the engine running. It could overheat and catch fire.

(Continued)

Warning (Continued)

It is dangerous to get out of the vehicle if the shift lever is not fully in P (Park) with the parking brake firmly set. The vehicle can roll.

Do not leave the vehicle when the engine is running. If you have left the engine running, the vehicle can move suddenly. You or others could be injured. To be sure the vehicle will not move, even when you are on fairly level ground, always set the parking brake and move the shift lever to P (Park). See *Shifting Into Park (If equipped)* ⇨ 112.

If you have to leave the vehicle with the engine running, be sure the vehicle is in P (Park) and the parking brake is firmly set before you leave it. After you have moved the shift lever into P (Park), hold the regular brake pedal down. Then, see if you can move the shift lever away from P (Park) without first pressing the button. If you can, it means that the shift lever was not fully locked in P (Park).

Torque Lock

Torque lock is when the weight of the vehicle puts too much force on the parking pawl in the transmission. This happens when parking on a hill and shifting the transmission into P (Park) is not done properly, then it is difficult to shift out of P (Park). To prevent torque lock, set the parking brake and then shift into P (Park). To find out how, see “Shifting Into Park” listed previously.

If torque lock does occur, your vehicle may need to be pushed uphill by another vehicle to relieve the parking pawl pressure, so you can shift out of P (Park).

Shifting out of Park (If equipped)

This vehicle is equipped with an electronic shift lock release system. The shift lock release is designed to prevent movement of the shift lever out of P (Park), unless the ignition is on and the brake pedal is applied.

The shift lock release is always functional except in the case of an uncharged or low voltage (less than 9-volt) battery.

If the vehicle has an uncharged battery or a battery with low voltage, try charging or jump starting the battery. See *Jump Starting* ⇨ 178.

To shift out of P (Park):

1. Apply the brake pedal.
2. Turn the ignition on.
3. Press the shift lever button.
4. Move the shift lever to the desired position.

If still unable to shift out of P (Park):

1. Fully release the shift lever button.
2. Hold the brake pedal down and press the shift lever button again.
3. Move the shift lever to the desired position.

If you are still having a problem shifting, see your dealer.

This vehicle may have the Buckle to Drive feature, which may prevent the vehicle from shifting out of P (Park). See *Seat Belts* ⇨ 23

Parking over Things That Burn

Before parking the vehicle, be sure the ground does not contain any flammable material like grass, shrubs, fuel drops, etc. The engine exhaust is hot and can lead to a fire.

Caution

Flammable objects could touch hot exhaust parts under your vehicle and ignite. Do not park over papers, leaves, dry grass or other things that can burn.

Engine Exhaust

Danger

Engine exhaust gases contain poisonous carbon monoxide, which is colourless and odourless and could be fatal if inhaled for a while. If exhaust gases enter the interior of the vehicle, open the windows. Have the cause of the fault rectified by a Chevrolet Dealership or Authorized Repair Shop. Avoid driving with an open load compartment, otherwise exhaust gases could enter the vehicle.

Catalytic Converter

The catalytic converter reduces the amount of harmful substances in the exhaust gas.

Danger

Do not keep the engine running in closed areas for longer than necessary to vehicle maneuver, because the carbon monoxide (CO), which has no colour or odour, is lethal if inhaled for a while.

In the event of faults or engine irregular functioning following a cold starting, a significant loss of engine power or other anomalies, this may indicate an ignition system fault. The vehicle needs to be towed. Seek the assistance of a Chevrolet Dealership or Authorized Repair Shop.

Cares with the Catalytic Converter:

In case unburned fuel is entering the catalytic converter, this component can be overheated and irreparably damaged. Therefore, the following have to be avoided:

- Insisting on the starting procedure when the engine presents difficulties to begin functioning.

- Unnecessarily long time during starting.

The water penetration by exhaust pipe can damage the catalytic converter because it works at a high temperature level.

Avoid the application of any product in the vehicle underbody. Some chemical products increase the risk of fire.

An unpleasant and innocuous odor, proceeding from exhaust gases, caused by fuel with high sulphur content at determinate driveability conditions should be perceived.

To ensure a low level of pollutant emissions and the longevity of the catalytic converter system, all maintenance services must be carried out in a Chevrolet Dealership or Authorized Repair Shop.

Running the Vehicle While Parked

It is better not to park with the engine running. If the vehicle is left with the engine running, follow the proper steps to be sure the vehicle will not move. See *Shifting Into Park (If equipped)* ⇨ 112.

Automatic Transmission



P: This position locks the drive wheels. Use P (Park) when starting the engine because the vehicle cannot move easily.

Warning

It is dangerous to get out of the vehicle if the shift lever is not fully in P (Park) with the parking brake firmly set. The vehicle can roll.

(Continued)

Warning (Continued)

Do not leave the vehicle when the engine is running. If you have left the engine running, the vehicle can move suddenly. You or others could be injured. To be sure the vehicle will not move, even when you are on fairly level ground, always set the parking brake and move the shift lever to P (Park). See *Shifting Into Park (If equipped)* ⇨ 112.

Make sure the shift lever is fully in P (Park) before starting the engine. The vehicle has an automatic transmission shift lock control system. The brake pedal must be fully applied, then press the shift lever button before shifting from P (Park) while the ignition is in ON/RUN. If the vehicle will not shift out of P (Park), ease pressure on the shift lever and push the shift lever all the way into P (Park) while maintaining brake application. Then move the shift lever into another gear. See *Shifting out of Park (If equipped)* ⇨ 113.

R: Use this gear to back up.

Caution

Shifting to R (Reverse) while the vehicle is moving forward could damage the transmission. The repairs would not be covered by the vehicle warranty. Shift to R (Reverse) only after the vehicle is stopped.

To rock the vehicle back and forth to get out of snow, ice, or sand without damaging the transmission, see *If the Vehicle Is Stuck* ⇨ 109.

N: In this position, the engine does not connect with the wheels. To restart the engine when the vehicle is already moving, use N (Neutral) only.

Warning

Shifting into a drive gear while the engine is running at high speed is dangerous. Unless your foot is firmly on the brake pedal, the vehicle could move very rapidly. You could lose control and hit people or objects. Do not shift into a drive gear while the engine is running at high speed.

Caution

Shifting out of P (Park) or N (Neutral) with the engine running at high speed may damage the transmission. The repairs would not be covered by the vehicle warranty. Be sure the engine is not running at high speed when shifting the vehicle.

D: This position is for normal driving. If more power is needed for passing, press the accelerator pedal down.

L: This position allows you to change gears similar to a manual transmission. If the vehicle has this feature, see *Manual Mode* ↪ 116.

Caution

A transmission hot message may display if the automatic transmission fluid is too hot. Driving under this condition can damage the vehicle. Stop and idle the engine to cool the automatic transmission fluid. This message clears when the transmission fluid has cooled sufficiently.

Manual Mode**Electronic Range Select (ERS) Mode**

ERS mode allows you to choose the top-gear limit of the transmission and the vehicle's speed while driving downhill. The vehicle has an electronic shift position indicator within the instrument cluster. When using the ERS mode a number will display next to the L, indicating the current gear that has been selected.



To use this feature:

1. Move the shift lever to L (Manual Mode).
2. Press + (Plus) or - (Minus) on the shift lever to increase or decrease the gear range available.

When you shift from D (Drive) to L (Manual Mode), the transmission will shift to a pre-determined lower gear range. The highest gear available for this pre-determined range is displayed next to the L in the DIC. See *Driver Information Center (DIC)* ↪ 64. The number displayed in the DIC is the highest gear that the transmission will be allowed to operate in. This means that all gears below that number are available. For example, when 4 (Fourth) is shown next to the L, 1 (First) through 4 (Fourth) gears are automatically shifted by the vehicle. The transmission will not shift into 5 (Fifth) until the + (Plus) button is used or you shift back into D (Drive).

While in L (Manual Mode), the transmission will prevent shifting to a lower gear range if the engine speed is too high. You have a brief period of time to slow the vehicle. If vehicle speed is not reduced within the time allowed, the lower gear range shift will not be completed. You must further slow the vehicle, then press the - (Minus) button to the desired lower gear range.

Interruption of Power Supply


In the event of an interruption of power supply, the selector lever cannot be moved out of the P position.

If the battery is discharged, start the vehicle using jump cables, see *Jump Starting* ⇨ 178.

If the battery is not the cause of the fault, see *Towing the Vehicle* ⇨ 179.

Manual Transmission

Manual Transmission (5 Speed)

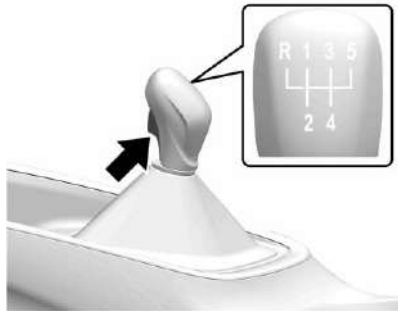

Shift lever positions:

● : Neutral

1 to 5: First to Fifth gear

R: Reverse gear

Gears Towards

Press the clutch pedal and move the shift lever according to figure. When shifting to a lower gear, do not accelerate the engine to a very high revolution.

Reverse Gear

Press the clutch pedal, press the shift lever button and move the shift lever towards position R.

Note

Place the shift lever on position R (reverse gear) only with the vehicle stopped and few seconds after pressing the clutch pedal.

If the gear does not engage easily, return the shift lever to neutral position and remove the foot from the clutch pedal, press it again and then repeat the operation.

Caution

Do not rest your hand on the shift lever while driving. The pressure could cause premature wear in the transmission. The repairs would not be covered by the vehicle warranty.

Caution

Do not rest your foot on the clutch pedal while driving or while stopped. The pressure can cause premature wear in the clutch. The repairs would not be covered by the vehicle warranty.

Note

The electronic module does not avoid damages to the engine due to high revolution peaks in case of improper downshifts. For example:

- Trying to shift from the 4th to 5th speed, you engage the 3rd speed mistakenly.
- Disengaging the engine in a long downhill (and when engaging it again, you use a very low speed).

Under these hypotheses, nevertheless the electronic module operation, the engine revolution will increase regardless the amount of fuel injection. It could surpass the tolerance limits and lead to severe damages to the inner engine components. The repairs would not be covered by the vehicle warranty.

Brakes

The brake system comprises two independent brake circuits.

If a brake circuit fails, the vehicle can still be braked using the other brake circuit. However, braking effect is achieved only when the brake pedal is depressed firmly. Considerably more force is needed for this. The braking distance is extended. Seek the assistance of a Chevrolet Dealership or Authorized Repair Shop before continuing your journey.

When the engine is not running, the support of the brake servo unit disappears once the brake pedal has been depressed once or twice. The braking effect is not reduced, but braking requires significantly greater force. It is especially important to bear this in mind when being towed.

Caution

If one of the circuits fails, the brake pedal must be pressed with greater pressure and the braking distance may increase. Have

(Continued)

Caution (Continued)

the brake system checked and repaired by a Chevrolet Dealership or Authorized Repair Shop.

If the brake pedal can be pressed further than normal, the brakes may need repair.

Consult a Chevrolet Dealership or Authorized Repair Shop immediately.

Caution

Do not drive with your foot resting on the brake pedal. This will accelerate wear of the brake components. The brakes may also become overheated, resulting in longer braking distance and an unsafe condition.

Danger

After driving through deep water, washing the vehicle, or using the brakes excessively when going down a steep hill, the brakes

(Continued)

Danger (Continued)

can temporarily lose their stopping power. This may be due to wet brake components or overheating.

If your brakes temporarily lose their stopping power because of overheating: Shift to a lower gear when going down hills. Do not continuously apply the brakes.

If your brakes temporarily lose their power because of wet brake components, the following procedure will help restore their normal performance:

1. Check behind you for other vehicles.
2. Keep a safe forward speed with plenty of space to your rear and sides.
3. Gently apply the brakes until normal performance is restored.

Antilock Brake System (ABS)

Antilock brake system (ABS) prevents the wheels from locking.

ABS starts to regulate brake pressure as soon as a wheel shows a tendency to lock. The vehicle remains steerable, even during hard braking.

ABS control is made apparent through a pulse in the brake pedal and the noise of the ABS process.

For optimum braking, keep the brake pedal fully depressed throughout the braking process, despite the fact that the pedal is pulsating. Do not reduce the pressure on the brake pedal.

Remember: ABS does not change the time needed to get a foot up to the brake pedal or always decrease stopping distance. If you get too close to the vehicle in front of you, there will not be enough time to apply the brakes if that vehicle suddenly slows or stops. Always leave enough room up ahead to stop, even with ABS.

When you start the vehicle after the ignition is switched on, you can hear mechanical sounds. It is normal that the ABS is to be ready.

See *Antilock Brake System (ABS) Warning Light* ⇨ 59.

Using ABS


Do not pump the brakes. Just hold the brake pedal down firmly and let ABS work. You might hear the ABS pump or motor operating and feel the brake pedal pulsate, but this is normal.

Braking in Emergencies

ABS allows you to steer and brake at the same time. In many emergencies, steering can help more than even the very best braking.

Depending on the severity of the emergency braking, the vehicle might blink the brake lamps as a warning for other vehicles.

Fault



If there is a fault in the ABS, the wheels may be liable to lock due to braking that is heavier than normal. The advantages of ABS are no longer available. During hard braking, the vehicle can no longer be steered and may swerve.

Have the cause of the fault remedied by a Chevrolet Dealership or Authorized Repair Shop.

Parking Brake



Always apply the parking brake firmly without operating the release button, and apply as firmly as possible on a downhill or uphill slope.

To release the parking brake:

1. Press the brake pedal firmly.
2. Pull the lever up slightly until you can press the release button.
3. Hold the release button and fully lower the lever.

See *Brake System Warning Light* ⇨ 59.

 **Danger**

On vehicles equipped with automatic transmission, if the parking brake is not applied properly and the automatic transmission lever is not in P position, the vehicle can move, causing fatal injuries or damage to the vehicle.

Caution

Never apply the parking brake with the vehicle running. This can cause vehicle skidding and personal injuries.

Caution

Driving with the parking brake on can overheat the brake system and cause premature wear or damage to brake system parts. Make sure that the parking brake is fully released and the brake warning light is off before driving.


Brake Assist

This vehicle has a brake assist feature designed to assist the driver in stopping or decreasing vehicle speed in emergency driving conditions. This feature automatically uses the stability system hydraulic brake control module to supplement the power brake system under conditions where the driver has quickly and forcefully applied the brake pedal in an attempt to quickly stop or slow down the vehicle.

The stability system hydraulic brake control module increases brake pressure at each wheel of the vehicle until the ABS activates. Minor brake pedal pulsation or pedal movement during this time is normal and the driver should continue to apply the brake pedal as the driving situation dictates. The brake assist feature will automatically disengage when the brake pedal is released or brake pedal pressure is quickly decreased.

Note

If the brake pedal is depressed quickly and forcefully, maximum brake force is automatically applied (full braking). Maintain steady pressure on the brake pedal for as long as full braking is required. Maximum brake force is automatically reduced when the brake pedal is released.

Hill Start Assist (HSA) (If equipped) **Warning**

Do not rely on the HSA feature. HSA does not replace the need to pay attention and drive safely. You may not hear or feel alerts or warnings provided by this system. Failure to use proper care when driving may result in injury, death, or vehicle damage. See *Defensive Driving* ⇨ 101.

This feature is designed to prevent the vehicle from rolling, either forward or rearward, during vehicle drive off. HSA will be automatically activated after the vehicle has come to a complete standstill on a grade. During the transition period between when the brake pedal is released and the accelerator pedal is pressed, HSA holds the braking pressure to ensure that there is no rolling. The brakes will automatically release when the accelerator pedal is applied or automatically release after a few seconds. It will not activate if the vehicle is in a drive gear and facing downhill, or if the vehicle is facing uphill and in R (Reverse).

Ride Control Systems

Traction Control/Electronic Stability Control

System Operation

The vehicle has a Traction Control System (TCS) and StabiliTrak / Electronic Stability Control (ESC), an electronic stability control system. These systems help limit wheel slip and assist the driver in maintaining control, especially on slippery road conditions.

TCS activates if it senses that any of the drive wheels are spinning or beginning to lose traction. When this happens, TCS applies the brakes to the wheels that is skidding and reduces engine power to limit wheel spin.

StabiliTrak/ESC activates when the vehicle senses a difference between the intended path and the direction the vehicle is actually traveling. StabiliTrak/ESC selectively applies braking pressure to any one of the vehicle wheel brakes to assist the driver in keeping the vehicle on the intended path.

If cruise control is being used and traction control or StabiliTrak/ESC begins to limit wheel spin, cruise control will disengage. Cruise control may be turned back on when road conditions allow.

Both systems come on automatically when the vehicle is started and begins to move. The systems may present noise or vibration while they are operating or while performing diagnostic checks. This is normal and does not mean there is a problem with the vehicle.


It is recommended to leave both systems on for normal driving conditions, but it may be necessary to turn TCS off if the vehicle gets stuck in sand, mud, ice, or snow. See *If the Vehicle Is Stuck* ⇨ 109 and “Turning the Systems Off and On” later in this section.




The indicator light for both systems is in the instrument cluster. This light will:


- Flash when TCS is limiting wheel spin.
- Flash when StabiliTrak/ESC is activated.

- Turn on and stay on when either system is not working.

If either system fails to turn on or to activate, a message displays in the Driver Information Center (DIC), and  comes on and stays on to indicate that the system is inactive and is not assisting the driver in maintaining control. The vehicle is safe to drive, but driving should be adjusted accordingly.

If  comes on and stays on:

1. Stop the vehicle.
2. Turn the engine off and wait 15 seconds.
3. Start the engine.

Drive the vehicle. If  comes on and stays on, the vehicle may need more time to diagnose the problem. If the condition persists, see your dealer.



Turning the Systems Off and On








To turn the system off, press .




Caution

Do not repeatedly brake or accelerate heavily when TCS is off. The vehicle driveline could be damaged.

To turn off only TCS, press and release . The traction off light  displays in the instrument cluster.

To turn TCS on again, press and release . The traction off light  displayed in the instrument cluster will turn off.

To turn off both TCS and StabiliTrak/ESC, press and hold  until the traction off light  and StabiliTrak/ESC OFF light  come on and stay on in the instrument cluster.

To turn TCS and StabiliTrak/ESC on again, press and release . The traction off light  and StabiliTrak/ESC OFF light  in the instrument cluster turn off.

Adding accessories can affect the vehicle performance. See *Accessories and Modifications* ⇨ 138.

Cruise Control

Cruise Control (If equipped)

Cruise control lets the vehicle maintain a speed of about 40 km/h (25 mph) or more without keeping your foot on the accelerator. Cruise control does not work at speeds below 40 km/h (25 mph).

Warning

Cruise control can be dangerous where you cannot drive safely at a steady speed. Do not use cruise control on winding roads or in heavy traffic.


Cruise control can be dangerous on slippery roads. On such roads, fast changes in tire traction can cause excessive wheel slip, and you could lose control. Do not use cruise control on slippery roads.


With the Traction Control System (TCS) or StabiliTrak/Electronic Stability Control (ESC), the system may begin to limit wheel spin while you are using cruise control. If this happens, cruise control will automatically disengage. See *Traction Control/Electronic Stability Control* ⇨ 121. If a collision alert occurs when cruise control is activated, cruise control is disengaged. See *Forward Collision Alert (FCA) System* ⇨ 130. When road conditions allow you to safely use it again, cruise control can be turned back on.

Cruise control will disengage if either TCS or StabiliTrak/ESC is turned off.

If the brakes are applied, cruise control disengages.





: Press to turn the cruise control system on and off. A white indicator comes on in the instrument cluster when cruise is turned on.

: Press to disengage cruise control without erasing the set speed from memory.


RES+: If there is a set speed in memory, press to resume that speed or press and hold to accelerate. If cruise control is already active, use to increase vehicle speed.

SET-: Press briefly to set the speed and activate cruise control. If cruise control is already active, use to decrease vehicle speed.

Setting Cruise Control

If  is on when not in use, SET- or RES+ could get bumped and go into cruise when not desired. Keep  off when cruise is not being used.

To set a speed:

1. Press  to turn the cruise system on.
2. Get up to the desired speed.
3. Press and release SET-. The desired set speed briefly appears in the instrument cluster.
4. Remove your foot from the accelerator pedal.

The cruise control indicator on the instrument cluster turns green after cruise control has been set to the desired speed. See *Instrument Cluster* ⇨ 54.

Resuming a Set Speed

If cruise control is set at a desired speed and then the brakes are applied, cruise control is disengaged without erasing the set speed from memory.

Once the vehicle speed reaches about 40 km/h (25 mph) or more, briefly press RES+. The vehicle returns to the previous set speed.

Increasing Speed While Using Cruise Control

If the cruise control system is already activated:

- Press and hold RES+ until the vehicle accelerates to the desired speed, then release it.
- To increase the speed in small increments, briefly press RES+. For each press, the vehicle goes about 1 km/h (1 mph) faster.

The speedometer reading can be displayed in either English or metric units. See *Driver Information Center (DIC)* ⇨ 64. The increment value used depends on the units displayed.

Reducing Speed While Using Cruise Control

If the cruise control system is already activated:

- Press and hold SET- until the desired lower speed is reached, then release it.
- To slow down in small increments, briefly press SET-. For each press, the vehicle goes about 1 km/h (1 mph) slower.

The speedometer reading can be displayed in either English or metric units. See *Driver Information Center (DIC)* ⇨ 64. The increment value used depends on the units displayed.

Passing Another Vehicle While Using Cruise Control



Use the accelerator pedal to increase the vehicle speed. When you take your foot off the pedal, the vehicle will slow down to the previous set cruise speed. While pressing the accelerator pedal or shortly following the release to override cruise control, briefly pressing SET- will result in cruise control set to the current vehicle speed.

Using Cruise Control on Hills


How well the cruise control works on hills depends upon the vehicle speed, load, and the steepness of the hills. When going up steep hills, you might have to step on the accelerator pedal to maintain the vehicle speed. When going downhill, you might have to brake or shift to a lower gear to keep your speed down. If the brake pedal is applied, cruise control will disengage.

Ending Cruise Control

There are four ways to end cruise control:

- Step lightly on the brake pedal.
- Press .
- Shift the transmission to N (Neutral).
- Press  to turn cruise control system off completely.

Erasing Speed Memory

The cruise control set speed is erased from memory if  is pressed or if the vehicle is turned off.

Speed Limiter

The speed limiter system allows the driver to set a maximum speed limit for the vehicle. To exceed the maximum speed set, the driver has to hold the accelerator pedal totally pressed. If the driver allows the speed to exceed the current speed limitation setting, the speed value next to the speed limiter indicator on the instrument cluster will show a visual and/or audible warning.

Speed limiter cannot be used at the same time with cruise control or adaptive cruise control, if equipped.


Note

The car will not automatically break to keep the speed limit.



The speed limiter button is on the steering wheel.

 : Press to turn the speed limiter on and off.


 : Press to disengage the speed delimiter without erasing the set speed from memory.

RES+: Push the RES+ upward to resume to a previously set speed limit or to increase the set speed limit.

SET-: Push the SET- downward to set the current speed as the speed limit or to decrease the set speed limit. The speed can also be set when the vehicle is stopped, but would default to about 25 km/h speed limit.

Setting Speed Limiter

To set the speed limiter:

1. Press  to activate the speed limiter.
2. Briefly push the SET- downward to activate the speed limiter. The current set speed briefly appears in the instrument cluster.

Resuming a Set Speed Limitation

If the cancel button is pressed the speed limiter is disengaged without erasing the set speed limitation from memory.

Briefly push the RES+ upward to resume the previously set speed limitation.

Increase Speed Limit

If the speed limiter is already activated:

- To increase the speed limit in small increments, briefly push the RES+ upward and then release it.

- To increase the speed limit in large increments, long push the RES+ upward and then release it.



Decrease Speed Limit

If the speed limiter is already activated:


- To decrease the speed limit in small increments, briefly push SET- downward and then release it.
- To decrease the speed limit in large increments, long push SET- downward and then release it.

Turn Speed Limiter Off

There are two ways to turn the speed limiter off:

- Press  to turn the speed limiter off.
- Press  to turn the speed limiter system off completely.

Erasing Set Speed Limitation Memory

The speed limiter set speed is erased from memory if  is pressed or if the vehicle is turned off.

Driver Assistance Systems

This vehicle may have features that work together to help avoid crashes or reduce crash damage while driving, backing, and parking. Read this entire section before using these systems.

Warning

Do not rely on the Driver Assistance Systems. These systems do not replace the need for paying attention and driving safely. You may not hear or feel alerts or warnings provided by these systems. Failure to use proper care when driving may result in injury, death, or vehicle damage. See *Defensive Driving* ⇨ 101.

Under many conditions, these systems will not:

- Detect children, pedestrians, bicyclists, or animals.
- Detect vehicles or objects outside the area monitored by the system.
- Work at all driving speeds.

(Continued)

Warning (Continued)

- Warn you and/or provide you, with enough time, to avoid a crash.
- Work under poor visibility or bad weather conditions.
- Work if the detection sensor is not cleaned or is covered by ice, snow, mud, or dirt.
- Work if the detection sensor is covered up, such as with a sticker, magnet, or metal plate.
- Work if the area surrounding the detection sensor is damaged or not properly repaired.

Complete attention is always required while driving, and you should be ready to take action and apply the brakes and/or steer the vehicle to avoid crashes.

Audible or Visual Alert

Some driver assistance features alert the driver of obstacles by beeping or flashing. To change the volume of the warning chime, see “Comfort and Convenience” under *Vehicle Personalization* ⇨ 67.

Cleaning

Depending on vehicle options, keep these areas of the vehicle clean to ensure the best driver assistance feature performance. Driver Information Center (DIC) messages may display when the systems are unavailable or blocked.




- Front and rear bumpers and the area below the bumpers
- Front grille and headlamps
- Front side and rear side panels
- Outside of the windshield in front of the rearview mirror
- Rear side corner bumpers
- Rear Vision Camera above the license plate

Assistance Systems for Parking or Backing


If equipped, the Rear Vision Camera (RVC), Rear Park Assist (RPA), Front Park Assist (FPA), and Automatic Parking Assist (APA) may help the driver park or avoid objects. Always check around the vehicle when parking or backing.

Rear Vision Camera (RVC) (If equipped)

When the vehicle is shifted into R (Reverse), the RVC shows an image of the area behind the vehicle in the infotainment display. The previous screen displays after a short delay, when the vehicle is shifted out of R (Reverse). To return to the previous screen sooner, press any button on the infotainment system, shift into P (Park) if equipped, or raise the vehicle speed forward when it is safe to do so.

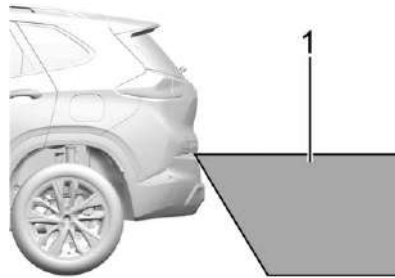

1. View Displayed by the Camera

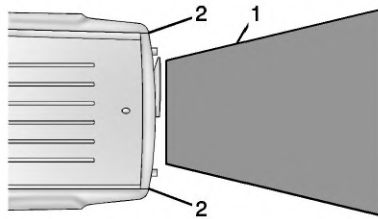

1. View Displayed by the Camera
2. Corners of the Rear Bumper

Displayed images may be farther or closer than they appear. The area displayed is limited and objects that are close to either corner of the bumper or under the bumper do not display.

A warning triangle may appear on the infotainment display to show that Rear Park Assist (RPA) has detected an object. This triangle changes from amber to red and increases in size the closer the object.

Warning

The camera(s) do not display children, pedestrians, bicyclists, crossing traffic, animals, or any other object outside of the cameras' field of view, below the bumper, or under the vehicle. Shown distances may be different from actual distances. Do not drive or park the vehicle using only these camera(s). Always check behind and around the vehicle before driving. Failure to use proper care may result in injury, death, or vehicle damage.

Park Assist (If equipped)

With Rear Park Assist (RPA), and if equipped with Front Park Assist (FPA), as the vehicle moves at speeds less than 8 km/h (5 mph) the

sensors on the bumpers may detect objects up to 1.5 m (5 ft) behind and 1.2 m (4 ft) in front of the vehicle within a zone 25 cm (10 in) high off the ground and below bumper level. These detection distances may be shorter during warmer or humid weather. Blocked sensors will not detect objects and can also cause false detections. Keep the sensors clean of mud, dirt, snow, ice, and slush; and clean sensors after a car wash in freezing temperatures.

Warning

The Park Assist system does not detect children, pedestrians, bicyclists, animals, or objects located below the bumper or that are too close or too far from the vehicle. It is not available at speeds greater than 8 km/h (5 mph). To prevent injury, death, or vehicle damage, even with Park Assist, always check the area around the vehicle and check all mirrors before moving forward or backing.


The infotainment display may have bars that show “distance to object” and object location information for the Park Assist system. As the object gets closer, more bars light up. An

obstacle is also indicated by audible beeps. The interval between the beeps becomes shorter as the vehicle gets closer to the obstacle.

When an object is very close in the vehicle rear or front, a continuous beep will sound from the front or rear. Beeps for FPA are higher pitched than for RPA.

Turning the Features On or Off



The **P** button is used to turn on or off the Front and Rear Park Assist and Rear Cross Traffic Alert at the same time. The indicator light next to the button comes on when the features are on and turns off when the features have been disabled.

To turn the rear Park Assist symbols or guidance lines on or off, see “Rear Camera Park Assist Symbols” under *Vehicle Personalization* ⇨ 67.

Automatic Parking Assist (APA)

If equipped, APA searches for and steers the vehicle into parallel or perpendicular parking spots. When using APA, you must still shift gears, and control the brakes and accelerator. A display and audible beeps help to guide parking maneuvers.

Warning

APA does not apply the brakes. APA may not detect objects in the parking space, objects that are soft or narrow, objects high off the ground such as flatbed trucks, or objects below ground level such as large potholes. Always verify that the parking space is appropriate for parking a vehicle. APA does not respond to changes in the parking space, such as movement of an adjacent vehicle, or a person or object entering the parking space. APA does not detect or avoid traffic that is behind or alongside of the vehicle. Always be prepared to stop the vehicle during the parking maneuver.



Press **P** with a square icon to enable the system to search for a parking space that is large enough and within 1.5 m (5 ft) away from the vehicle. The vehicle speed must be below 30 km/h (18 mph).

The system cannot:


- Detect whether it is a legal parking space.
- Park exactly lined up with the vehicle next to it if the spot is approached at an angle or if the parking space is angled.
- Park exactly centered in a spot that is marked too large.
- Always detect short curbs.

When enabled, APA searches for parallel parking spaces to the right of the vehicle. To search for a parking space to the left, turn on the left turn signal or change the side selection in the infotainment display. To switch the parking mode between parallel and perpendicular, press and hold **P** with a square icon during the search process or change the parking mode in the infotainment display.



After completely passing a large enough space, an audible beep occurs. A red stop symbol and message is displayed.

If the vehicle is in R (Reverse), but does not steer into the expected space, this may be because the system is maneuvering the vehicle into a previously detected space. The APA system does not need service.

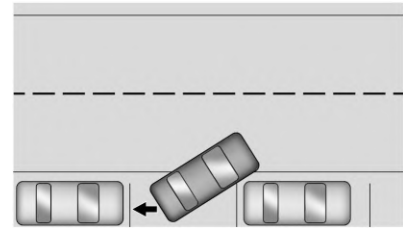


APA will instruct the vehicle to stop once a large enough space is found. Follow the displayed instructions. When instructed, shift to R (Reverse) to engage automatic steering. The steering wheel will briefly vibrate as a reminder to remove hands from the steering wheel. Check surroundings and continue braking or accelerating as needed, and be ready to stop to avoid vehicles, pedestrians, or objects.

If the vehicle exceeds 10 km/h (6 mph), APA is automatically disengaged and automatic steering will turn off. A progress arrow displays the status of the parking maneuver. Depending on the space size, additional maneuvers may be required, and there will be additional instructions. When changing gears, allow the automatic steering to complete before continuing the parking maneuver. Upon

successful completion of a maneuver, APA will beep and display a PARKING COMPLETE message. Place the vehicle in P (Park).

APA may automatically disable if:

- The steering wheel is used by the driver.
- The maximum allowed speed is exceeded.
- There is a failure with the APA system.
- Electronic stability control or antilock brakes are activated.
- A high priority vehicle message is displayed in the DIC.

To cancel APA, press  again.

When the System Does Not Seem to Work Properly

The APA system may require a short period of driving along curves to calibrate.

Forward Collision Alert (FCA) System

If equipped, the FCA system may help to avoid or reduce the harm caused by front-end crashes. When approaching a vehicle ahead too quickly, FCA provides a red flashing alert on the

windshield and rapidly beeps. FCA also lights an amber visual alert if following another vehicle much too closely.

FCA detects vehicles within a distance of approximately 60 m (197 ft) and operates at speeds above 8 km/h (5 mph).

Warning

FCA is a warning system and does not apply the brakes. When approaching a slower-moving or stopped vehicle ahead too rapidly, or when following a vehicle too closely, FCA may not provide a warning with enough time to help avoid a crash. It also may not provide any warning at all. FCA does not warn of pedestrians, animals, signs, guardrails, bridges, construction barrels, or other objects. Be ready to take action and apply the brakes. See *Defensive Driving* ⇨ 101.

FCA can be disabled, if equipped, with the FCA steering wheel control, or through vehicle personalization. See “Collision/Detection Systems” under *Vehicle Personalization* ⇨ 67.

When the vehicle is turned off and on again, the system is activated.

Detecting the Vehicle Ahead



FCA warnings will not occur unless the FCA system detects a vehicle ahead. When a vehicle is detected, the vehicle ahead indicator will display green. Vehicles may not be detected on curves, highway exit ramps, or hills, due to poor visibility; or if a vehicle ahead is partially blocked by pedestrians or other objects. FCA will not detect another vehicle ahead until it is completely in the driving lane.

Warning


FCA does not provide a warning to help avoid a crash, unless it detects a vehicle. FCA may not detect a vehicle ahead if the FCA sensor is blocked by dirt, snow, or ice, or if the windshield is damaged. It may also not detect a vehicle on winding or hilly roads, or in conditions that can limit

(Continued)

Warning (Continued)

visibility such as fog, rain, or snow, or if the headlamps or windshield are not cleaned or in proper condition. Keep the windshield, headlamps, and FCA sensors clean and in good repair.

Collision Alert

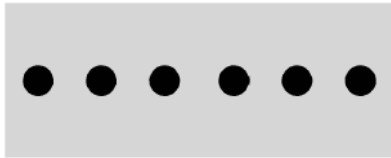


When your vehicle approaches another detected vehicle too rapidly, the red FCA alert will flash on the windshield. Also, eight rapid high-pitched beeps will sound from the front. When this Collision Alert occurs, the brake system may prepare for driver braking to occur more rapidly which can cause a brief, mild deceleration. Continue to apply the brake pedal as needed. Cruise control may be disengaged when the Collision Alert occurs.

Tailgating Alert



The vehicle ahead indicator will display amber when you are following a vehicle ahead much too closely.

Selecting the Alert Timing

The Collision Alert control is localized on the steering wheel. Press  to set the FCA timing to Far, Medium, or Near, or on some vehicles, Off. The first button press shows the current setting on the DIC. Additional button presses will change this setting. The chosen setting will remain until it is changed and will affect the timing of both the Collision Alert and the Tailgating Alert features. The timing of both alerts will vary based on vehicle speed. The faster the vehicle speed, the greater the detection warning distance (alert). Consider traffic and weather conditions when selecting the alert timing. The range of selectable alert timings may not be appropriate for all drivers and driving conditions.

Following Distance Indicator

The following distance to a moving vehicle ahead in your path is indicated in following time in seconds on the Driver Information Center (DIC). See *Driver Information Center (DIC)* ⇨ 64. The minimum following time is 0.5 seconds away. If there is no vehicle detected ahead, the vehicle ahead is out of sensor range, or is too close (under 0.5 seconds), dashes will be displayed.

Unnecessary Alerts

FCA may provide unnecessary alerts for turning vehicles, vehicles in other lanes, objects that are not vehicles, or shadows. These alerts are normal operation and the vehicle does not need service.

Cleaning the System

If the FCA system does not seem to operate properly, this may correct the issue:


- Clean the outside of the windshield in front of the rearview mirror.
- Clean the entire front of the vehicle.
- Clean the headlamps.

Automatic Emergency Braking (AEB) (If equipped)

If the vehicle has Forward Collision Alert (FCA), it also has AEB, which includes Intelligent Brake Assist (IBA). When the system detects a vehicle ahead in your path that is traveling in the same direction that you may be about to crash into, it can provide a boost to braking or automatically brake the vehicle. This can help avoid or lessen the severity of crashes when driving in a forward gear. Depending on the situation, the vehicle may automatically brake moderately or hard. This automatic emergency braking can only occur if a vehicle is detected. This is shown by the FCA vehicle ahead indicator being lit. See *Forward Collision Alert (FCA) System* ⇨ 130.

The system works when driving in a forward gear between 8 km/h (5 mph) and 80 km/h (50 mph). It can detect vehicles up to approximately 60 m (197 ft).

When the vehicle is turned off and on again, the system is activated.



Warning


AEB is an emergency crash preparation feature and is not designed to avoid crashes. Do not rely on AEB to brake the vehicle. AEB will not brake outside of its operating speed range and only responds to detected vehicles.

AEB may not:

- Detect a vehicle ahead on winding or hilly roads.
- Detect all vehicles, especially vehicles with a trailer, tractors, muddy vehicles, etc.
- Detect a vehicle when weather limits visibility, such as in fog, rain, or snow.
- Detect a vehicle ahead if it is partially blocked by pedestrians or other objects.

Complete attention is always required while driving, and you should be ready to take action and apply the brakes and/or steer the vehicle to avoid crashes.

AEB may slow the vehicle to a complete stop to try to avoid a potential crash.



Warning

AEB may automatically brake the vehicle suddenly in situations where it is unexpected and undesired. It could respond to a turning vehicle ahead, guardrails, signs, and other non-moving objects. To override AEB, firmly press the accelerator pedal, if it is safe to do so.

Intelligent Brake Assist (IBA)

IBA may activate when the brake pedal is applied quickly by providing a boost to braking based on the speed of approach and distance to a vehicle ahead.

Minor brake pedal pulsations or pedal movement during this time is normal and the brake pedal should continue to be applied as needed. IBA will automatically disengage only when the brake pedal is released.

Warning

IBA may increase vehicle braking in situations when it may not be necessary. You could block the flow of traffic. If this occurs, take your foot off the brake pedal and then apply the brakes as needed.

AEB and IBA can be disabled through vehicle personalization. See “Collision/Detection Systems” under *Vehicle Personalization* ⇨ 67.

Warning

Using AEB or IBA while towing a trailer could cause you to lose control of the vehicle and crash. Turn the system to Alert or Off when towing a trailer.

A system unavailable message may display if:

- The front of the vehicle or windshield is not clean.
- Heavy rain or snow is interfering with object detection.
- There is a problem with the StabiliTrak/ Electronic Stability Control (ESC) system.

The AEB system does not need service.



Side Blind Spot Alert (SBSA) (If equipped)

The vehicle may be equipped with the side blind spot alert system.

The side blind spot alert system detects the vehicles in the blind spot on the left and right sides of the vehicle and give alerts.

A warning sign is displayed on the exterior rearview mirror to remind the driver that there is a vehicle in the blind spot (the vehicle may not be directly visible in the interior and exterior mirrors).

The sensors used by the side blind spot alert system are located on the left and right side of the vehicle bumper.

When the vehicle is overtaking or being overtaken, if the system detects a vehicle in the blind spot, the indicator lamp  on the exterior mirror housing of the corresponding side illuminates. If the driver switches the turn signal, the indicator lamp  begins to flash, warning the driver not to change the lane.

Danger

Side blind spot alert does not replace driver vision.

The system does not detect:

- Vehicles outside the side blind zones which may be rapidly approaching.
- Pedestrians, cyclists or animals.

Before changing a lane, always check all mirrors, look over the shoulder and use the turn signal.



When the vehicle speed is higher than 10 km/h, the side blind spot alert system will be activated. When the vehicle speed is more than 140 km/h, the system will be turned off, and the indicator lamp of the left and right exterior mirrors will dim; at this time, if the vehicle speed is reduced, the indicator lamp of the mirror will be extinguished. If a vehicle is detected in the blind spot at this time, the indicator lamp of the corresponding rearview mirror will illuminate.

Note

The system only will work when the relative speed between your vehicle and the vehicle that is in the blind spot region is less than 10 km/h. Above this speed, will not work.

When the vehicle is started, the indicator lamps on the left and right exterior rearview mirror will illuminate briefly, which is a normal self-test.

The side blind spot alert system can be turned on or off in the “Setup” menu of the info display. See “*Vehicle Personalization* ⇨ 67”.

When the system is off, a message may display on the driver information center (DIC).

When the vehicle is turned off and on again, the system is activated.

Detection Area

For some stationary obstacles (such as guardrails, pillars, curbs, large walls and beams), the side blind spot alert system does not give alerts. For the parked vehicles or vehicle driving on the opposite direction road, the system also does not give alerts.

Malfunction

In normal conditions, it is also possible to occasionally miss an alarm.

When the sensors on the left or right side of the bumper are covered by soil, dirt, ice/snow or mud, or driving in a bad weather such as rain, snow, or fog, the side blind spot alert system will not work.

If the system fails or the system is unable to work due to some temporary conditions, a message may display on the driver information center. See your dealer for service.

Fuel

Recommended Fuel

Use the recommended fuel for proper vehicle maintenance.

Use unleaded petrol with a posted octane rating of 95 RON or higher and with ethanol up to 10% by volume. Unleaded petrol rated at 91 RON can be used, but acceleration and fuel economy will be reduced, and an audible knocking noise may be heard. If this occurs, use petrol rated at 95 RON as soon as possible, otherwise the engine could be damaged. If heavy knocking is heard when using unleaded petrol rated at 95 RON, the engine needs service.

Caution
Use of fuel with too low an octane rating could lead to uncontrolled combustion and engine damage.

Fuel Additives

Vehicles with ECOTEC 6 system – (Ethanol and Petrol)

We recommend you to add a bottle of ACDelco Flexpower additive every four complete fillings or 200 litres of the fuel tank, in the following conditions:

- In vehicles which are not driven for more than two weeks or if they are just used in short distances, and not daily.
- In vehicles which fuel additives are not usually used.

Caution

Never use additive for petrol in the ethanol or vice-versa.

Filling the Tank

Danger

Before refuelling, switch off the engine. Switch off any mobile phones.

Follow the operating and safety instructions of the gas station when refuelling.

Danger

Fuel is flammable and explosive. No smoking. No naked flames or sparks.

(Continued)

Danger (Continued)

If you can smell fuel in your vehicle, have the cause of this remedied immediately by a Chevrolet dealer.


Caution

If you use inappropriate grade fuel or put incorrect fuel additives into the fuel tank, the engine and catalytic converter may be seriously damaged.

Be sure to use the correct fuel (petrol or ethanol) corresponding to your vehicle when refuelling. If you fill the flex vehicle with diesel, your vehicle can be seriously damaged.

Caution

In case of misfuelling, do not switch on ignition.

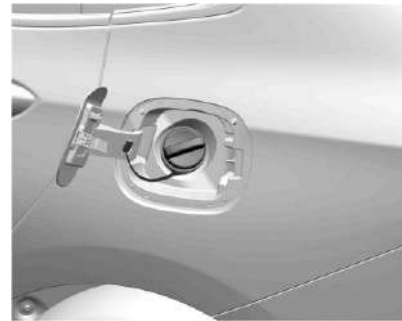

The cap is behind a small fuel door on the driver side of the vehicle.



Pull up the small fuel door handle on the left side of the driver seat to open the small fuel door.

To remove the fuel cap, turn it slowly counterclockwise.

While refueling, hang the fuel cap from the hook on the small fuel door.

When replacing the fuel cap, turn it clockwise until it clicks once. Make sure the cap is fully installed.

Caution

Wipe off any overflowing fuel immediately.

Fuel Filler Cap

Only a genuine fuel filler cap provides full functionality.

Conversions and Add-Ons

Add-On Electrical Equipment

Warning

The Data Link Connector (DLC) is used for vehicle service and Emission Inspection/Maintenance testing. See *Malfunction Indicator Lamp* ⇨ 59. A device connected to the DLC — such as an aftermarket fleet or driver-behavior tracking device — may interfere with vehicle systems. This could affect vehicle operation and cause a crash. Such devices may access and corrupt data stored in the vehicle's systems.

Caution

Some electrical equipment can damage the vehicle or cause components to not work and would not be covered by the vehicle warranty. Always check with your dealer before adding electrical equipment.

Add-on equipment can drain the vehicle's 12-volt battery, even if the vehicle is not operating.

The vehicle has an airbag system. Before attempting to add anything electrical to the vehicle, check if that will not affect security and see *Airbag System* ⇨ 28.

Vehicle Care

General Information

General Information	138
Accessories and Modifications	138
Lifting the Vehicle	139
Battery Disconnect Switch	139
Vehicle Storage	139

Vehicle Checks

Doing Your Own Service Work	140
Hood	140
Engine Compartment Overview	142
Engine Oil	143
Engine Oil Life System	145
Automatic Transmission Fluid	145
Manual Transmission Fluid	146
Engine Air Cleaner/Filter	146
Cooling System	146
Engine Overheating	148
Engine Fan	149
Washer Fluid	150
Brakes	151
Brake Fluid	151
Battery	152
Wiper Blade Replacement	153

Bulb Replacement

Bulb Replacement	154
------------------------	-----

Bulb Replacement	154
Halogen Bulbs	155
LED Lighting	155
Headlamps	155
Taillamps	156
Side Turn Signal Lamps	158
License Plate Lamp	159
Interior Lamps	159
Instrument Panel Illumination	160

Electrical System

Fuses	160
Engine Compartment Fuse Block	161
Instrument Panel Fuse Block	165

Vehicle Tools

Tools	168
-------------	-----

Wheels and Tires

Wheels and Tires	168
Tire Designations	169
Tire Pressure	169
Tire Pressure Monitor System	169
Tire Pressure Monitor Operation (if equipped)	170
Tire Inspection	171
Tread Depth	171
Tire Rotation	172
When It Is Time for New Tires	173
Different Tire and Wheel Types	173

Wheel Covers (if equipped)	173
Wheel Replacement	174

Jump Starting

Jump Starting	178
---------------------	-----

Towing

Towing the Vehicle	179
--------------------------	-----

Appearance Care

Exterior Care	180
Interior Care	181

General Information

This manual was printed on the date specified on the cover and contains information based on a vehicle fully equipped with options and accessories available at such date. Thus, there might be discrepancies between the manual content and the vehicle configuration, or yet, your vehicle may not include some of the items mentioned herein.

General Motors reserves the right to implement any changes to its products in order to meet the client requirements and expectations at any time.

In case of questions regarding the content of your vehicle, look for a Chevrolet dealer to consult the Sales Specification Manual according to the vehicle identification number (VIN).

Accessories and Modifications

In order to comply with your comfort requirements and vehicle customization, General Motors develops and offers original manufacturer options and accessories approved for installation through a Chevrolet dealer or through a Chevrolet authorized service operation.

We recommend that you contact your dealer or Chevrolet authorized workshop for the purposes of obtaining information on available and existing options and accessories.

We recommend using genuine parts and accessories and factory-approved parts specific for your vehicle type. We cannot assess or guarantee reliability of other products, even if they have a regulatory or otherwise granted approval.

Caution

Never modify the vehicle. Adding non GM-certified accessories or making modifications to the vehicle, changes its original condition and factory specifications, deteriorates the functionality and performance of vehicle systems, affecting safety, durability, in addition to losing vehicle warranty.

Some examples, but not limited to: The use of fuels outside of specifications, installation of compressed natural gas, armoring, changes on vehicle suspension and usage of non-original tires, are some examples of modifications

that affect the original vehicle specifications, correct functionality, vehicle warranty and occupant safety.

Note


Due to the technology applied to the electronic system, do not install any type of electrical equipment that is not genuine to the vehicle wiring harnesses, such alarms, power windows, electric locks, ignition and/or fuel inhibitors, audio systems (for instance, radio and power modules), air conditioning systems, auxiliary illumination, among others. As consequence, the vehicle may be damaged, and may cause electrical breakdown, communication failure between the electronic components, immobilization or even fire.

THESE SITUATIONS ARE NOT COVERED BY WARRANTY.

Chevrolet Authorized Dealerships and Repair Shops are qualified and have proper knowledge for installing genuine accessories, which are compatible with your specific vehicle systems.

Please consult your authorized Chevrolet service center for accessories that are approved for your vehicle and for proper installation methods.

Lifting the Vehicle

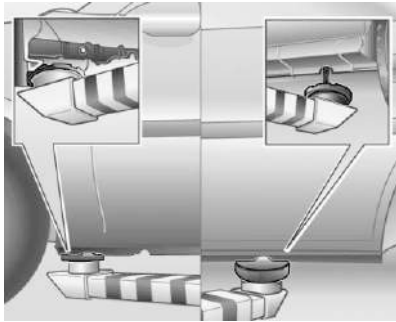

The location of the support points of an elevator or a workshop jack must be applied only on indicated locals on illustrations, at the front and rear portions, in the areas between the place for jack installing and the wheels housings.

Note

If the elevators support points or jacks are metallic, a rubber protection must be used to avoid vehicle damages.

Battery Disconnect Switch

Disconnect



1. Open the bonnet.
2. Be sure to turn off all the electrical systems, like the audio system, headlamps, tail lights, anti-theft alarm system and accessories. Be sure to turn off the ignition and remove the key from the ignition switch.
3. Close all the vehicle's doors and don't activate the anti-theft alarm.
4. Remove the battery protector (if equipped).

5. Unscrew the nut of the negative terminal end.
6. Remove the terminal end from battery terminal.

Connect

1. Be sure that the ignition is turned off and remove the key from the ignition switch. Open the bonnet and install the terminal end on the battery terminal.
2. Tighten the nut of the negative terminal end.
3. Install the battery protector (if equipped).
4. Close the bonnet.

Note

Before any work on the vehicle, refer to "Preventing damage to electronic components".

Vehicle Storage

Storage for a Long Period of Time

If the vehicle is going to be stored for several months:

- Wash and wax the vehicle.
- Clean and preserve rubber seals.

- Change engine oil.
- Drain washer fluid reservoir.
- Check coolant anti-freeze and corrosion protection.
- Adjust tyre pressure to the value specified for full load.
- Park vehicle in dry, well ventilated place. Engage the first or the reverse gear in order to prevent the vehicle from rolling.
- Do not apply the parking brake.
- Disconnect the battery, see *Battery Disconnect Switch* ⇨ 139
- Close the bonnet.


Putting back into Operation

When the vehicle is going to be put back into operation:

- Connect the battery, see *Battery Disconnect Switch* ⇨ 139
- Check the tyre pressure.
- Fill up the washer fluid reservoir.
- Check the engine oil level.
- Check the coolant level.

Vehicle Checks

Doing Your Own Service Work

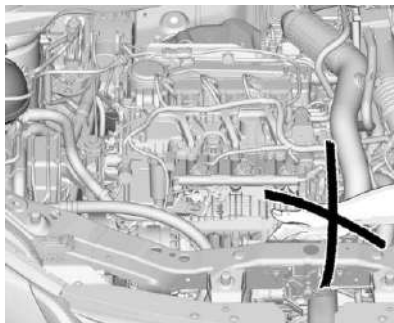

Danger

Only perform engine compartment checks when the ignition is off.


The cooling fan may start operating even if the ignition is off.

Danger

The ignition system uses extremely high voltage. Do not touch.


Hood

Opening

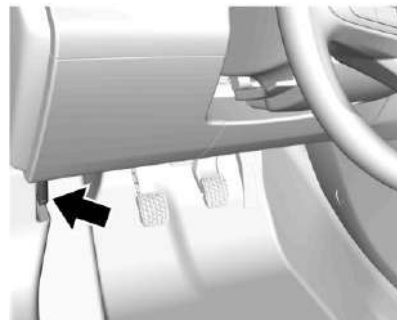

Pull the hood release handle. It is inside the vehicle to the left of the steering column.


The engine bonnet will be partially open and held only by the latch.

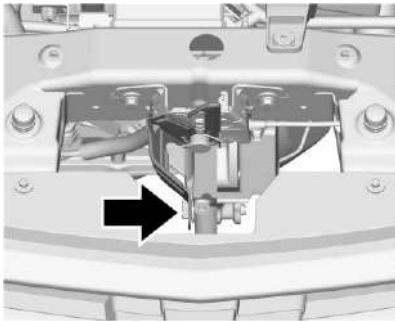

Push the safety catch to the driver's side and open the bonnet.

Danger

When the engine is hot, ensure that you only touch the foam padding of the hood support rod to avoid burning.

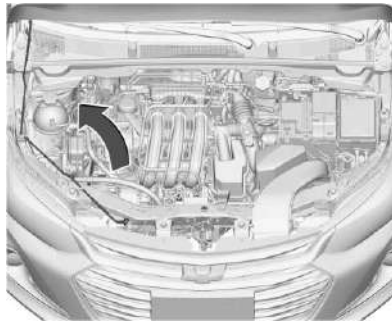

To keep the engine bonnet open, insert the sustaining rod in the engine bonnet hole.

Closing

Before closing the bonnet, press the support into the holder.

To close the bonnet, lower it gradually, let it finally fall by its weight. Always make sure if the bonnet was properly closed, trying lift it. If it isn't closed properly, repeat the close operation.

Danger


Always observe the following precautions:

- Pull on the front edge of the bonnet to make sure it is latched securely before you drive your vehicle.
- Do not pull the bonnet release handle while your vehicle is moving.
- Do not move your vehicle with the bonnet open. An open bonnet will obscure the driver's vision.
- Operating your vehicle with the bonnet open can lead to a collision resulting in damage to your vehicle, other property, personal injury or even death.

Caution

Do not pull down on the bonnet when it is supported by the rod.

Engine Compartment Overview

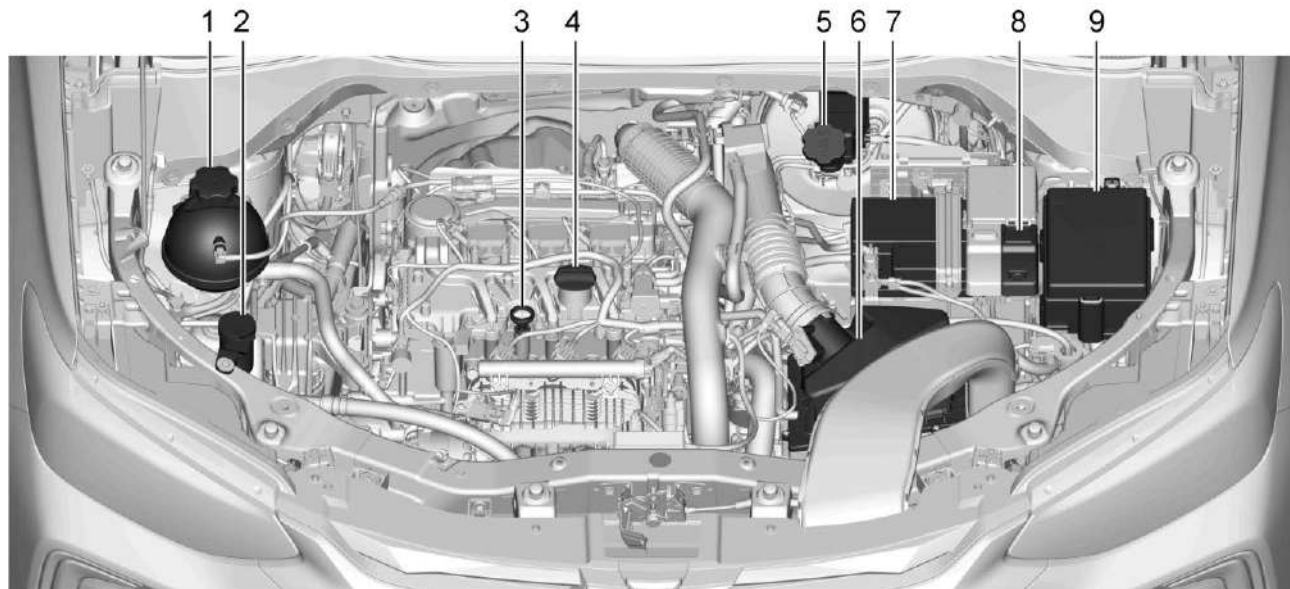

1. Engine Coolant Container.
See *Cooling System* ⇨ 146.
2. Washer Fluid Container.
See *Washer Fluid* ⇨ 150.
3. Dipstick for Engine Oil Level.
See *Engine Oil* ⇨ 143.
4. Engine Oil Cap.
See *Engine Oil* ⇨ 143.
5. Brake Fluid Container.
See *Brake Fluid* ⇨ 151.
6. Engine air filter
See *Engine Air Cleaner/Filter* ⇨ 146
7. Battery.
See *Battery* ⇨ 152
8. Positive (+) Battery Terminal (Under Cover)
See *Jump Starting* ⇨ 178
9. Engine Compartment Fuse Block.
See *Engine Compartment Fuse Block* ⇨ 161


Engine Oil

To ensure proper engine performance and long life, careful attention must be paid to engine oil. Following these simple, but important steps will help protect your investment:

- Use engine oil approved to the proper specification and of the proper viscosity grade. See “Selecting the Right Engine Oil” in this section.
- Check the engine oil level regularly and maintain the proper oil level. See “Checking Engine Oil” and “When to Add Engine Oil” in this section.
- Change the engine oil at the appropriate time. See *Engine Oil Life System* ⇨ 145.
- Always dispose of engine oil properly. See “What to Do with Used Oil” later in this section.

Checking Engine Oil

Check the engine oil level regularly, every 650 km, especially prior to a long trip. The engine oil dipstick handle is a loop. See *Engine Compartment Overview* ⇨ 142 for the location.



Warning

The engine oil dipstick handle may be hot; it could burn you. Use a towel or glove to touch the dipstick handle.

To check the oil level, follow these guidelines:

- To get an accurate reading, park the vehicle on level ground. Check the engine oil level after the engine has been off for at least two hours. Checking the engine oil level on steep grades or too soon after engine shutoff can result in incorrect readings. Accuracy improves when checking a cold engine prior to starting. Remove the dipstick and check the level.
- If unable to wait two hours, the engine must be off for at least 15 minutes if the engine is warm, or at least 30 minutes if the engine is not warm. Pull out the dipstick, wipe it with a clean paper towel or cloth, then push it back in all the way. Remove it again, keeping the tip down, and check the level.

When to Add Engine Oil



If the oil is below the cross-hatched area at the tip of the dipstick and the engine has been off for at least 15 minutes, add 1 L of the recommended oil and then recheck the level. See “Selecting the Right Engine Oil” later in this section for an explanation of what kind of oil to use.

Caution

Do not add too much oil. Oil levels above or below the acceptable operating range shown on the dipstick are harmful to the engine. If you find that you have an oil level above the operating range, i.e., the engine has so much oil that the oil level gets above the upper mark that shows the proper operating range, the engine could be damaged. You should drain out the excess

(Continued)

Caution (Continued)

oil or limit driving of the vehicle and seek a service professional to remove the excess amount of oil.

See *Engine Compartment Overview* ↗ 142 for the location of the engine oil fill cap.

Add enough oil to put the level somewhere in the proper operating range. Push the dipstick all the way back in when through.

Selecting the Right Engine Oil

Selecting the right engine oil depends on both the proper oil specification and viscosity grade.

Specification

Use full synthetic engine oils that meet the dexos1 specification. Engine oils that have been approved by GM as meeting the dexos1 specification are marked with the dexos1 approved logo. See www.gmdexos.com.



Caution

Failure to use the recommended engine oil or equivalent can result in engine damage not covered by the vehicle warranty.

Viscosity Grade

Use SAE 5W-30 viscosity grade engine oil.

When selecting an oil of the appropriate viscosity grade, it is recommended to select an oil of the correct specification. See “Specification” earlier in this section.

Engine Oil Additives/Engine Oil Flushes

Do not add anything to the oil. The recommended oils meeting the dexos1 specification are all that is needed for good performance and engine protection.

Engine oil system flushes are not recommended and could cause engine damage not covered by the vehicle warranty.

What to Do with Used Oil

Used engine oil contains certain elements that can be unhealthy for your skin and could even cause cancer. Do not let used oil stay on your skin for very long. Clean your skin and nails with soap and water, or a good hand cleaner. Wash or properly dispose of clothing or rags containing used engine oil. See the manufacturer's warnings about the use and disposal of oil products.

Used oil can be a threat to the environment. If you change your own oil, be sure to drain all the oil from the filter before disposal. Never dispose of oil by putting it in the trash or pouring it on the ground, into sewers, or into streams or bodies of water. Recycle it by taking it to a place that collects used oil.

Engine Oil Life System

When to Change Engine Oil

This vehicle has a computer system that indicates when to change the engine oil and filter. This is based on a combination

of factors which include engine revolutions, engine temperature, and kilometers driven. Based on driving conditions, the mileage at which an oil change is indicated can vary considerably. For the oil life system to work properly, the system must be reset every time the oil is changed.

When the system has calculated that oil life has been diminished, it indicates that an oil change is necessary. Change the oil as soon as possible within the next 1000 km. It is possible that, if driving under the best conditions, the oil life system may indicate that an oil change is not necessary for up to a year. The engine oil and filter must be changed at least once a year and, at this time, the system must be reset. Your dealer has trained service people who will perform this work and reset the system. It is also important to check the oil regularly over the course of an oil drain interval and keep it at the proper level.

If the system is ever reset accidentally, the oil must be changed at 5000 km since the last oil change. Remember to reset the oil life system whenever the oil is changed.

How to Reset the Engine Oil Life System

1. Using the DIC controls on the right side of the steering wheel, display REMAINING OIL LIFE on the DIC. See *Driver Information Center (DIC)* ⇨ 64.
2. Press SET/CLR button for a few seconds while viewing this page to reset the oil life at 100%.

Be careful not to reset the oil life display accidentally at any time other than after the oil is changed. It cannot be reset accurately until the next oil change.

Automatic Transmission Fluid

It is not necessary to check the transmission fluid level.

A transmission fluid leak is the only reason for fluid loss. If a leak occurs, take the vehicle to your dealer service department and have it repaired as soon as possible.

The vehicle is not equipped with a transmission fluid level dipstick.

There is a special procedure for checking and changing the transmission fluid in case of leakage. Because this procedure is

difficult, this should be done at the dealer service department. Contact the dealer for additional information.

Note

Chevrolet uses and recommends lubricants, fluids and chemicals ACDelco and recommend GM Genuine Parts.

Manual Transmission Fluid

If the vehicle is equipped with manual transmission, it is not necessary to check the manual transmission fluid level.

A transmission fluid leak is the only reason for fluid loss. If a leak occurs, take the vehicle to your dealer service department and have it repaired as soon as possible.

Note

Chevrolet uses and recommends lubricants, fluids and chemicals ACDelco and recommend GM Genuine Parts.

Engine Air Cleaner/Filter

The engine air cleaner/filter is in the engine compartment on the passenger side of the vehicle. See *Engine Compartment Overview*

↔ 142.

When to Inspect the Engine Air Cleaner/Filter

For intervals on changing and inspecting the engine air cleaner/filter, see the Maintenance Schedule booklet. Because this procedure is difficult, this should be done at the dealer service department. Contact the dealer for additional information.

Warning


Operating the engine with the air cleaner/filter off can cause you or others to be burned. Use caution when working on the engine. Do not start the engine or drive the vehicle with the air cleaner/filter off, as flames may be present if the engine backfires.

Caution

If the air cleaner/filter is off, dirt can easily get into the engine, which could damage it. Always have the air cleaner/filter in place when driving.


Cooling System

The cooling system allows the engine to maintain the correct working temperature.

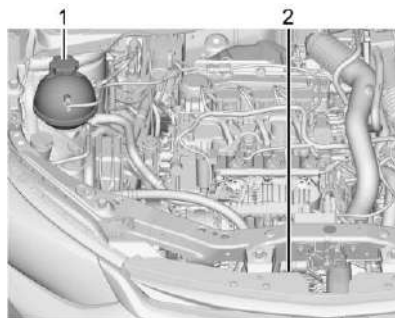


Turbo Engine Coolant Surge Tank Shown, Other Similar

1. Coolant Surge Tank and Pressure Cap
2. Engine Cooling Fan (Out of View)

 **Warning**

An underhood electric fan can start up even when the engine is not running and can cause injury. Keep hands, hair, clothing, and tools away from any underhood electric fan.

 **Warning**


Do not touch heater or radiator hoses, or other engine parts. They can be very hot and can burn you. Do not run the engine if there is a leak; all coolant could leak out. That could cause an engine fire and can burn you. Fix any leak before driving the vehicle.

Engine Coolant

The cooling system in the vehicle is filled with ACDelco engine coolant mixture. Refer to *Recommended Fluids and Lubricants* ⇨ 186.

The following explains the cooling system and how to check and add coolant when it is low. If there is a problem with engine overheating, see *Engine Overheating* ⇨ 148.

What to Use

 **Warning**

Plain water, or other liquids such as alcohol, can boil before the proper coolant mixture will. With plain water or the wrong mixture, the engine could get too hot but there would not be an overheat warning. The engine could catch fire and you or others could be burned.


Use a mixture of clean, drinkable water and ACDelco coolant. This mixture:

- Gives freezing protection down to -20°C , outside temperature.
- Gives boiling protection under specific vehicle test conditions.
- Protects against rust and corrosion.

Never dispose of engine coolant by putting it in the trash, or by pouring it on the ground, or into sewers, streams or bodies of water. Have the coolant changed by an authorized service center, familiar with legal requirements regarding used coolant disposal. This will help protect the environment and your health.

Checking Coolant

The vehicle must be on a level surface when checking the coolant level.

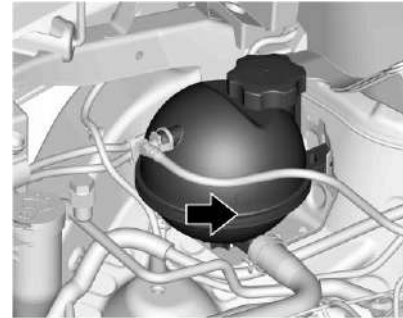

The coolant surge tank is located in the engine compartment on the passenger side of the vehicle. See *Engine Compartment Overview* ⇨ 142.

Check to see if coolant is visible in the coolant surge tank. If the coolant inside the coolant surge tank is boiling, do not do anything else until it cools down. See *Engine Overheating* ⇨ 148.

If the cooling system is cold, the coolant level should be at the filling line mark. Top up to the filling line mark if the level is low.

Install the cap, tightening securely.

Caution

The cap of the surge tank and the surge tank have clamping limiter. To close the cap, tighten it slowly and when realized resistance, stop turning. If the cap exceeds the limiter, the cap and the surge tank will be damaged, causing malfunction in the cooling system, which can cause engine damage. These damages are not covered by warranty.

Note

In case you need to refill constantly, go to a Chevrolet Dealership or Authorized Repair Shop to have the system cap (or occasional leakage) checked and change the coolant in order to get the proper ratio.

Danger

The vapors and the scalding liquids that come from cooling system in boiling, can explode and cause serious burnings. They are under pressure, and if the surge tank

(Continued)

Danger (Continued)

cover is opened even partially, the vapors may be expelled at high speed. Never remove the surge tank cover while the engine and the cooling system are hot. If it is necessary to remove the surge tank cover, wait for the engine to cool down.

Engine Overheating

The coolant temperature indicator lamp of your vehicle is located in the instrument panel. This lamp indicates the engine temperature is increasing.

Note

If the engine operates without coolant, your vehicle may be seriously damaged. In this case, the repairs will not be covered by warranty.

Engine Overheating without Steam

If you note the overheating advise and there are no signs of steam, the problem may not be that serious. The engine may overheat when:

- The vehicle is driven in abrupt climb at high ambient temperatures.

- The vehicle is stopped after driving at high speeds.
- The vehicle has been driven at idle speed during a long trip.

If there are no changes or signs of steam, observe the following procedure during 1 minute approximately:

1. Switch off the air conditioning system.
2. Try to keep the engine under load (use a gear in which the engine rotates slowly).

If the warning of overheating disappears, you must continue driving. For safety reasons, drive slowly for approximately 10 minutes.

If the coolant temperature does not drop, stop the engine and park the vehicle immediately.

If no steam is visible, switch on the engine at idle speed for approximately 2 or 3 minutes with the vehicle stopped and observe if the overheating warning lights turn off.

If the overheating warning continues lit on, switch off the engine, ask the passengers to leave the vehicle and wait for it to cool down. You can decide whether to open the engine compartment, but look for technical assistance immediately. If you open the engine compartment, check the coolant surge tank.

 **Danger**

If the coolant inside the coolant surge tank is boiling, do not do anything and wait for it to cool down.

The coolant level should be at specified. If the level falls down, it means that there might be a possibility of leaks on the radiator hoses, heater hoses, radiator or water pump.

 **Danger**

- The heater hoses and radiator hoses as well as other engine parts may be hot. Do not touch them, otherwise, you may be burned.
- If there is any leak, the engine must not be switched on, otherwise, all coolant may be lost, causing burns. Before driving the vehicle, have the leaks repaired.

Overheating with Steam

 **Danger**

- The steam generated by engine overheating can cause serious burns, even if you open the engine compartment just a little bit. Keep yourself away from the engine when observing steam emission. Switch off the engine, ask the passengers to leave the vehicle and wait for it to cool down. Before opening the engine compartment, wait until the coolant steam signals are extinguished.
- If the vehicle continues in movement while the engine is overheated, the liquids can escape due to the high pressure. You and other persons may be seriously burned. Switch off the overheated engine, leave the vehicle and wait for it to cool down.

Engine Fan

If there is no signal of leakage, check for engine fan operation. Your vehicle is equipped with electrical fan. If there is engine overheating, the fan must be actuated. If the fan does

not actuate, repairs are necessary. Switch off the engine. If the problem is not identified, but the coolant level is not at maximum, add to the surge tank a mixture of potable water and additive for radiator. Refer to *Recommended Fluids and Lubricants* ⇨ 186. Switch on the engine when the coolant level is at maximum. If the overheating warning signal is on, consult a Chevrolet Dealership or Authorized Repair Shop.

 **Danger**

The fans and other engine movable parts may cause severe wounds. Keep your hands, hair and pieces of cloth far from movable parts.

The fan may operate even when the engine is not running.

⚠ Danger

- The vapours and the scalding liquids that come from the cooling system while boiling can explode and cause serious burns. They are under pressure, and if the surge tank cover is opened even partially, the vapours may be expelled at high speed. Never remove the surge tank cover while the engine and the cooling system are hot. If it is necessary to remove the surge tank cover, wait for the engine to cool down.
- The long life additive for the cooling system is poisonous and must be carefully handled.

Note

In order to avoid damages to the vehicle and make the starting easier when the engine is hot (due to the fuel evaporation), the engine vent system may be actuated even after the vehicle disconnection for a given period, depending on the room temperature and the engine temperature.

Note

The fan operates in normal engine operation condition to cool the refrigerant or during air conditioning normal operation. It's operation does not mean that the engine is overheating.

Washer Fluid**What to Use**

When windshield washer fluid is needed, be sure to read the manufacturer's instructions before use. If operating the vehicle in an area where the temperature may fall below freezing, use a fluid that has sufficient protection against freezing.

Adding Washer Fluid

Open the cap with the washer symbol on it. Add washer fluid until the tank is full.

See *Engine Compartment Overview* ⇨ 142 for reservoir location.

Caution

- Do not use washer fluid that contains any type of water repellent coating. This can cause the wiper blades to chatter or skip.
- Do not use engine coolant (antifreeze) in the windshield washer. It can damage the windshield washer system and paint.
- Do not mix water with ready-to-use washer fluid. Water can cause the solution to freeze and damage the washer fluid tank and other parts of the washer system.
- When using concentrated washer fluid, follow the manufacturer instructions for adding water.
- Fill the washer fluid tank only three-quarters full when it is very cold. This allows for fluid expansion if freezing occurs, which could damage the tank if it is completely full.

Brakes

Cares with the New Brake Pads


When new brake pads are installed, do not brake unnecessarily hard during the first 300 km.

Brake pads wear must not exceed a certain limit. Regular maintenance as detailed in the **Preventive Maintenance Plan** is therefore of the utmost importance for your safety.

Brake Fluid


Danger

Brake fluid is poisonous and corrosive. Avoid contact with eyes, skin, fabrics and painted surfaces.

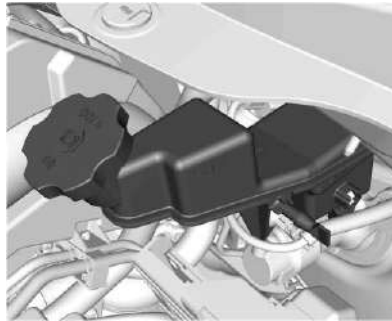

The brake fluid level must be between the **MIN** and the **MAX** marks.

The refilling of the brake fluid is not recommended, because there is a relation between the fluid level, the clutch system and the wear of the brake pad. Consult a Chevrolet Dealership or Authorized Repair Shop, to be checked the level if it is below the minimum mark specified in the reservoir, the leak is corrected and the fluid replaced.

If the brake indicator lamp  lights up or remains lit up for longer periods go to a Chevrolet Dealership or Authorized Repair Shop.

Danger

- Make sure you thoroughly clean around the brake fluid reservoir cap before removing the cap.
- Contamination of the brake fluid system can affect system performance, leading to costly repairs.
- An overflow of brake fluid on the engine may cause the fluid to burn.
- Do not overfill the reservoir.
- An engine fire can cause personal injuries and damage your vehicle and other property.
- Do not dispose of used brake fluid with your household waste.
- Use your local, authorized waste management facility.
- Used brake fluid and their containers are hazardous. They can damage your health and the environment.
- Brake fluid is harsh and can irritate skin and eyes.

(Continued)

Danger (Continued)

- Do not allow the brake fluid to contact your skin or eyes. If it does, immediately wash the affected area thoroughly with soap and water, or hand cleaner.

Battery

The ACDelco battery that equips your vehicle is periodic maintenance-free. If the vehicle is not used for 30 days or more, disconnect the battery negative cable in order not to discharge it.

Caution

- Lighting matches near the battery can cause a gas explosion. If you need more illumination in the engine compartment, use a lantern.
- The battery, even when sealed, contains acid that causes burns. If the acid drops on your skin or eyes, wash the affected parts with running water and look for medical care immediately.
- To minimize the risk of solution drops on eyes, use protective glasses when handling batteries.
- General Motors is not responsible for accidents caused by negligence or incorrect batteries handling.

Battery Mandatory Recycling

When replacing, leave the old battery to the reseller (resolution CONAMA 401/08 from 04/11/08):

- Every consumer/final user must return the used battery of the vehicle. It should not be discarded in the regular trash.
- The Chevrolet Dealership or Authorized Repair Shop where you bought the vehicle battery should accept the used battery return and send it to the battery manufacturer for recycling purposes.

Caution

Risks when contacting the acid solution and lead:

- Basic composition: lead, sulphuric acid diluted and plastic.
- In case the acid solution and lead contained in the battery are discarded into the environment in an improper way, they can contaminate the soil, subsoil and water, as well as cause health risks to human beings.
- If there is accidental eye or skin contact with these products, the affected parts must be immediately washed with flushing water and the person must look for medical care.
- Whenever the battery is carried, keep it on the horizontal position in order to avoid leakage from the breather.

Preventing Damage to Electronic Components



In order to avoid breakdown of electronic components, never disconnect the battery with the engine running. Remove the key from ignition before effect the disconnection.

Whenever disconnecting the battery, first disconnect the negative cable and then the positive cable. Do not reverse the cable position.

When reconnecting, remove the key from ignition, connect the positive cable first and then the negative cable.


Wiper Blade Replacement

The correct operation of windscreen wiper blades and a good visibility are essential conditions for a safety driven. Check the wiper blades frequently. Clean wiper blades with a neutral soap diluted in water. Avoid to use the windscreen wipers dry or without the washers have been actuated. For safety reasons, is recommended that the wiper blades are changed at least once a year or whenever its efficiency is reduced prejudicing the visibility in the rain.

Inspection: regularly inspect the blade condition. Clean them with neutral soap diluted in water.

Replacement: replace the blades at least yearly or when its efficiency gets reduced impairing the visibility under rain.


Windshield Wiper Blade Replacement

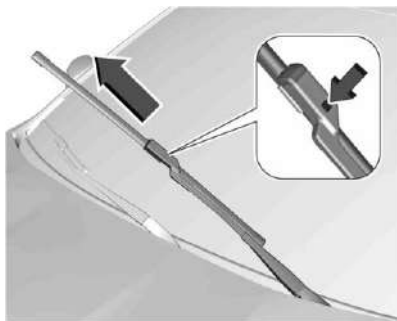

1. Pull the windshield wiper assembly away from the windshield.
2. Press the button in the middle of the wiper arm connector, and pull the wiper blade away from the arm connector.
3. Remove the wiper blade.
4. Reverse Steps 1–3 for wiper blade replacement.

Rear Wiper Blade Replacement

Wiper blade on the rear window

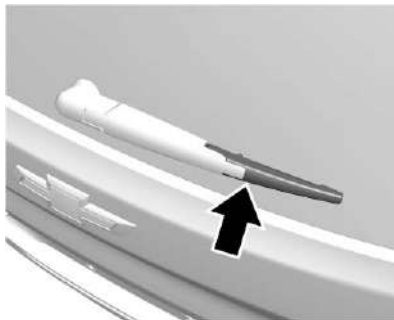

Lift wiper arm. Push the wiper blade, slightly angled to the wiper arm, downwards until it disengages.

Attach the wiper blade, slightly angled to the wiper arm, and push until it engages.

Lower wiper arm carefully.

Bulb Replacement

In case that there is any inconvenience or adversity or for more information about bulb replacement, contact a Chevrolet Dealership.

Bulb Replacement

The bulbs replacement must be performed preferably at a Chevrolet Dealership or Authorized Repair Shop. When replacing a bulb, turn off the respective circuit switch. Avoid touching the bulb glass with bare hands. Inadvertently stained bulbs may be cleaned with a clean non-fluffy cloth, using alcohol. The replacement bulbs must have the same characteristics and capacities of the defective bulb.

Application	Power (W)
High beam	55 or LED
Low beam	55 or LED
Daytime Running Light (DRL)	LED
Front turn signal light	21 or LED
Rear turn signal light	21
Rear position lamp	5 or LED
Brake/Tail light - brake	21 or LED
Rear Fog lamp – if equipped	21

Application	Power (W)
Reverse light	16
Side Turn Signal lamp	5 or LED
License plate lamp	5

Note

After driving in heavy rain or after washing, some exterior light lenses could appear blurry.

This condition is caused by the temperature difference between the inside and outside of the light.

This is similar to the condensation on your windows inside your vehicle during the rain and doesn't indicate a problem with your vehicle.


If there is water infiltration into the exterior lighting parts, have the vehicle checked by a Chevrolet Dealership or Authorized Repair Shop.

Halogen Bulbs**Warning**

Halogen bulbs have pressurized gas inside and can burst if you drop or scratch the bulb. You or others could be injured. Be sure to read and follow the instructions on the bulb package.

LED Lighting

This vehicle has several LED lamps. For replacement of any LED lighting assembly, contact your dealer.

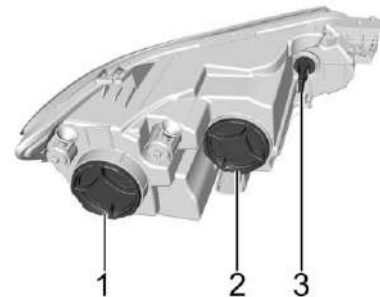Headlamps


Driver Side Shown (Base Level), Passenger Side Similar

1. Low beam
2. High beam
3. Turn signal light

High/Low beam

To replace one of the High/Low beam bulbs:

1. Remove the cover from the back of the headlamp assembly by turning it counterclockwise.

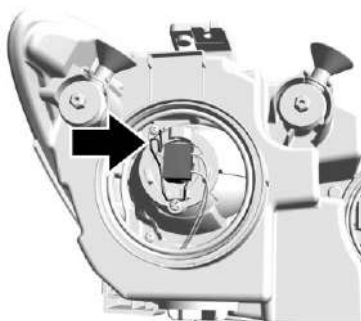

Low Beam Shown, High Beam Similar


2. Press the spring clip and disengage it.
3. Remove the bulb holder from the reflector housing, remove the bulb from the socket and replace with a new bulb.
4. Reverse Steps 1–3 to reinstall.

Turn signal light and Position light

1. Remove the bulb socket by turning counterclockwise and pulling straight out.
2. Remove the bulb from the socket.
3. Install the new bulb in the bulb socket.
4. Install the bulb socket by turning clockwise.


Taillamps

Tailgate Inboard Taillamp and Back-Up Lamp

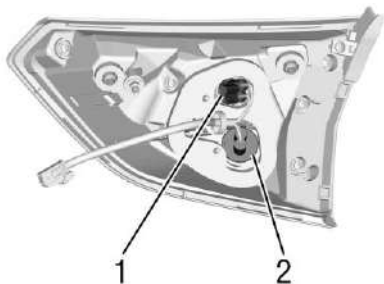

Driver Side Shown (LS/LT), Passenger Side Similar

1. Position lamp
2. Back-Up Lamp

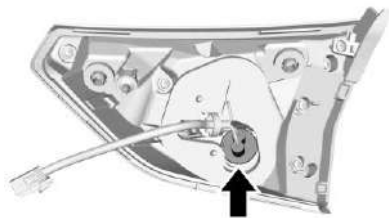

Driver Side Shown (Premier), Passenger Side Similar

Back-Up Lamp

To replace any one of these bulbs:


1. Open the Tailgate.



2. Remove the bulb access door on tailgate.




3. Remove screw attaching the taillamp assembly to the tailgate.

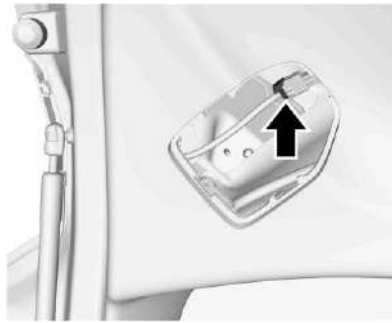


4. Disengage the taillamp assembly from the plug connector, and detach the taillamp assembly from the tailgate.
5. Remove the bulb socket by turning counterclockwise and pulling straight out.
6. Remove the bulb from the socket.
7. Install the new bulb in the bulb socket.
8. Install the bulb socket by turning clockwise.
9. Install the taillamp assembly to tailgate with the screw, and reconnect the plug connector.
10. Reassemble the cover.

Stoplamp, Taillamp and Turn Signal Lamp

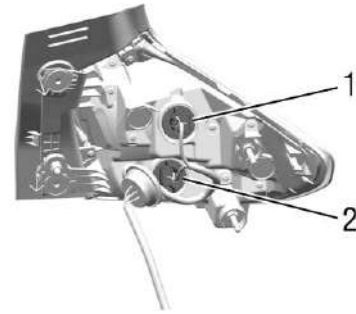

Driver Side Shown (LS/LT), Passenger Side Similar

1. Stoplamp/Position lamp
2. Turn Signal Lamp

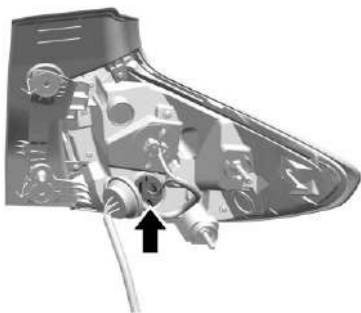


Driver Side Shown (Premier), Passenger Side Similar

Turn Signal Lamp


To replace any one of these bulbs:

1. Open the tailgate.

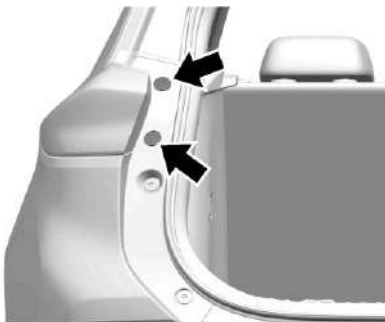

2. Remove both screws attaching the taillamp assembly to the vehicle body.
3. Remove the taillamp assembly by pulling it straight back.
4. Remove the bulb socket from the taillamp assembly by turning it counterclockwise.
5. Remove the bulb from the socket by pulling it straight out.
6. Install a new bulb into the socket.
7. Install the bulb socket into the taillamp assembly by turning it clockwise.
8. Install the taillamp assembly to the vehicle body with the two screws.

Side Turn Signal Lamps Fender (If equipped)

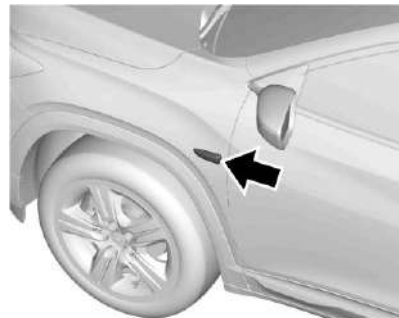

Driver Side Shown, Passenger Side Similar

1. Pry the bulb housing out with a proper tool.
2. Remove the bulb housing downward, taking care not to pull on the cable.




Rotate the bulb holder counterclockwise to disengage it.

3. Remove the bulb from the holder and replace the bulb.
4. Insert the bulb holder in the bulb housing and rotate it clockwise.
5. Insert the bulb housing taking care with the fit.


Rearview Mirror (If equipped)

For replacement of any LED lighting assembly, contact your dealer.

License Plate Lamp

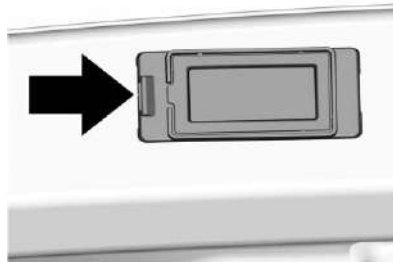

1. Prise the bulb housing out with a proper tool.
2. Remove the bulb housing downward, taking care not to pull on the cable.

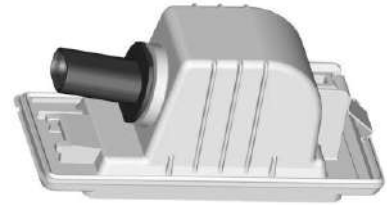

Rotate the bulb holder counterclockwise to disengage it.

3. Remove the bulb from the holder and replace the bulb.
4. Insert the bulb holder in the bulb housing and rotate it clockwise.
5. Insert the bulb housing taking care with the fit.

Interior Lamps

Courtesy Light

If the courtesy light is not functioning, have it checked by a Chevrolet Dealership or Authorized Repair Shop.

Glove Box Light (if equipped)

If the glove box light is not functioning, have it checked by a Chevrolet Dealership or Authorized Repair Shop.

Instrument Panel Illumination

Have bulbs replaced by a Chevrolet Dealership or Authorized Repair Shop.

Electrical System

Fuses

Data on the replacement fuse must match the data on the defective fuse.

There are two fuse boxes in the vehicle:

- In the front left of the engine compartment.
- On the underside of the driver's side instrument panel.

Some of the main fuses are in a box above the positive terminal of the battery. If necessary, have them changed by a Chevrolet Dealership or Authorized Repair Shop.


Before replacing a fuse, turn off the respective switch and the ignition.

A blown fuse can be recognized by its melted wire. Do not replace the fuse until the cause of the fault has been remedied.

Some functions are protected by several fuses.

Fuses may also be inserted without the existence of a function.

Example of a blown fuse

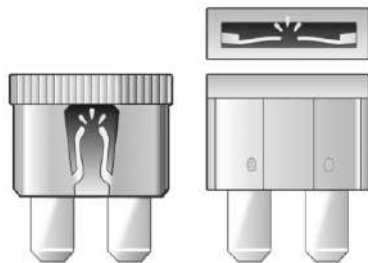

: Risk of Electrical Fire.




Warning

Installation or use of fuses that do not meet GM's original fuse specifications is dangerous. The fuses could fail, and result in a fire. You or others could be injured or killed, and the vehicle could be damaged.

See *Accessories and Modifications* ⇨ 138 for more information.

Fuse Types


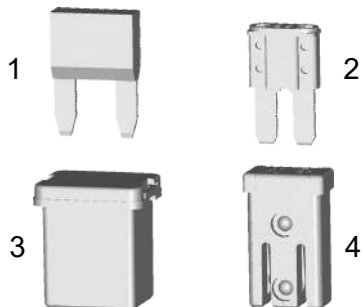


1. Mini fuse
2. Micro 2 fuse
3. JCase fuse

4. MCase fuse


Fuse Extractor

A fuse extractor is located in the fuse box in the engine compartment.

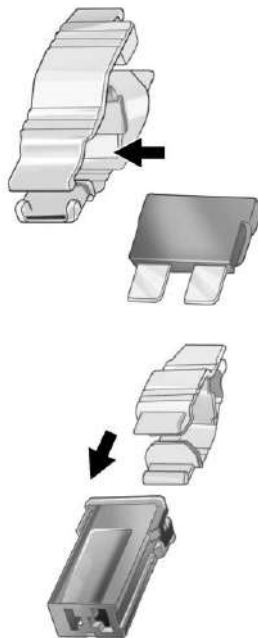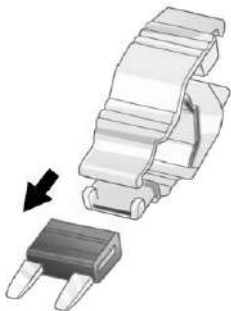

Place the fuse extractor on the various types of fuse from the top or side, and withdraw the fuse.

Engine Compartment Fuse Block

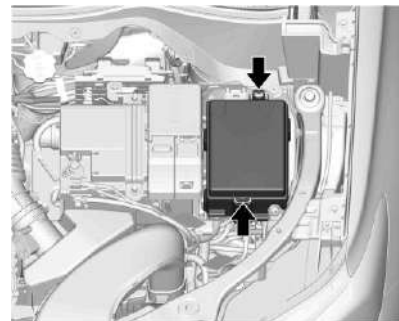


The fuse box is in the front left of the engine compartment.

Disengage the cover, lift it upward and remove it.

Not all fuse box descriptions in this manual may be applicable to your vehicle. It is accurate at the time of printing. When inspecting the fuse box, refer to the fuse box label.

Fuses may also be inserted without existence of a function.

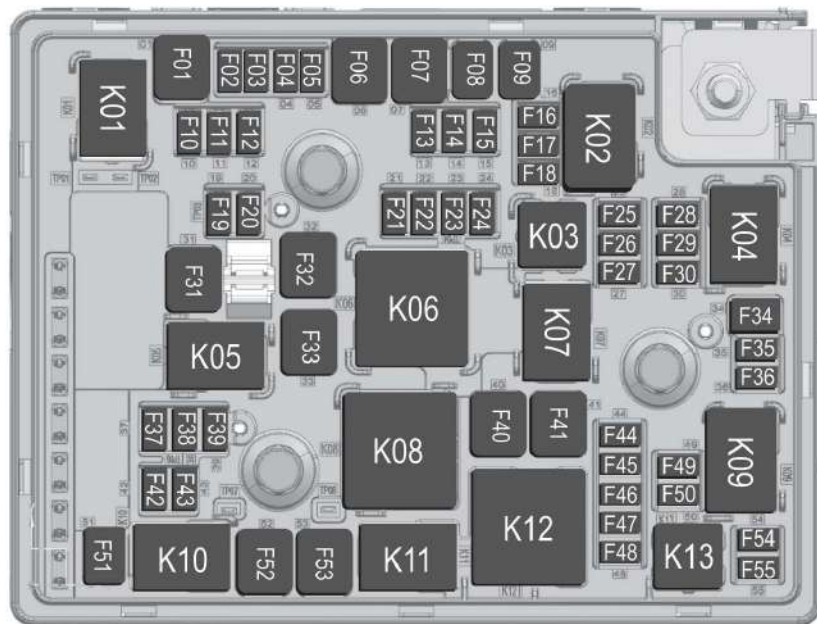

Fuses		
Position	Amp.	Circuit
F01	—	Not used
F02 ¹	5A	Battery current sensor
F03 ¹	5A	Canister Vent Solenoid
F04	—	Not used
F05	—	Not used
F06 ²	60A	ABS Pump
F07 ²	40A	ABS Valve
F08	—	Not used
F09	—	Not used
F10	—	Not used
F11	—	Not used
F12 ¹	15A	Body control module
F13 ¹	15A	Body control module

Fuses		
Position	Amp.	Circuit
F14 ¹	15A	Body control module
F15 ¹	5A	Rear Vision Camera
F16 ¹	5A	Instrument Panel Cluster / Front Collision Alert (if equipped)
F17 ¹	—	Not used
F18 ¹	10A	Headlamp levelling
F19	—	Not used
F20	—	Not used
F21 ¹	15A	Body control module
F22 ¹	25A	Fuel System Control Module (if equipped)
F23	—	Not used
F24	20A	Fuel Pump (if equipped)

Fuses		
Position	Amp.	Circuit
F25	—	Not used
F26 ¹	15A	Engine Control Module - Ignition
F27 ¹	15A	Transmission Control Module
F28 ¹	5A	Airbag system
F29 ¹	15A	Transmission Control Module
F30 ¹	15A	Engine Control Module
F31 ²	40A	Rear Defog
F32	—	Not used
F33	—	Not used
F34	—	Not used
F35	—	Not used
F36	—	Not used

Fuses		
Position	Amp.	Circuit
F37 ¹	30A	Body control module
F38	—	Not used
F39	—	Not used
F40 ²	60A	Fan - high speed
F41	—	Not used
F42 ¹	15A	Front Fog Lamp (if equipped)
F43	—	Not used
F44	—	Not used
F45 ¹	15A	AC compressor / Fan - intermediate speed control / Injection systems sensors
F46 ¹	15A	Injection coil
F47 ¹	15A	Engine Control Module — Main
F48 ¹	10A	Fan Relay

Fuses		
Position	Amp.	Circuit
F49 ¹	15A	Water pump
F50 ¹	10A	Air Conditioning Compressor Clutch
F51 ³	30A	Fan - low speed
F52	—	Not used
F53 ²	40A	Fan - intermediate speed
F54 ¹	30A	Starter motor
F55	—	Not used
¹ – Micro 2 fuse ² – JCase fuse ³ – MCase fuse		


Relays	Circuit
K01	Not used
K02	Run / Start
K03	Fuel Pump (if equipped)
K04	Not used
K05	Not used
K06	Not used
K07	Not used
K08	Fan – High speed
K09	Starter motor
K10	Fan – Low speed
K11	Fan – Mid speed
K12	Engine Control Module – Main
K13	Air Conditioning Compressor Clutch

Instrument Panel Fuse Block



The instrument panel fuse block is located on the underside of the driver's side instrument panel.

Not all the fuse box descriptions in this manual may be applicable to your vehicle. It is accurate at the time of printing.

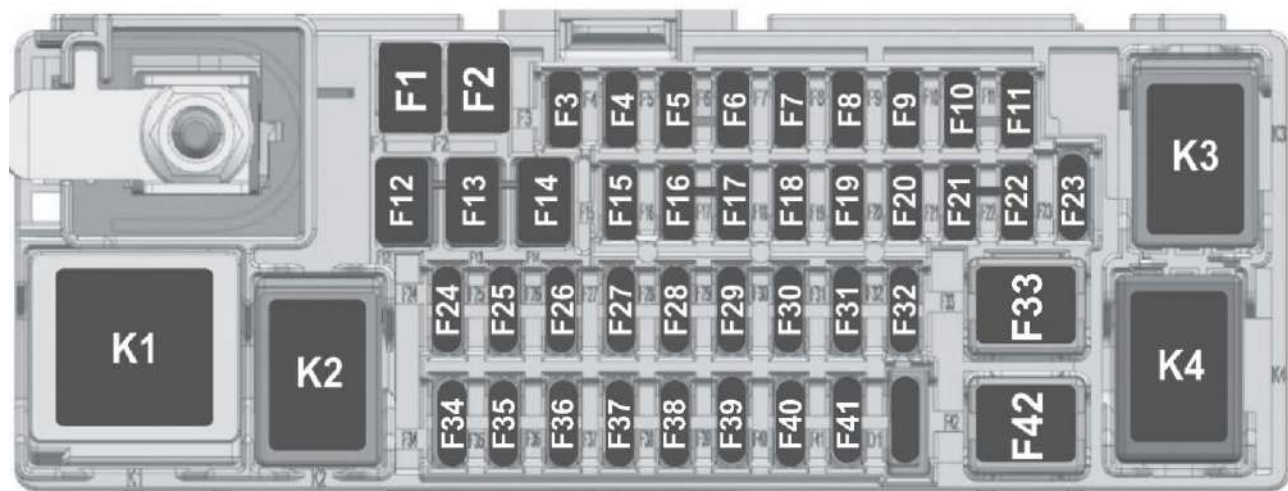

Fuses		
Position	Amp.	Circuit
F1	—	Not used
F2	—	Not used
F3 ²	10A	Rain sensor
F4	—	Not used
F5 ²	30A	Bodywork control module
F6 ²	30A	Bodywork control module
F7 ²	30A	Bodywork control module
F8	—	Not used
F9	—	Not used
F10 ²	20A	Rear wiper
F11	—	Not used
F12 ³	40A	Automatic air conditioner fan

Fuses		
Position	Amp.	Circuit
F13 ³	40A	OnStar / IPC / Display / Radio / USB / UPA / SBSA / APA / ECC / CCP / LPM / BCM1
F14 ³	—	Not used
F15	—	Not used
F16	—	Not used
F17	—	Not used
F18 ²	5A	Outside rearview mirrors
F19	—	Not used
F20 ²	10A	Airbag module
F21 ²	7.5A	Diagnostic Link Connector
F22 ²	30A	Sunroof
F23 ¹	2A	Ignition switch

Fuses		
Position	Amp.	Circuit
F24 ¹	10A	Sunshade / glove box / automatic transmission lever lighting (if equipped)
F25 ¹	20A	Auxiliary power outlets (if equipped)
F26 ¹	5A	Rear USB / Wireless Charger
F27	—	Not used
F28	—	Not used
F29	—	Not used
F30 ¹	—	Not used
F31 ¹	10A	Heating, ventilation and air conditioning controls
F32 ¹	20A	Windshield washer

Fuses		
Position	Amp.	Circuit
F33 ⁴	40A	Manual air conditioner fan
F34 ¹	5A	OnStar
F35 ¹	10A	Instrument cluster / Displays
F36 ¹	15A	Radio / Front USB
F37 ¹	10A	Parking assist system / side blind spot alert
F38 ¹	10A	Heating, ventilation and air conditioning control
F39 ¹	20A	Bodywork control module
F40 ¹	2A	Steering wheel switches
F41 ¹	—	Not used


Fuses		
Position	Amp.	Circuit
F42	—	Not used
¹ – Mini fuse ² – Micro 2 fuse ³ – MCase fuse ⁴ – JCase fuse		

Relays	Circuit
K1	Start
K2	RAP_ACC
K3	Not used
K4	Not used

Vehicle Tools

Tools

The jack and the tools are in a storage compartment under the spare wheel.

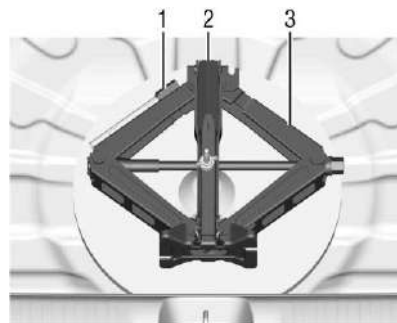

1. Extension Bolt
2. Wrench
3. Jack

Wheels and Tires

Tyre Condition, Wheel Condition

Driving over sharp surfaces can cause tyre and wheel damage. Do not trap the tyres on the kerb when parking.

Regularly check the tyres and wheels for damage. Seek the assistance of a Chevrolet Dealership or Authorized Repair Shop in the event of damage or unusual wear.

Tire Designations

E.g. 195/65 R15 91H

195: Tyre width, mm

65: Cross-section ratio (tyre height to tyre width), %

R: Belt type: Radial

15: Wheel diameter, inches

91: Load index e.g. 91 is equivalent to 615 kg

H: Speed code letter

Speed code letter:

Q: up to 160 km/h

S: up to 180 km/h

T: up to 190 km/h


H: up to 210 km/h

V: up to 240 km/h

W: up to 270 km/h

Tire Pressure

Check the pressure of cold tyres biweekly and before any long journey. Do not forget the spare wheel.

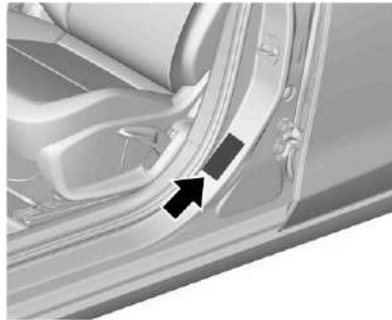

The Tyre pressure label is located on the left front door pillar.

The tyre pressure data refers to cold tyres.

Always inflate the spare tyre to the pressure specified.

Incorrect tyre pressures will impair safety, vehicle handling, comfort and fuel economy and will increase tyre wear.

Danger

If the pressure is too low, this can result in considerable tyre warm-up and internal damage, leading to tread separation and even to tyre blow-out at high speeds.

Tire Pressure Monitor System

The Tire Pressure Monitor System (TPMS) uses radio and sensor technology to check tire pressure levels. The TPMS sensors monitor the air pressure in your tires and transmit tire pressure readings to a receiver located in the vehicle.

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated.

Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat

and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS

malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

See *Tire Pressure Monitor Operation (If equipped)* ⇨ 170.

See *Radio Frequency Statement* ⇨ 196.

Tire Pressure Monitor Operation (If equipped)

This vehicle may have a Tire Pressure Monitor System (TPMS). The TPMS is designed to warn the driver when a low tire pressure condition exists. TPMS sensors are mounted onto each tire and wheel assembly, excluding the spare tire and wheel assembly. The TPMS sensors monitor the air pressure in the tires and transmit the tire pressure readings to a receiver located in the vehicle.



When a low tire pressure condition is detected, the TPMS illuminates the low tire pressure warning light located on the instrument cluster. If the warning light comes on, stop as soon as possible and inflate the tires to the recommended pressure shown on the Tire and Loading Information label. See *Wheels and Tires* ⇨ 168.

The TPMS warning light come on at each ignition cycle until the tires are inflated to the correct inflation pressure.

The TPMS warning light may come on in cool weather when the vehicle is first started, and then turn off as the vehicle is driven. This could be an early indicator that the air pressure is getting low and must be inflated to the proper pressure.

The TPMS can warn about a low tire pressure condition but it does not replace normal tire maintenance. See *Wheels and Tires* ⇨ 168 and *Tire Rotation* ⇨ 172 .

Caution

Tire sealant materials are not all the same. A non-approved tire sealant could damage the TPMS sensors. TPMS sensor damage caused by using an incorrect tire sealant is not covered by the vehicle warranty. Always use only the GM approved tire sealant available through your dealer or included in the vehicle.

TPMS Malfunction Light

The TPMS will not function properly if one or more of the TPMS sensors are missing or inoperable. When the system detects a malfunction, the TPMS light flashes for about one minute and then stays on for the remainder of the ignition cycle. The malfunction light come on at each ignition cycle until the problem is corrected. Some of the conditions that can cause these to come on are:

- The TPMS sensor calibration process was not done or not completed successfully after rotating the tires. The malfunction light should go off after successfully completing the sensor calibration process. See "TPMS Sensor Calibration Process" later in this section.

- One or more TPMS sensors are damaged. The malfunction light should go off when the TPMS sensors problem is corrected and the sensor calibration process is performed successfully. See your dealer for service.
- Replacement tires or wheels do not match the original equipment tires or wheels. Tires and wheels other than those recommended could prevent the TPMS from functioning properly.
- Operating electronic devices or being near facilities using radio wave frequencies similar to the TPMS could cause the TPMS sensors to malfunction.

If the TPMS is not functioning properly, it cannot detect or signal a low tire condition. See your dealer for service if the TPMS malfunction light come on and stay on.

TPMS Sensor Calibration Process

Each TPMS sensor has a unique identification code. The identification code needs to be matched to a new tire/wheel position after rotating the tires or replacing one or more of the TPMS sensors. The malfunction light should go off at the next ignition cycle. The sensors are matched to the tire/wheel positions, using a TPMS relearn tool. Each sensor has a defined

position to perform the tire pressure reading. If the tire/wheel position is changed, a new TPMS sensor learning will be required. See your dealer for service.

Tire Inspection

The impacts against kerbs may cause injuries on wheels and tyres inside. There is an accident risk at high speed due to hidden tyre damages. Therefore, if you need to ascend on a kerb, do it slowly and at a right angle if possible.

When parking, ensure that the tyres are not pressed against the kerb. Check tyres regularly for wear (tread depth) or visible damage. Also check wheels for damage.

In the event of damage or abnormal wear, consult a Chevrolet Dealership or Authorized Repair Shop to repair them and for the calibration of front suspension and steering alignment.

Tread Depth

Check tread depth at regular intervals.


Tyres should be replaced at a tread depth of 1,6 mm Tread Wear Indicator.



The legally permissible minimum tread depth (1.6 mm) has been reached when the tread has worn down as far as one of the tread wear indicators (TWI). Their position is indicated by markings on the sidewall.

Tyres age, even if they are not used. We recommend tyre replacement every 6 years.

Tire Rotation

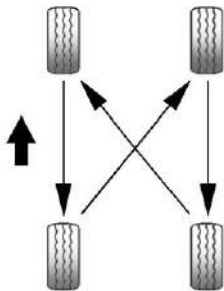

Different forces in front and rear tires make them wear differently, depending on several factors, such as road surface, the way of driving, suspension alignment, wheel balancing, tires pressure, etc.

The owner must carry out an evaluation of the vehicle wear, and this includes regular tire rotation, which should not exceed 10,000 km. Tire rotation is vital to achieving even tread wear and long tire life.

The tire rotation must be performed as indicated in the illustration.

The tire condition is an item that is checked during a periodic inspection at a Chevrolet dealer of your preference, which can diagnose signs of uneven wear that may compromise your car safety and performance.

Never include the temporary spare tire in the tire rotation due to size differences.

Caution

- Due to ageing, the tire rubber gets deteriorated. This is also valid for the spare tire even if it was not used.
- Tire ageing depends on many conditions of use, including temperature, load conditions and also tire inflation pressure.
- To evaluate the use conditions, the tires should be taken regularly to the manufacturer's technical assistance.
- A spare tire which was not used within a 6-year period should be used in emergencies only. If you need to use this tire, drive at low speeds.

Note

After tire rotation, it is necessary to take your vehicle to Chevrolet dealership in order to make TPMS learning.

When It Is Time for New Tires

The tyre must be replaced when cuts, bulges on sidewalls or any other deformation are present.



Tyres must also be replaced when their tread depth has worn down near to the TWI. The image shows where the tread depth can be found.

Caution

- The tread depth must be greater than 1,6 mm. This information can be found on the tyre "shoulder", after the TWI (Tread Wear Indicators) abbreviation.
- The risk of aquaplaning and drifting is greater when the tyres are worn.

Note

When replacing, always use tyres of the same brand and dimensions. Preferably replace all tyres of same axle at the same time.

Different Tire and Wheel Types**⚠ Danger**

Do not use different types and sizes of wheels and tires from those originally installed. If it is necessary to replace one or more tires, make sure that they have the same specifications of the original factory settings. Otherwise, this condition could affect conduction, even causing serious accidents. In addition,

(Continued)

Danger (Continued)

it could affect the warranty terms of the vehicle. Conditions mentioned above do not apply to the use of temporary compact spare tire and Chevrolet Accessories designed particularly for your vehicle. For more information, consult the Chevrolet Dealership Network or Authorized Repair Shop.

In case of replacing wheels and tires by Chevrolet Accessory available for your vehicle, it may be necessary to reprogram the speedometer due to running dynamic radius. Consult the Chevrolet Dealership Network or Authorized Repair Shop.

Wheel Covers (If equipped)

Wheel covers and tyres that are factory approved for the respective vehicle and comply with all of the relevant wheel and tyre combination requirements must be used.

If the wheel covers and tyres used are not factory approved, the tyres must not have a rim protection ridge.

Wheel covers must not impair brake cooling.

⚠ Danger

The use of unsuitable tyres or wheel covers could lead to sudden pressure loss and, thereby accidents.

Wheel Replacement

All vehicles are equipped with a spare wheel.

⚠ Danger

The change of wheels is a task that can present a risk of injury. Never put your body or part of it under the car or inside the jack mechanism.

Make the following preparations and observe the following information:

- Park the vehicle on a level, firm and non-skid surface. The front wheels must be in the straight-ahead position.
- Apply the parking brake and for manual transmission (if equipped) engage first gear or reverse gear and for automatic transmission engage **P**.
- Remove the spare wheel.

- Never change more than one wheel at once.
- Use the jack only to change wheels in case of puncture.
- If the ground on which the vehicle is standing is soft, a solid board (minimum 1 cm thick) should be placed under the jack.
- No people or animals may be in the vehicle when it is jacked-up.
- Never crawl under a jacked-up vehicle.
- Do not start the vehicle when it is raised on the jack.
- Clean wheel nuts and thread with a clean cloth before mounting the wheel.

⚠ Danger


Do not grease wheel nut and wheel nut cone.

1. Alloy wheels and wheel covers:




Install the wheel wrench ensuring that it locates securely and loosen each wheel nut by half a turn.

2. Ensure the jack is positioned correctly with the vehicle jacking points.

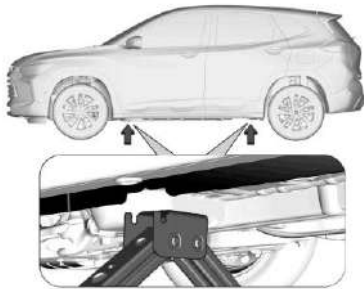

3. Set the jack to the necessary height. Position it directly below the jacking point in a manner that prevents it from slipping.

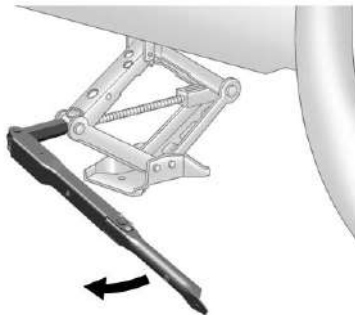

Raise the vehicle by turning the jack handle clockwise. Raise the vehicle far enough off the ground so there is enough room for the road tire to clear the ground.

4. Unscrew the wheel nuts.
5. Change the wheel.
6. Align the recess in the wheel cover with the tire valve before installing. (If equipped)
7. Fasten on the wheel nuts.
8. Lower the vehicle.
9. Install the wheel wrench ensuring that it locates securely and tighten each nut in a crosswise sequence.
10. Stow the replaced wheel and the vehicle tools.
11. Check the tire pressure of the installed tire and also the wheel nut torque as soon as possible.

Have the defective tire renewed or repaired.

Spare Wheel

This vehicle is equipped with a temporary spare tire, whose dimensions, pressure and useful life are different from your vehicle's road tires (regular use).

Therefore, use it only in emergency situations and replace it as soon as possible, as soon the road tire is repaired or replaced. It is not recommended that the usage of the temporary spare tire exceeds 100 Km of distance until its replacement by a regular tire.

The usage of the temporary spare tire may alter the vehicle dynamic behavior, especially when making turns and braking, however it does not affect safety, if used at speeds below 80 Km/h.

The temporary spare tire has steel wheel.

The spare tire is located in the load compartment beneath the floor covering. It is secured in the recess with a wing nut.

The spare tire well is not designed for all permitted tire sizes. If a wheel is wider than the spare and must be stowed in the spare wheel well after changing wheels, the floor cover can be placed on the projecting tire.

It is not allowed to use more than one temporary spare tire simultaneously.

⚠ Danger

Always use the temporary spare tire at speeds below 80km/h.


(Continued)

Danger (Continued)


The distance recommended until its replacement by a regular tire is up to 100km.

Stowing a damaged full size wheel in the spare wheel well

Unscrew the spare wheel wing nut counterclockwise and remove the spare wheel.

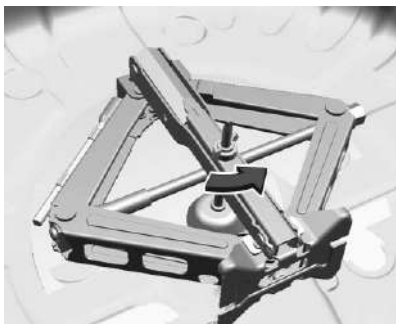

Unscrew the jack wing nut counterclockwise.

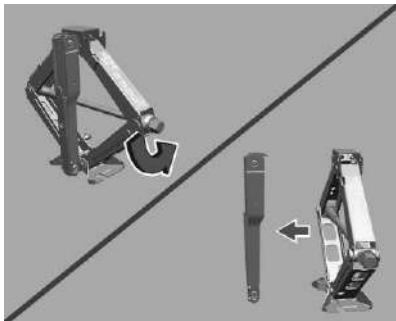


To remove the wrench, is necessary to lower the jack.


Before stowing a damaged full size wheel in the spare wheel well, follow the next procedures:




1. Hold the wrench in the jack.

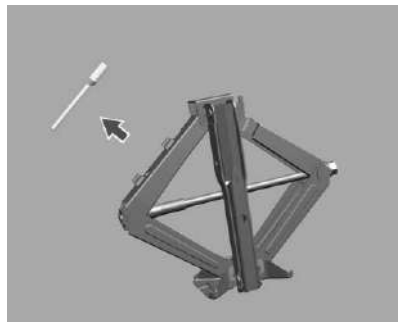

2. Remove the extension bolt from the jack.

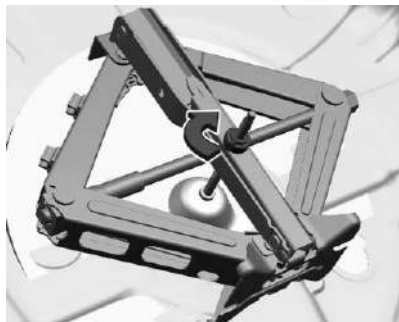


3. Install the jack into the vehicle and tighten with the wing nut.

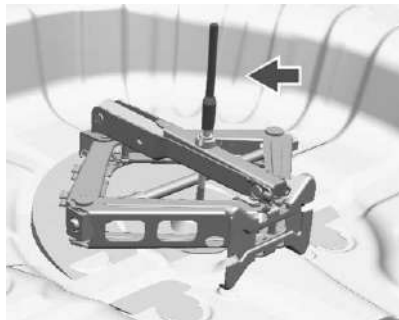

4. Install the extension bolt prior to place the damaged full size wheel in the spare wheel well.

Note


Remove the extension bolt cap if applied.

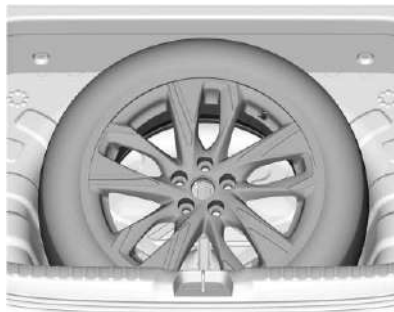

5. Install flat tire in the trunk. Push flat tire onto rear floor first.

Note

Certify that all the tire is in contact with the rear floor.

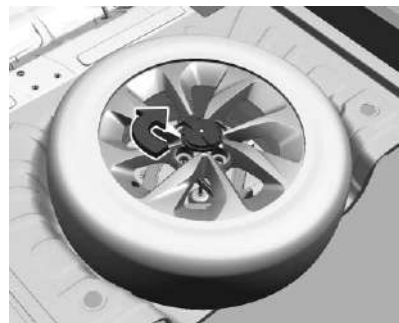


6. Tight the wing nut.

Caution

When storing the full size wheel in the trunk, be careful not to damage the floor covering.

Jump Starting

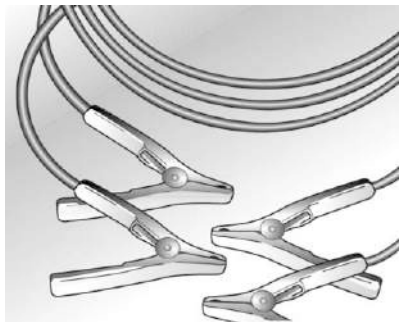

A vehicle with the discharged battery can be started using jump leads and the battery of another vehicle. This must be done with extreme care and following the next instructions.


Danger

- Be extremely careful when starting with jump leads. Any deviation from the following instructions can lead to injuries or damage caused by battery explosion or damage to the electrical systems of both vehicles.
- Avoid contact with eyes, skin, fabrics and painted surfaces. The fluid contains sulphuric acid which can cause injuries and damage in the event of direct contact.

Perform the operations in the following sequence:

1. Check if the auxiliary battery voltage is the same that the vehicle battery which engine must be actuated.
2. During this starting operation, do not approximate of the battery.
3. With the auxiliary battery installed in the other vehicle, avoid contact between the two vehicles.
4. Check if the auxiliary cables do not present loosen or absence isolations.

5. Avoid contact between jump lead terminals or with the metallic part of the vehicles.
6. Switch of the ignition and disconnect all the electrical circuits whose connection is not necessary.
7. Securely apply the parking brake lever. For Manual Transmission move the gearshift lever to neutral. For Automatic Transmission move the gearshift lever to P.
8. Locate the positive (+) and negative (-) terminals in the batteries.

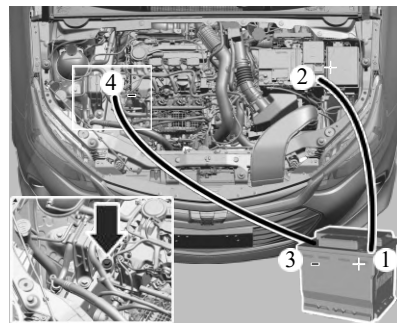

9. Connect the jump leads in the indicated sequence:

- + with +: positive terminal of the auxiliary battery (1) with the positive terminal of the discharged battery (2).
 - – with ground : negative terminal of the auxiliary battery (3) with the vehicle ground point, away of 30 cm of the battery and of movable parts and/or heat. E.g.: Engine support bolt (4).
10. Start vehicle engine whose battery is discharged. If the engine does not start after some attempts, there might be the possibility of some repairs.
 11. Reverse above sequence exactly when removing jump leads.

Note

- The vehicle engine that supplies the auxiliary start must be running during the operation.
- In case the radio is on, it could be seriously damaged. The repair cost will not be covered by the Warranty.




Danger

The fans and the other engine movable parts can cause serious injuries. Keep the hands, hair and clothes away from the movable parts when the engine is running, or even with the engine switched on.

Towing

Towing the Vehicle

Under emergency situations which require towing the vehicle, look for specialized companies who have flatbed type towing vehicles.

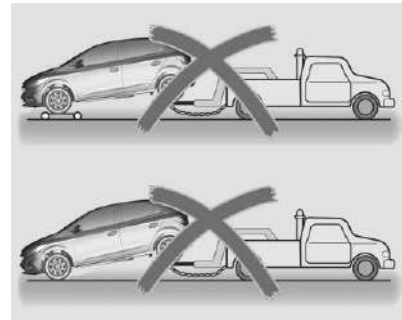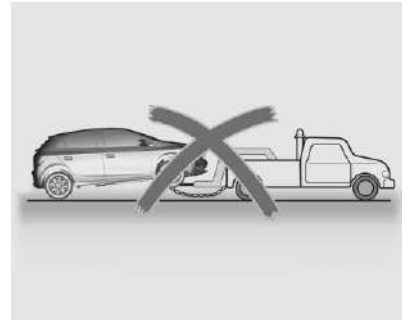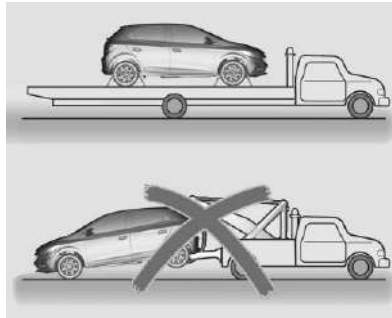

The towing with two of the wheels off the ground is not suitable for this vehicle.

Note

Be cautious when the vehicle is fixed on the platform; take care not to damage the tubing or wiring harnesses.

Please observe the following procedures when towing a vehicle:

- No passenger should remain in the vehicle being towed.
- Switch on the ignition to permit operation of brake lights, horn and windscreen wipers.
- Release the parking brake of the towed vehicle and place the transmission gear in neutral.
- Switch on the emergency warning lights.
- Keep to the speed limits.

Seek the assistance of a Chevrolet dealer.

Towing another vehicle

This vehicle is unable to receive the rear towing hitch and, thereby, pull trailers.

Appearance Care**Exterior Care**

Here you will find information about the periodic appearance care of your vehicle. Observing them is a prerequisite for servicing internal and exterior trimming and painting claims under warranty. The recommendations presented in this section will prevent damage resulting from the environmental effects your vehicle is exposed to.

Exterior Clean

The best way to preserve the finish of your vehicle is to keep it clean by washing it often.

Washing

- Do not wash your vehicle in the direct rays of the sun.
- Ensure to remove the antenna (if equipped) before entering a car wash.
- Then, to remove dust spread water all over the body.
- Do not spray water directly on the radiator in order not to distort the radiator core and consequently result in a less efficient system. Use air spray only.

- If desired, apply mild detergent or shampoo and, using sponge or soft towel, rub while flushing the area. Remove all detergent or shampoo before it dries.
- Use a separate brush or towel to clean windows so that they will not be greasy.
- Using water and mild detergent, clean the rubber trim of wiper blades.
- Oil, asphalt or road dirt spotting may be removed with solvent. You are recommended not to wash the complete body with solvent.
- After washing, dry it well.

Waxing

Use silicone-wax on your vehicle if you notice beads on the painting after rinsing. Do not use wax on plastic or glass components since stains on them are difficult to get off.

Polishing

Since most polishing products contain abrasives, have specialized service polish your vehicle.

Paint Scratches and Foreign Material

Any stone chips, fractures or deep scratches in the finish should be repaired right away at a Chevrolet Dealership or Authorized Repair Shop since bare metal will corrode quickly and may develop into major corrosion. If you notice oil and tar stains, road signalling residues, tree sap, bird dropping, chemicals from industrial chimneys, ocean salt and others, have them removed as soon as possible. Use solvent to remove oil stains, tar and paint residues.

Underbody

The salty water and other corrosive agents may accelerate early rust and deteriorate the underbody parts, such as brake line, floor pan, metal panels, exhaust systems, brackets, parking brake cables, etc. In addition, soil debris, mud and dirt packed on fender opening will collect humidity. To minimize damage, periodically flush these materials from the underbody.

Spraying

Do not use oil spray on the underbody. Besides collecting road dust, the sprayed damages mounts, gaskets, hoses, etc.

Doors

1. Lubricate the lock drums with powder graphite.
2. Lubricate the door, load compartment and bonnet hinges and door stoppers.
3. The openings located on the door lower portion allow for water to escape due to washings or rain. They should be kept unclogged to prevent water accumulation that results in rust.

Alloy Wheels

The alloy wheels receive protection similar to the vehicle paint. Never use chemical products, polishers or abrasive products or brushes once these may damage the wheel protective layer.


Engine Compartment

Caution

It is not recommended to wash the engine compartment as this may damage some components such as: alternator, master
(Continued)

Caution (Continued)

cylinder reservoir, electrical and electronic components, electrical connectors, fuse box, radiator and others.

Do not wash any component under the hood that has this symbol .

This could cause damage that would not be covered by the vehicle warranty.

If necessary, clean the engine using a damp cloth.

Interior Care

Using a neutral soap solution, immediately remove hand lotions, sunscreen, and insect repellent from all interior surfaces or permanent damage may result.

Danger

Many cleaning agents may be hazardous or flammable or may cause injury or damage your vehicle too. So, when cleaning the interior of your car, do not use volatile

(Continued)

Danger (Continued)

solvents such as acetone, paint thinner, bleach or, reducing agents. Never use petrol for cleaning purposes.

Note

Remember to remove stains as soon as possible before they remain.

Carpets and Upholstery

- For good results, vacuum and brush the area.
- To remove light spotting or dirt, use a brush or sponge wet in water and mild soap.
- First use adhesive tape to remove excess soil of greasy or oily stains. Then rub with a benzene-wet cloth.
- Never apply too much cleaning solvent; it will penetrate the upholstery and result in damage.

Door Panels, Plastic and Vinyl Parts

- Use a damp cloth only and then dry with dry cloth.

- To remove grease or oil stains, use a damp cloth and mild soap dissolved in water and then dry with clean cloth.

Console Switches

Never use cleaning products in the area of switches. Have them cleaned with vacuum cleaners and a wet piece of cloth.

Instrument Cluster

Clean using a dry piece of cloth, once chemical products or even water may damage the board computer system.

Safety Belts

Always keep them away from cutting or sharp objects. Periodically inspect straps, buckles and anchor points. If they are dirty, wash in mild soap and lukewarm water. Keep them clean and dry.

Windows

- To remove tobacco, dust films and vapours from plastic panels, wash often using flannel and a solution of water and neutral soap.

- Never use abrasive cleaners on the window, because they may cause scratches and damage the windows.

Front Panel **Danger**

When exposed to the heat of the sun for extended periods, the instrument panel upper region and the glove box interior may reach temperatures as high as 100°C. Therefore never use these areas to store cigarette lighter, tapes, computer disks, compact discs, sun glasses, etc. that might distort or even ignite when exposed to high temperatures. There is the risk to damage the objects themselves and the vehicle as well.

Service and Maintenance

Maintenance Schedule

Maintenance Schedule 183

Multi-Point Vehicle Inspection (MPVI)

Multi-Point Vehicle Inspection (MPVI) 184

Recommended Fluids, Lubricants, and Parts

Recommended Fluids and Lubricants 186

Maintenance Schedule

Tire Rotation and Required services Every 12,000 km (7,500 mi) or Every 12 months – Whichever Comes First

Tires are rotated to achieve a more uniform wear for all tires. The first rotation is the most important.

Anytime unusual wear is noticed, rotate the tires as soon as possible, check for proper tire inflation pressure, and check for damaged tires or wheels. If the unusual wear continues after the rotation, check the wheel alignment. See *When It Is Time for New Tires* ⇨ 173 and *Wheel Replacement* ⇨ 174.

- Perform Multi-Point Vehicle Inspection. See *Multi-Point Vehicle Inspection (MPVI)* ⇨ 184.
- Lubricate body components. See *Exterior Care* ⇨ 180.

Required Services

Every 12,000 km (7,500 mi) or every 12 months, whichever comes first.

- Change the engine oil and filter. Or when the CHANGE ENGINE OIL SOON message displays, whichever comes first. Replace every 6000 km or 6 months if the vehicle is driven under severe conditions*. See *Engine Oil* ⇨ 143.

Every 36,000 km (22,500 mi)

- Replace brake fluid. Or every two years, whichever comes first.

Every 48,000 km (30,000 mi)

- Replace the engine air filter. See *Engine Air Cleaner/Filter* ⇨ 146 .

Every 72,000 km (45,000 mi)

- Replace automatic transmission fluid.

Every 96,000 km (60,000 mi)

- Replace the spark plugs.

Every 120,000 km (75,000 mi)

- Drain and fill engine cooling system. Or every five years, whichever comes first. See *Cooling System* ⇨ 146.

Every 240,000 km (150,000 mi)

- Replace Oil Pump Drive Belt
- Replace Timing Belt and Tensioner

Owner Checks and Services**Every Seven Years**

- Replace air conditioning desiccant every seven years. The air conditioning system requires maintenance every seven years. This service requires replacement of the desiccant to help the longevity and efficient operation of the air conditioning system. This service can be complex. See your dealer.

*** Severe Conditions Requiring More Frequent Maintenance**

- You drive your vehicle 10 Km or less; engine is working idle more than 30% of the total time of your trip.

- City traffic, travels at low speed with the engine running more than 30% of the time in idle.
- Off road and irregular road conditions or under extreme climatological conditions (high pollution, sand, mud, difference in altitudes).
- When you cold-start your vehicle, drive and having continuous stops (public, services, military or commercial taxis, ambulances, police cars and emergency rescue vehicles, Civilian vehicles such as light duty pick-up trucks, SUVs and passenger cars that are used in military applications, High use commercial vehicles such as courier delivery vehicles, private security patrol vehicles or any vehicles that operate on a 24-hour basis, etc.)
- When the vehicle is driven at extreme temperatures of below 0°C or above 35°C.
- When vehicle is driven on continuous high speeds (80% or more of maximum vehicle speed) for over 2 hours)

After the scheduled services are performed in an authorized Chevrolet dealer, the dealers should record and stamp the Maintenance Records that you find in your Warranty Policy.

Multi-Point Vehicle Inspection (MPVI)

A Multi Point Vehicle Inspection (MPVI) completed by a GM dealer technician is a maintenance assessment of your vehicle. The benefit of the MPVI is to identify and inform the customer of service items that require immediate attention and those that may require attention in the future.

The technician will perform the following checks on your vehicle. For a complete list of checks, inspections, and services, see your dealer.

Some items may not apply to your vehicle and/or region.

Diagnostics

- OnStar active, if equipped
- Service history/recall check

Engine Oil and Filter

- Engine oil
- Oil life monitor
- Reset oil life monitor

Exterior Lights

- Visual inspection

Windshield and Wipers

- Visual inspection

Battery

- Battery visual inspection
- Battery test results
- Battery cables and connections

Systems, Fluids, and Visible Leak Inspection

- Engine oil
- Transmission
- Drive axle
- Transfer case
- Engine cooling system
- Power steering, if equipped
- Fuel system
- Windshield washer fluid

Tire Inspection

- Tire pressure, tread depth, and wear

- Rotation, if applicable
- Alignment check, optional
- Reset tire pressure monitor
- Check tire sealant expiration date, if equipped
- Check spare tire, if equipped

Brakes

- Check brake system

Visible and Functional Inspections

- Seat belt components
- Exhaust system
- Accelerator pedal
- Passenger compartment air filter, if equipped
- Engine air filter
- Hoses
- Belts
- Shocks and struts
- Steering components
- Axle boots or driveshaft and u-joints
- Compartment lift struts, if equipped

- Floor mats secured, no interference with pedals
- Horn
- Ignition lock, if equipped
- Starter switch
- Evaporative control system

Lubricate

- Chassis components

Recommended Fluids, Lubricants, and Parts

Recommended Fluids and Lubricants

	Lubricant/Fluid
Automatic Transmission	Oil Dexron VI
Manual Transmission	Synthetic oil for transmission SAE 75W85
Engine Oil	Engine oil meeting the Dexos 1 gen 2 specification of the proper SAE viscosity grade
Brake System	DOT 4 brake fluid
Windshield Washer	Automotive windshield washer fluid that meets regional freeze protection requirements
Engine Coolant	50/50 mixture of clean, drinkable water and use only DEX-COOL Coolant

Technical Data

Vehicle Identification

Vehicle Identification Number (VIN)	187
Identification Labels	187

Vehicle Data

Capacities and Specifications	188
Engine Drive Belt Routing	189
Tire Information	190
Tire Pressure	191

Vehicle Identification

Vehicle Identification Number (VIN)

Stamping

The Vehicle Identification Number is stamped on the floor panel, on the right side of the front passenger seat under the floor covering, visible under a cover.

Self-sticking Labels

The Vehicle Identification Number is engraved on self-sticking labels:

- VIN label on the right front panel in the engine compartment.
- VIN label on the right front door pillar.
- VIN label on the floor, on the right side of the front passenger seat.

Windows

The Vehicle Identification Number is engraved on the windshield, rear window and side windows.

Identification Labels



The vehicle Identification Plate is located on the right front door pillar.

Vehicle Data

Capacities and Specifications


The following approximate capacities are given in metric and English conversions.

Application	Capacities	
	Metric	English
Air Conditioning Refrigerant	For the air conditioning system refrigerant type and charge amount, see the refrigerant label under the hood. See your dealer for more information.	
Engine Cooling System*		
Automatic Transmission	1.94 L	2.05 qt
Manual Transmission	2.02 L	2.13 qt
Engine Oil with Filter		
1.2L L3 Engine	4.5 L	4.7 qt
Fuel Tank	44 L	11.6 gal
Wheel Nut Torque	140 N•m	100 lb ft
All capacities are approximate. When adding, be sure to fill to the approximate level, as recommended in this manual. Recheck fluid level after filling.		
*Engine cooling system capacity values are based on the entire cooling system and its components.		

Engine Specifications

Engine	VIN Code	Transmission	Spark Plug Gap
1.2L L3 Engine (L4H)	C	Automatic and Manual	0.6-0.7 mm (0.024–0.028 in)
Spark plug gaps are preset by the manufacturer. Re-gapping the spark plug is not recommended and can damage the spark plug.			

Engine Drive Belt Routing

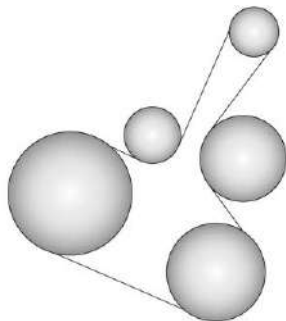

1.2L L3 Engine (L4H)

Tire Information

WHEELS / TIRES	DIMENSIONS
Wheels	16 x 7 J
	17 x 7 J
Tires	215/60R16 95V
	215/55R17 94V
Temporary Spare Tire (1)	Wheel 4 x 16 with tire T115/70R16 92M
(1) In vehicles equipped with temporary spare tires (different from the road tires), it is recommended to use them in distances below 100 km and at speeds below 80 km/h, and they should not be included in the tire rotation due to size differences.	

Tire Pressure

Tires ¹²	Front	Rear
215/60R16 95V	35 psi (240 kPa)	35 psi (240 kPa)
215/55R17 94V	35 psi (240 kPa)	35 psi (240 kPa)

¹ Tire data is related to cold tires. The tire pressure which is increasing in driving operation must not be reduced.
² For full load, use the same tire pressure indicated.

Temporary Spare Tire	
T115/70R16 92M	60 psi (420 kPa)

Customer Information

Customer Information

Customer Satisfaction Procedure	192
Customer Assistance Offices	193
Online Owner Center	193
Roadside Assistance Program	194
Radio Frequency Statement	196

Reporting Safety Defects

Reporting Safety Defects to General Motors	196
--	-----

Vehicle Data Recording and Privacy

Event Data Recorders	197
----------------------------	-----

Customer Information

Customer Satisfaction Procedure

Extended Warranty



Did you get the Warranty Extension Plan? This plan is recommended by General Motors to supplement the warranty included with the new vehicle purchase.

See your dealer for details.

Customer Assistance Procedure

Owner satisfaction and goodwill are very important to your dealer and General Motors.

Normally, any problem with the transaction, sale, or usage of the vehicle must be handled by your dealer sales or service departments. However, we recognize that despite the good intentions of all parties involved, sometimes a misunderstanding may occur.

If you have a problem that has not been satisfactorily handled through the normal means, we suggest the following steps:

STEP ONE

Explain your case to your dealer service agent, service manager, dealer sales agent, or sales manager, depending on your case.

Make sure that they have all necessary information. They are interested in your continual satisfaction.

STEP TWO

If you are not satisfied, please contact the general manager or your dealership owner to ask for their help. If they are not able to resolve your case, ask them to contact the right people at General Motors for support, if needed.

STEP THREE

If your case is not resolved in a reasonable amount of time by your dealer, please call the General Motors Customer Assistance Center (CAC) and provide the following information:

- Name
- Address
- Phone number
- Model year
- Brand
- Vehicle Identification Number (VIN)
- Mileage
- Delivery date
- Description of the problem
- Dealership name
- Dealership address

See *Customer Assistance Offices* ⇨ 193.

Customer Assistance Offices

To contact the Customer Assistance Center (CAC), use the phone numbers listed in this section. Customer assistance is available Monday through Friday, 08:00 to 20:00 hours, and Saturdays from 09:00 to 15:00 hours.

All e-mail inquiries to the Customer Assistance Center (CAC) should be sent to: asistencia.gmmexico@gm.com.

Mexico

800-466-0811

800-508-0000

United States

1-800-222-1020

Canada

1-800-268-6800

Nicaragua

00-1800-226-0510

Other Central American and Caribbean Countries


52-555-901-2369


Online Owner Center**Online Owner****Experience my.chevrolet.com.mx**


The Owner Center is not available for any of the countries in the Central American and Caribbean region.


The Chevrolet online owner experience allows interaction with Chevrolet and keeps important vehicle-specific information in one place.


Membership Benefits


 : Download owner's manuals and view vehicle-specific how-to videos.


 : View maintenance schedules, alerts, and Vehicle Diagnostic Information. Schedule service appointments.


 : View and print self-recorded service records.

 : Select a preferred dealer and view locations, maps, phone numbers, and hours.

 : Track your vehicle's warranty information.

: View active recalls by Vehicle Identification Number (VIN). See *Vehicle Identification Number (VIN)* ⇨ 187.

: View OnStar account information (if equipped).

: Chat with online help representatives.

STORE: Buy online OnStar packages, Connected Services, and Data.

See my.chevrolet.com.mx to register your vehicle.

Roadside Assistance Program

The Roadside Assistance program is not available for any of the countries in the Central American and Caribbean region.

As a new owner, your vehicle is automatically enrolled in the Roadside Assistance program. The services are available at no cost under the terms and conditions of the program. The Roadside Assistance program is not part of, or included, in the coverage provided by the New Vehicle Limited Warranty.

Roadside Assistance provides assistance to the driver and passengers while driving the vehicle within your city of residence or on any passable road in Mexico, the United States, and

Canada. Services are subject to the limitations described in the following pages. Program coverage varies by country.

Roadside Assistance is available 24 hours a day, 365 days of the year.

This program expires three years from the date of the invoice for the vehicle, regardless of vehicle mileage and changes in vehicle ownership.

For more information about the renewal of this program at the end of its term, contact the Chevrolet Customer Assistance Center at 800-466-0811 or 800-508-0000.

Services Provided

- **Flat Tire Change:** If unable to change a flat tire, Roadside Assistance will provide towing service to the nearest authorized Chevrolet dealership. It is the owner's responsibility for the repair or replacement of the tire. This service is limited to the transfer of the vehicle to the repair facility.
- **Emergency Fuel Delivery:** Delivery of enough fuel for the vehicle to get to the nearest service station.

- **Lock-Out Service:** Service to unlock the vehicle if you are locked out. A remote unlock may be available if the vehicle has OnStar. For security reasons, the driver must present identification before this service is provided.
- **Battery Jump Start:** Service to jump start a dead battery.
- ***Emergency Messages:** Transmission of urgent phone messages.
- ***Emergency Calls:** Call for emergency services.
- ***Dealership Location Assistance:** Information regarding addresses and telephone numbers for Chevrolet dealers.
- **Emergency Towing:** Tow to the nearest dealer for warranty service if the vehicle cannot be driven.

If the vehicle is involved in a crash during the commission of a crime, administrative violation, or breach of traffic regulations, Roadside Assistance will not provide service. When the vehicle is not accessible to be towed, all maneuvers required to access it will be at the owner's expense.

If the vehicle is in another city outside of your residence, Roadside Assistance is limited to moving the vehicle to the nearest dealer. If you would like the vehicle moved to a different dealer, you will be asked to cover the difference in cost at the time of the move.

If the vehicle cannot be received by the nearest Chevrolet dealer due to scheduling conflicts, the vehicle will be taken to a safe place where it will remain for up to 48 hours until it can be taken to the dealer. If the storage costs exceed the amount authorized, the owner is responsible to pay the difference at the time of service. Contact Roadside Assistance for more information on authorized amounts.

- ***Trip Interruption:** This service is provided if you are prevented from further usage of your vehicle while traveling and it is not possible for the nearest Chevrolet dealership to repair the vehicle the same day, requiring the vehicle to stay at the dealership for a night or more. If this happens, in addition to the previously listed services and prior to confirmation by the dealership, you are entitled to choose one of the following alternatives, within

the limits of existing Roadside Assistance program guidelines. If the costs exceed the amount authorized for these services, you must pay the difference at the time of service.

Roadside Assistance will coordinate hotel accommodations for all vehicle travelers for up to two nights.

A rental car will be provided for up to two days and the vehicle must be returned to its original destination, excluding vehicles with a carrying capacity greater than 3.5 tons.

Complimentary Transportation: If you prefer to continue your trip to the intended destination or return to your place of residence, and the trip requires more than eight hours driving on the road, transportation for the driver and passengers by first class bus or coach commercial airline will be provided to a location chosen by Roadside Assistance, depending on availability at the chosen destination. Restrictions apply based on vehicle specifications.

If you are on the road, taxi service to the nearest bus station or airport will be provided.

- ***Complimentary Transportation for Vehicle Pick Up:** Transportation to pick up your vehicle after repairs are complete. Once the dealer has reported that the vehicle has been repaired, Roadside Assistance will provide bus or commercial airline one-way service (subject to availability) for the person designated by you to collect your vehicle at the dealership's location if you or the designated person are not in the same town or city as the dealership.

*These services are not provided for U.S. or Canada residents. All services provided in the U.S. and Canada are at the owner's expense and will be reimbursed by Roadside Assistance.

Services Not Included in Roadside Assistance

Roadside Assistance does not cover or reimburse services for the following:

- Events caused by fraud or bad faith by the driver.
- Vehicle immobilization situations due to a major force or unforeseen circumstances, such as natural phenomena of an extraordinary nature, earthquakes, volcanic eruptions, and other cyclonic storms.

- Vehicle immobilization situations arising from car crashes caused by the driver of the vehicle or third parties. This means any occurrence that causes physical injury to the occupants and/or the vehicle caused by external forces.
- Acts of terrorism, riot or uproar, armed forces or police actions which prevent timely delivery of assistance services.
- Food service, beverages, telephone calls, or other extra costs. Accommodation costs apply only to Mexico per the terms and conditions of the Roadside Assistance program.
- Any damage to the vehicle without intent, derived from the services provided.
- Cost of towing a trailer when choosing a Chevrolet dealer that is nearest to the temporary storage facility for the disabled vehicle.
- Cost of all maneuvers required to access the vehicle when it is not available to be towed.
- Cost of fuel provided.

Routine vehicle repair costs are not covered by the Roadside Assistance program. For more information, see your new vehicle warranty.

Contacting Roadside Assistance

Roadside Assistance services are of no cost to you and available 24 hours a day, 365 days a year. Costs are only incurred in situations that exceed the limits of the program, some of which are listed previously in this section.

To contact Roadside Assistance by phone, use the following numbers:

Mexico

800-466-0811

800-508-0000

United States

1-800-222-1020

Canada

1-800-268-6800

E-mail

asistencia.gmmexico@gm.com

Chevrolet reserves the right to make any changes or discontinue the Roadside Assistance program at any time without notification.

Radio Frequency Statement

This vehicle has systems that operate on a radio frequency that complies with NOM-EM-016-SCFI-2015 or NOM-208-SCFI-2016 and National Radio Frequency Allocation Chart.

Operation of this equipment is subject to the following two conditions:

1. This equipment or device may not cause harmful interference.
2. This equipment or device must accept any interference received, including interference that may cause undesired operation.

Reporting Safety Defects

Reporting Safety Defects to General Motors

In addition to notifying NHTSA (or Transport Canada) in a situation like this, notify General Motors.

In the U.S., call 1-800-222-1020, or write:

Chevrolet Motor Division
Chevrolet Customer Assistance Center
P.O. Box 33170
Detroit, MI 48232-5170

In Canada, call 1-800-263-3777 (English) or 1-800-263-7854 (French), or write:

General Motors of Canada Company
Customer Care Centre, Mail Code: CA1-163-005
1908 Colonel Sam Drive
Oshawa, Ontario L1H 8P7

In Mexico, call 800-466-0811 or 800-508-0000.

In other Central America and Caribbean Countries, call 52-555-901-2369.

Vehicle Data Recording and Privacy

Event Data Recorders

This vehicle is equipped with an Event Data Recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time. The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;

- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

OnStar

OnStar Overview

OnStar Overview 198

OnStar Services

Emergency 199

Security 199

OnStar Additional Information

OnStar Additional Information 199

OnStar Overview

If equipped, this vehicle has a comprehensive, in-vehicle system that can connect to an OnStar Advisor for Emergency, Security, Navigation, Connectivity, and Diagnostics Services.



 Voice Command Button

 Blue OnStar Button

 Emergency Button


This manual describes OnStar's functions, which may or may not be on the vehicle because of optional equipment that was not purchased on the vehicle, model variants, country specifications, or features/applications that may not be available in your region, or changes subsequent to the printing of this owner's manual.

Refer to the purchase documentation relating to your specific vehicle to confirm the functions.



The OnStar system is not available in any of the countries of the Central America and Caribbean region.

The OnStar system status light is next to the OnStar buttons. If the status light is:

- Solid Green: System is ready.
- Flashing Green: On a call.
- Red: Indicates a problem.

Press  or call 800-083-4994 to speak to an Advisor.

Functionality of the Voice Command button may vary by vehicle and region.

Press  to open the OnStar app on the infotainment display. Or, press  to give OnStar Turn-by-Turn Navigation voice commands. This requires the Safety Plan, Unlimited Access Plan, or Unlimited Data Plan.

Press  to connect to an Advisor to:

- Verify account information or update contact information.
- Get driving directions. Requires the Safety Plan, Unlimited Access Plan, or Unlimited Data Plan.

- Receive an On-Demand Diagnostics check of the vehicle's key operating systems.
- Receive Roadside Assistance.

Press **SOS** to get a priority connection to an Advisor available 24/7 to:

- Get help in an emergency.
- Be a Good Citizen and contact an Advisor to help someone else in need.
- Get assistance in severe weather or other crisis situations and find evacuation routes.

OnStar Services

Emergency

With Automatic Crash Response, in many crashes, built-in sensors can automatically alert a specially trained OnStar Advisor who is immediately connected to the vehicle to help.

Press **SOS** for a priority connection to an OnStar Advisor who can contact emergency service providers, direct them to your exact location, and relay important information.

With OnStar Crisis Assist, specially trained Advisors are available 24 hours a day, 7 days a week, to provide a central point of contact, assistance, and information during a crisis.

Security

If equipped, OnStar provides these services:

- With Roadside Assistance, Advisors can locate a nearby service provider to help with a flat tire, a battery jump, or an empty gas tank.
- With Stolen Vehicle Assistance, OnStar advisors can use GPS to pinpoint the vehicle and help authorities quickly recover it.
- With Remote Ignition Block if equipped, OnStar can block the engine from being started.
- With Stolen Vehicle Slowdown, if equipped, OnStar can work with law enforcement to gradually slow the vehicle down.

OnStar Additional Information

Transferring Service

Press **On** to request account transfer eligibility information. The Advisor can cancel or change account information.

Reactivation for Subsequent Owners

Press **On** and follow the prompts to speak to an Advisor as soon as possible. The Advisor will update vehicle records and will explain OnStar or connected service offers and options.

How OnStar Service Works

Automatic Crash Response, Emergency Services, Crisis Assist, Stolen Vehicle Assistance, Vehicle Diagnostics, Remote Services, and Roadside Assistance are available on most vehicles. Not all OnStar services are available everywhere or on all vehicles. For more information, a full description of OnStar services, system limitations, and OnStar terms and conditions, see www.onstar.com.mx.

OnStar or connected services cannot work unless your vehicle is in a place where OnStar has an agreement with a wireless service provider for service in that area, and the wireless service provider has coverage, network capacity, reception, and technology compatible with OnStar or connected services. Service involving location information about the vehicle cannot work unless GPS signals are available, unobstructed, and compatible with the OnStar hardware. OnStar or connected services may not work if the OnStar equipment

is not properly installed or it has not been properly maintained. If equipment or software is added, connected, or modified, OnStar or connected services may not work. Other problems beyond the control of OnStar — such as hills, tall buildings, tunnels, weather, electrical system design and architecture of the vehicle, damage to the vehicle in a crash, or wireless phone network congestion or jamming — may prevent service.

See *Radio Frequency Statement* ⇨ 196.

This service is provided through a public telecommunications network duly authorized in Mexican Republic.

OnStar.com.mx

The website provides access to account information, allows management of the OnStar service plan, and enables viewing of videos of each service. Get service plan pricing and sign up for OnStar Vehicle Diagnostics. Click on the “My Account” tab on the home page. The website navigation and services provided may vary by country.


OnStar Personal Identification Number (NIP)

A NIP is needed to access some OnStar services, like Remote Door Unlock and Stolen Vehicle Assistance. You will be prompted to change the NIP the first time when speaking with an Advisor. To change the OnStar NIP, call OnStar and provide the Advisor with the current number.

Warranty


OnStar equipment may be warranted as part of the New Vehicle Limited Warranty. The manufacturer of the vehicle furnishes detailed warranty information.

Languages

The vehicle can be programmed to respond in multiple languages. Press  and ask for an Advisor. Advisors are available in English and Spanish.

Potential Issues

OnStar cannot perform Remote Door Unlock or Stolen Vehicle Assistance after the vehicle has been off continuously for an extended period of time without an ignition cycle. To find out the duration of time that applies for the

vehicle, contact an OnStar Advisor by pressing  or calling 800-083-4994. If the vehicle has not been started for an extended period of time, OnStar can contact Roadside Assistance or a locksmith to help gain access to the vehicle.


Global Positioning System (GPS)

- Obstruction of the GPS can occur in a large city with tall buildings; in parking garages; around airports; in tunnels, and underpasses; or in an area with very dense trees. If GPS signals are not available, the OnStar system should still operate to call OnStar. However, OnStar could have difficulty identifying the exact location.
- In emergency situations, OnStar can use the last stored GPS location to send to emergency responders.
- A temporary loss of GPS can cause loss of the ability to send a Turn-by-Turn Navigation route. The Advisor may give a verbal route or may ask for a call back after the vehicle is driven into an open area.

Cellular and GPS Antennas

Cellular reception is required for OnStar to send remote signals to the vehicle. Do not place items over or near the antenna to prevent blocking cellular and GPS signal reception.

Unable to Connect to OnStar Message

If there is limited cellular coverage or the cellular network has reached maximum capacity, this message may come on. Press  to try the call again or try again after driving a few kilometers into another cellular area.

Vehicle and Power Issues

OnStar services require a vehicle electrical system, wireless service, and GPS satellite technologies to be available and operating for features to function properly. These systems may not operate if the battery is discharged or disconnected.

Add-on Electrical Equipment

The OnStar system is integrated into the electrical architecture of the vehicle. Do not add any electrical equipment. Added electrical equipment may interfere with the operation of the OnStar system and cause it to not operate.

Vehicle Software Updates

OnStar or GM may remotely deliver software updates or changes to the vehicle without further notice or consent. These updates or changes may enhance or maintain safety, security, or the operation of the vehicle or the vehicle systems. Software updates or changes may affect or erase data or settings that are stored in the vehicle, such as saved navigation destinations, or pre-set radio stations. Neither OnStar nor GM is responsible for any affected or erased data or settings. These updates or changes may also collect personal information. Such collection is described in the OnStar privacy statement or separately disclosed at the time of installation. These updates or changes may also cause a system to automatically communicate with GM servers to collect information about vehicle system status, identify whether updates or changes are available, or deliver updates or changes. An active OnStar agreement constitutes consent to these software updates or changes and agreement that either OnStar or GM may remotely deliver them to the vehicle.

Privacy

The responsible of the treatment of your personnel data will be OnStar de México, S. de R.L. de C.V., with head office at Ejército Nacional No. 843, Colonia Granada, Delegación Miguel Hidalgo, zip code 11520, Federal District, Mexico. The personal data we may collect includes: your name, address, email address, telephone number (cell and/or landline) your RFC (Registro Federal de Contribuyentes [taxpayer ID]) and your personal identification number (NIP) for OnStar services.

We may also collect information from your vehicle including: your Vehicle identification number (VIN): the make, model and year of your vehicle; the Vehicle license plate number; information about your selling or preferred GM distributor; information about the operation of the vehicle (including diagnostic trouble codes, oil life remaining, engine air filter life, tire pressure, fuel economy and odometer readings); information about collisions involving the vehicle, the direction from which it was hit, which airbags have deployed and seat belt usage; information about the use of the vehicle and its features, such as whether a mobile device has been paired with your vehicle; and in limited

circumstances, the geographical location and approximate GPS (global positioning satellite) speed of the vehicle.

Your personal and vehicle data will be treated for the following purposes: (i) to provide you with services you have requested (automatic crash response, remote and emergency services, assistance if your vehicle is stolen, step-by-step directions); (ii) to keep our records up to date so that we are able to answer your inquiries; (iii) for troubleshooting and research purposes; (iv) to protect the safety of you or others; (v) to prevent fraud or misuse of the OnStar service; (vi) in the cases set forth by law or the authorities; (vii) to carry out marketing and general promotional activities; (viii) to allow OnStar, General Motors de México, S. de R.L. de C.V., General Motors LLC and all subsidiaries, affiliates or any company of the same corporate group to which OnStar belongs, to carry out advertising activities (offering you products, services and information); and (ix) for business prospecting and statistical market analysis.

It is important to mention that purposes (i), (ii), (iii), (iv), (v) and (vi), give rise to and are necessary to maintain our legal relationship. On the other hand, purposes

(vii), (viii) and (ix), do not give rise to and are not necessary to maintain our legal relationship and therefore for these purposes we make available a mechanism set up at our Customer Service Center in the telephone: 800-083-4994 or via your e-mail: protecciondedatos@gm.com, so that, if applicable, you can indicate your refusal to have your personal data being processed for the purposes indicated in purposes (vii), (viii) and (ix).

In order to know the integral version of this privacy notice, please visit our web page www.onstar.com.mx.

OnStar - Software Acknowledgements

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <https://opensource.lge.com>. In addition to the source code, all referred license terms, warranty disclaimers, and copyright notices are available for download. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

*Provided through LG Electronics Inc., who is solely responsible for provisions of related OSS compliance.


Connected Services

Connected Services


Navigation	203
Connectivity	203
Diagnostics	204

Connected Services

Navigation

Press  to receive Turn-by-Turn directions. The OnStar mapping database is continuously updated. For coverage maps, see www.onstar.com.mx.

Turn-by-Turn Navigation

1. Press  to connect to an Advisor.
2. Request directions to be downloaded to the vehicle.
3. Follow the voice-guided commands.



Connectivity

The following services help with staying connected.

For coverage maps, see www.onstar.com.mx.

Wi-Fi Hotspot (If Equipped)

The vehicle may have a built-in Wi-Fi hotspot that provides access to the Internet and web content at 4G speed. Up to seven mobile devices can be connected. A data plan is required. Use the in-vehicle controls only when it is safe to do so.

1. To retrieve Wi-Fi hotspot information, press  to open the OnStar app on the infotainment display, then select Wi-Fi Hotspot. On some vehicles, touch Wi-Fi or Wi-Fi Settings on the screen.
2. The Wi-Fi settings will display the Wi-Fi hotspot name (SSID), password, and on some vehicles, the connection type (no Internet connection, 3G, 4G), and signal quality (poor, good, excellent).
3. To change the SSID or password, press  or call 800-083-4994 to connect with an Advisor. On some vehicles, the SSID and password can be changed in the Wi-Fi Hotspot menu.

After initial set-up, your vehicle's Wi-Fi hotspot will connect automatically to your mobile devices. Manage data usage by turning Wi-Fi on or off on your mobile device, using the myChevrolet mobile app, or by contacting an OnStar Advisor. On some vehicles, Wi-Fi can also be managed from the Wi-Fi Hotspot menu.

myChevrolet Mobile App (If Available)


Download the myChevrolet mobile app to compatible Apple and Android smartphones. Chevrolet users can access the following services from a smartphone:

- Remotely start/stop the vehicle, if factory-equipped.
- Lock/unlock doors, if equipped with automatic locks.
- Activate the horn and lamps.
- Check the vehicle's fuel level, oil life, or tire pressure, if factory-equipped with the Tire Pressure Monitor System.
- Send destinations to the vehicle.
- Locate the vehicle on a map.
- Turn the vehicle's Wi-Fi hotspot on/off, manage settings, and monitor data consumption, if equipped.
- Locate a dealer and schedule service.
- Request roadside assistance.
- Set a parking reminder with pin drop, take a photo, make a note, and set a timer.
- Connect with Chevrolet on social media.

Features are subject to change. For myChevrolet mobile app information and compatibility, see my.chevrolet.com.mx.

An active OnStar or connected service plan may be required. A compatible device, factory-installed remote start, and power locks are required. Data rates apply. See www.onstar.com.mx for details and system limitations.

Diagnostics

OnStar can perform a monthly check of your vehicle's key operating systems, including the engine, transmission, antilock brakes, and other major vehicle systems through a monthly diagnostics report. OnStar can also monitor tire pressure, if the vehicle is equipped with the Tire Pressure Monitor System. If an On-Demand Diagnostics check is needed, press  and an Advisor can run a check.

Index

A

Accessories and Modifications..... 138
 Accessory Power..... 112
 Additional
 OnStar Information..... 199
 Add-On Electrical Equipment..... 136
 Adjustments
 Seat, Initial Drive..... 19
 Air
 Cleaner/Filter, Engine..... 146
 Conditioning..... 96
 Conditioning Regular Operation..... 99
 Intake..... 99
 Vents..... 98
 Airbags
 Curtain..... 32
 Front..... 30
 On-Off Switch..... 33
 Passenger Status Indicator..... 58
 Readiness Light..... 58
 Side..... 31
 Airbag System..... 28
 Air Conditioning..... 93
 Alarm
 Vehicle Security..... 9
 Alert
 Side Blind Spot (SBSA)..... 133
 AM-FM Radio..... 77

Antenna
 Fixed Mast..... 79
 Multi-band..... 79
 Antilock Brake System (ABS)..... 118
 Warning Light..... 59
 Appearance Care
 Exterior..... 180
 Interior..... 181
 Apple CarPlay and Android Auto..... 88
 Assistance Program, Roadside..... 194
 Assistance Systems
 Parking and Backing..... 127
 Audio
 Bluetooth..... 82
 Automatic
 Climate Control System..... 96
 Door Locks..... 7
 Emergency Braking (AEB)..... 132
 Headlamp System..... 70
 Transmission..... 115
 Transmission Fluid..... 145
 Automatic Transmission
 Interruption of Power Supply..... 116
 Manual Mode..... 116
 Avoiding Untrusted Media Devices..... 79

B

Battery..... 152
 Disconnect Switch..... 139

Jump Starting.....	178
Voltage and Charging Messages.....	66
Blade Replacement, Wiper.....	153
Bluetooth	
Overview.....	83, 84
Bluetooth Audio.....	82
Brake	
Fluid.....	151
System Warning Light.....	59
Brakes.....	118, 151
Antilock.....	118
Brake Assist.....	120
Parking Brake.....	119
Braking.....	103
Automatic Emergency (AEB).....	132
Break-In, New Vehicle.....	109
Bulb Replacement.....	154
Halogen Bulbs.....	155
Headlamps.....	155
Instrument Panel Illumination.....	160
Interior Lamps.....	159
License Plate Lamps.....	159
Side Turn Signal Lamps.....	158
Taillamps.....	156

C

Capacities and Specifications.....	188
Carbon Monoxide	
Engine Exhaust.....	114
Liftgate.....	8
Cargo	
Cover.....	45
Catalytic Converter.....	114
Caution, Danger, and Warning.....	2
Center Console	
Storage.....	45
Charging	
System Light.....	58
Wireless.....	52
Check Engine Light (Malfunction Indicator).....	59
Child Restraint Installation Locations.....	36
Child Restraints	
Installation Locations.....	36
ISOFIX.....	39
Systems.....	34
Child Restraint Systems	
Top Tether.....	43
Child Safety Locks.....	8
Cleaning	
Exterior Care.....	180
Interior Care.....	181
Climate Control Systems.....	93

Air Conditioning.....	93
Automatic.....	96
Heating.....	93
Lock.....	51
Cluster, Instrument.....	54
Compartments	
Storage.....	44
Connected Services	
Connectivity.....	203
Diagnostics.....	204
Navigation.....	203
Connectivity	
Connected Services.....	203
Control	
Traction and Electronic Stability.....	121
Control of a Vehicle.....	102
Controls	
Steering Wheel.....	75
Convex Mirrors.....	12
Coolant	
Engine Temperature Warning Light.....	61
Cooling.....	93, 96
Cooling System.....	146
Cover	
Cargo.....	45
Covers	
Wheel.....	173
Cruise Control.....	122
Light.....	63

Cupholders..... 44
 Curtain Airbag System..... 32
 Customer Assistance
 Offices..... 193
 Customer Satisfaction Procedure..... 192

D

Danger, Warning, and Caution..... 2
 Data Recorders, Event..... 197
 Daytime Running Lamps (DRL)..... 70
 Defensive Driving..... 101
 Diagnostics
 Connected Services..... 204
 Door
 Ajar Light..... 64
 Locks..... 6
 Power Locks..... 7
 Drive Belt Routing, Engine..... 189
 Driver
 Assistance Systems..... 125
 Information Center (DIC)..... 64
 Driving
 Better Fuel Economy..... 101
 Defensive..... 101
 Environment..... 101
 Hill and Mountain Roads..... 108
 If the Vehicle is Stuck..... 109
 Off-Road..... 105

Off-Road Recovery..... 105
 Wet Roads..... 106

E

Electrical
 Equipment, Add-On..... 136
 Electrical System
 Engine Compartment Fuse Block..... 161
 Fuses..... 160
 Instrument Panel Fuse Block..... 165
 Electronic Stability Control (ESC) Off
 Light..... 61
 Emergency
 OnStar..... 199
 Engine
 Air Cleaner/Filter..... 146
 Check Light (Malfunction Indicator)..... 59
 Compartment Overview..... 142
 Coolant Temperature Warning Light..... 61
 Cooling System..... 146
 Drive Belt Routing..... 189
 Exhaust..... 114
 Fan..... 149
 Oil Life System..... 145
 Oil Pressure Light..... 62
 Overheating..... 148
 Running While Parked..... 114
 Starting..... 110
 Entry Lighting..... 73

Event Data Recorders..... 197
 Exit Lighting..... 73
 Exterior
 Lamp Controls..... 69
 Lamps Off Reminder..... 69

F

Fan
 Engine..... 149
 Filter
 Engine Air Cleaner..... 146
 Fixed Mast Antenna..... 79
 Flashers, Hazard Warning..... 71
 Flash-to-Pass..... 70
 Fluid
 Automatic Transmission..... 145
 Brakes..... 151
 Washer..... 150
 Folding Mirrors..... 12
 Follow Distance Indicator Light..... 60
 Forward
 Collision Alert (FCA) System..... 130
 Frequency Statement
 Radio..... 196
 Front Airbag System..... 30
 Front Seat Position Seats
 Adjustment..... 19
 Front Seats
 Adjustment..... 20

Fuel	
Recommended.....	134
Additives.....	134
Economy, Driving for Better.....	101
Filling the Tank.....	135
Gauge.....	56
Low Fuel Warning Light.....	63
Fuses.....	160
Engine Compartment Fuse Block.....	161
Instrument Panel Fuse Block.....	165

G

Gauges	
Fuel.....	56
Odometer.....	56
Speedometer.....	56
Tachometer.....	56
Trip Odometer.....	56
Turn Signal.....	57
Warning Lights and Indicators.....	53

General Information	
Vehicle Care.....	138
Glove Box.....	44

H

Halogen Bulbs.....	155
Hazard Warning Flashers.....	71
Headlamps.....	155
Automatic.....	70

Bulb Replacement.....	154
Daytime Running Lamps (DRL).....	70
Flash-to-Pass.....	70
High/Low Beam Changer.....	69
High-Beam On Light.....	63
Lamps On Reminder.....	63
Leveling Control.....	70
Head Restraints.....	18

Heated	
Rear Window.....	16
Heating.....	93, 96
High-Beam On Light.....	63
Hill and Mountain Roads.....	108
Hill Start Assist (HSA).....	120
Hood.....	140
Hood Ajar Light.....	63
Horn.....	49
How to Wear Seat Belts Properly.....	23
HVAC.....	93, 96

I

Identification Labels.....	187
Indicator	
Vehicle Ahead.....	60
Indicators	
Warning Lights and Gauges.....	53
Inspection	
Multi-Point Vehicle.....	184
Instrument Cluster.....	54

Instrument Panel Illumination.....	160
Interior	
Lamp Controls.....	72
Rearview Mirrors.....	13
Interruption of Power Supply.....	116
Introduction.....	1, 74
ISOFIX Child Restraint Systems.....	39

J

Jump	
Starting.....	178

K

Keyless Entry	
Remote (RKE) System Operation.....	4
Keys.....	3

L

Lamps	
Daytime Running (DRL).....	70
Exterior Controls.....	69
Exterior Lamps Off Reminder.....	69
Flash-to-Pass.....	70
High/Low Beam Changer.....	69
Interior.....	159
Interior Controls.....	72
License Plate.....	159
Malfunction Indicator (Check Engine).....	59
On Reminder.....	63

Side Turn Signal..... 158
 Taillamps..... 156
 Lap-Shoulder Belt..... 25
 LED Lighting..... 155
 Leveling Control
 Headlamp..... 70
 Liftgate..... 8
 Lifting the Vehicle, Tires..... 139
 Lighting
 Entry..... 73
 Exit..... 73
 LED..... 155
 Lights
 Airbag Readiness..... 58
 Antilock Brake System (ABS) Warning... 59
 Brake System Warning..... 59
 Charging System..... 58
 Check Engine (Malfunction Indicator).... 59
 Cruise Control Light..... 63
 Door Ajar..... 64
 Electronic Stability Control (ESC), Off.... 61
 Engine Coolant Temperature Warning... 61
 Engine Oil Pressure..... 62
 Follow Distance Indicator..... 60
 Gauges and Indicators..... 53
 High-Beam On..... 63
 Hood Ajar..... 63
 Low Fuel Warning..... 63
 Operate Pedal..... 60

Pre-Heat..... 62
 Seat Belt Reminders..... 57
 Security..... 63
 Service Vehicle Soon..... 59
 Tire Pressure..... 62
 Traction Control System (TCS)/
 Electronic Stability Control Light..... 61
 Traction Off..... 60
 Trunk Ajar..... 64
 Warning, Power Steering..... 60
 Locks
 Automatic Door..... 7
 Door..... 6
 Power Door..... 7
 Safety..... 8
 Low Fuel Warning Light..... 63

M

Maintenance
 Air Conditioning Regular Operation..... 99
 Maintenance Schedule..... 183
 Recommended Fluids and Lubricants... 186
 Malfunction Indicator Lamp..... 59
 Manual
 Mode..... 116
 Transmission..... 117
 Transmission Fluid..... 146
 Media
 Avoiding Untrusted Devices..... 79

Messages
 Battery Voltage and Charging..... 66
 Vehicle..... 66
 Mirrors
 Automatic Dimming Rearview..... 13
 Convex..... 12
 Folding..... 12
 Interior Rearview..... 13
 Manual Rearview..... 13
 Power..... 12
 Monitor System, Tire Pressure..... 169
 Multi-band Antenna..... 79
 Multi-Point Vehicle Inspection (MPVI)..... 184

N

Navigation
 Connected Services..... 203
 New Vehicle Break-In..... 109

O

Odometer..... 56
 Trip..... 56
 Off-Road
 Driving..... 105
 Recovery..... 105
 Oil
 Engine..... 143
 Engine Oil Life System..... 145
 Pressure Light..... 62

Online Owner Center.....	193
OnStar	
Additional Information.....	199
Overview.....	198
OnStar Emergency.....	199
OnStar Security.....	199
Operate Pedal Light.....	60
Outlets	
Power.....	51
Overheating, Engine.....	148
Overview.....	75

P

Park	
Assist.....	127
Shifting Into.....	112
Shifting Out of.....	113
Parking	
Brake.....	119
Over Things That Burn.....	114
Parking or Backing	
Assistance Systems.....	127
Passenger	
Airbag Status Indicator.....	58
Personalization	
Vehicle.....	67
Phone	
Apple CarPlay and Android Auto.....	88
Bluetooth.....	83, 84

Port	
USB.....	79
Power	
Door Locks.....	7
Mirrors.....	12
Outlets.....	51
Retained Accessory (RAP).....	112
Steering Warning Lights.....	60
Windows.....	14
Pregnancy, Using Seat Belts.....	27
Pre-Heat Light.....	62
Pressure	
Tire.....	191

R

Radiator.....	146
Radio	
AM-FM.....	77
Frequency Statement.....	196
Reception.....	79
Rear	
Heated Window.....	16
Seats.....	22
Window Washer/Wiper.....	51
Rearview Mirrors.....	13
Automatic Dimming.....	13
Reclining Seatbacks.....	21
Recommended	
Fuel.....	134

Recommended Fluids and Lubricants.....	186
Remote	
Keyless Entry (RKE) System.....	4
Keyless Entry (RKE) System Operation.....	4
Replacing	
Seat Belt System Parts after a Crash.....	28
Reporting Safety Defects	
General Motors.....	196
Retained Accessory Power (RAP).....	112
Roads	
Driving, Wet.....	106
Roadside Assistance Program.....	194
Roof	
Rack System.....	46
Sunroof.....	16
Rotation, Tires.....	172
Routing, Engine Drive Belt.....	189
Running the Vehicle While Parked.....	114

S

Safety	
Locks.....	8
Safety Defects Reporting	
General Motors.....	196
Safety System Check.....	27
Seat Belts.....	23
Care.....	28
Child Restraints.....	36
How to Wear Seat Belts Properly.....	23

Lap-Shoulder Belt.....	25	Specifications and Capacities.....	188	Forward Collision Alert (FCA).....	130
Reminders.....	57	Speed		Roof Rack.....	46
Replacing after a Crash.....	28	Limiter.....	124		
Use During Pregnancy.....	27	Speedometer.....	56	T	
Seats		Start Assist, Hill.....	120	Tachometer.....	56
Adjustment, Front.....	20	Starting the Engine.....	110	Taillamps.....	156
Head Restraints.....	18	Steering.....	103	Technical Data	
Position, Front.....	19	Power, Warning Lights.....	60	Tire Information.....	190
Rear.....	22	Wheel Adjustment.....	49	Tire Pressure.....	191
Reclining Seatbacks.....	21	Wheel Controls.....	49	Theft-Deterrent Systems.....	10, 11
Security		Steering Wheel Controls.....	75	Time.....	51
Light.....	63	Storage		Tire and Wheels	
OnStar.....	199	Center Console.....	45	Different Types.....	173
Vehicle.....	9	Compartments.....	44	Tire Information.....	190
Vehicle Alarm.....	9	Cupholders.....	44	Tire Pressure.....	191
Service	99	Glove Box.....	44	Tires	
Accessories and Modifications.....	138	Roof Rack System.....	46	Designations.....	169
Climate Control System.....	93	Vehicle.....	139	Inspection.....	171
Doing Your Own Work.....	140	Storage Areas		Lifting the Vehicle.....	139
Vehicle Soon Light.....	59	Cargo Cover.....	45	Pressure.....	169
Settings	89	Stuck Vehicle.....	109	Pressure Light.....	62
Shifting		Sunroof.....	16	Pressure Monitor Operation.....	170
Into Park.....	112	Sun Visors.....	16	Pressure Monitor System.....	169
Out of Park.....	113	Switch, Battery Disconnect.....	139	Rotation.....	172
Side		Switches		Wheel Replacement.....	174
Blind Spot Alert (SBSA).....	133	Airbag On-Off.....	33	When It Is Time for New Tires.....	173
Side Airbag System.....	31	System		Tires and Wheels.....	168
Side Turn Signal Lamps.....	158	Airbag.....	28	Tools.....	168
Signals, Turn and Lane-Change.....	72	Driver Assistance.....	125	Top Tether Child Restraint Systems.....	43

Towing	
Vehicle.....	179
Traction	
Control System (TCS)/Electronic	
Stability Control Light.....	61
Control/Electronic Stability Control.....	121
Off Light.....	60
Transmission	
Automatic.....	115
Fluid, Automatic.....	145
Fluid, Manual.....	146
Manual.....	117
Tread Depth.....	171
Triangle, Warning.....	46
Trip Odometer.....	56
Trunk Ajar Light.....	64
Turn and Lane-Change Signals.....	72
Turn Signal.....	57

U

USB Port.....	79
Using	
This Manual.....	1
Using the System.....	76

V


Vehicle	
Ahead Indicator.....	60
Alarm System.....	9

Control.....	102
Identification Number (VIN).....	187
Messages.....	66
Personalization.....	67
Security.....	9
Service Soon Light.....	59
Storage.....	139
Towing.....	179
Vehicle Care	
Tire Pressure.....	169
Vehicle Identification	
Labels.....	187
Ventilation, Air.....	98
Visors.....	16

W

Warning	
Brake System Light.....	59
Caution and Danger.....	2
Hazard Flashers.....	71
Lights, Gauges, and Indicators.....	53
Triangle.....	46
Washer Fluid.....	150
Wheel Covers.....	173
Wheels	
Replacement.....	174
Wheels and Tires.....	168
When It Is Time for New Tires.....	173
Windows.....	14

Heated, Rear.....	16
Power.....	14
Windshield	
Wiper/Washer.....	49
Wiper	
Blade Replacement.....	153
Rear Washer.....	51
Wireless Charging.....	52



PART NUMBER. 87828938 A

